

FOTILE

抽油烟机

使用安裝說明書 | EMG7509

如有任何需要，請聯系方太授權的服務中心。本說明書部分圖片為示意圖，僅供參考，若圖片與實物不符，以實物為準。  
WWW.FOTILEGLOBAL.COM


尊敬的用戶，您好！感謝您選購方太公司爲您精心制造的方太系列產品，

使用前請通讀本《使用安裝說明書》（以下簡稱說明書），此說明書將有利于您熟悉油煙機安全訊息、操作和保養維修等，并讓您享受到全新的下廚樂趣。

請您在使用前務必認真閱讀說明書，并遵從說明書要求進行使用。本說明書的操作說明對于維持產品的良好工作狀況十分重要，若因使用不當造成產品故障，您將失去免費保養的權利，任何直接或間接的免費保養申請將不被本公司各地授權的服務中心所接受。同時我們建議您在保養期內及保養期后，如有需要維修時請與方太公司當地授權的服務中心聯系，這對您和我們都是非常重要的。

我們授權的服務中心將爲您提供方太公司專業的零件及技術支援，使您的產品得到優質快捷的維修保障，同時讓您得到最輕鬆細心的服務。

如果您需要服務，您將需要提供產品型號和序列號。

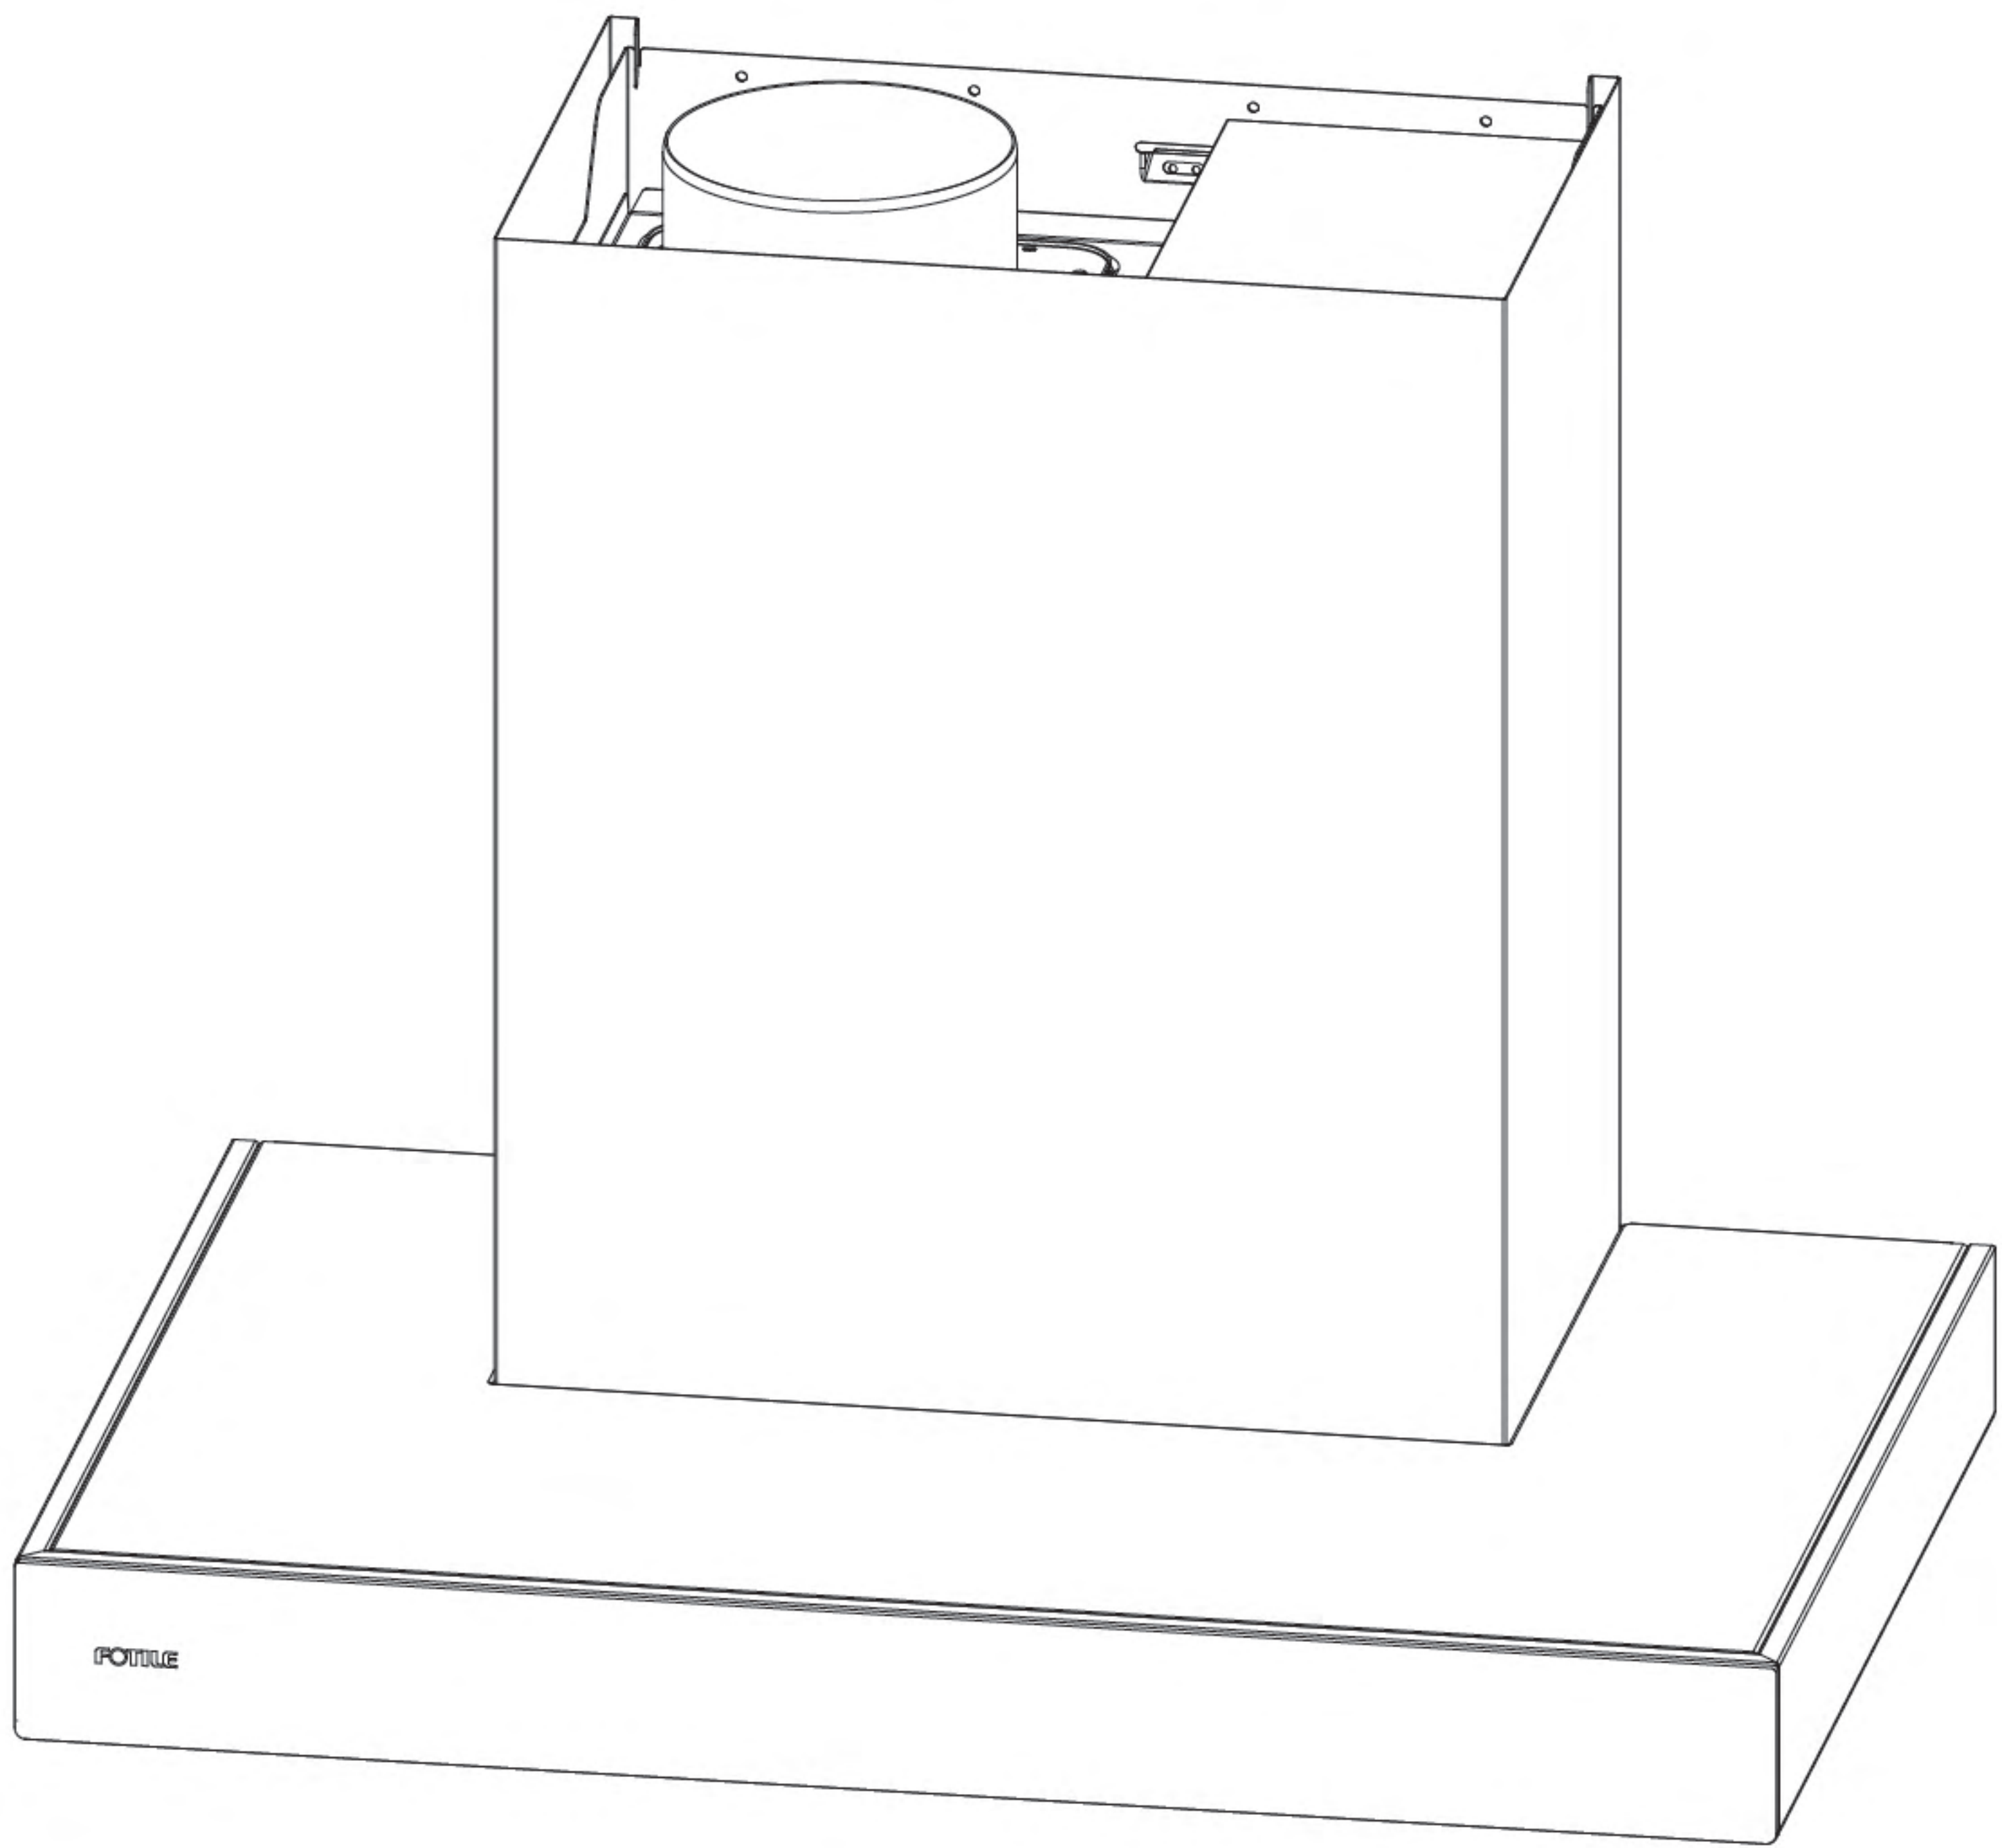

目 錄

警告和安全說明 ----- 1

安裝----- 5

包裝清單 -----5

安裝警告 -----6

產品尺寸圖 -----7

安裝建議 -----7

安裝步驟 -----9

安裝后的測試 ----- 12

清潔保養 ----- 12

使用方法 ----- 14

主要技術參數 ----- 14

操作說明 ----- 14

關於抽油煙機與竈具一體控制的說明 ----- 16

常見故障的識別和處理----- 17

產品特征和參數會在無通知情況下隨時更改，并且可能與此說明書略有不同。  
請訪問我們的官網[www.fotileglobal.com](http://www.fotileglobal.com)，獲取最新資訊。

警告和安全說明

特別說明：

請嚴格按照本說明書規定使用，由于本產品不當使用造成的任何財產損失、人身損害，本公司不承擔責任。

警告：








器具不打算由存在肢體、感官或精神能力缺陷或缺少使用經驗和知識的人（包括兒童）使用，除非有負責他們安全的人對他們進行與器具使用有關的監督或指導。  
此產品不適用於（包括8歲以下兒童）身體、感知或精神能力減弱或缺乏經驗或知識的人群，除非在對其安全負責的人監督或指導如何安全使用此產品的情況下（針對歐盟市場）。  
應照顧好兒童，確保他們不玩耍本器具。  
注意：當使用烹飪器具時，易觸及部件可能會發燙。




- a. 請定期倒去積油；每次使用抽油煙機后，請擦拭抽油煙機外表面。
- b. 爲了更加舒適地使用，請經常對抽油煙機外表面和油杯進行清潔。
- c. 如果不按說明書規定的方法清洗，抽油煙機有起火的危險。




嚴格執行



|                                                                                            |                                                                              |
|--------------------------------------------------------------------------------------------|------------------------------------------------------------------------------|
| <br>接 地 | 插頭必須插在合理安裝并接地的電源插座上，以確保安全。接地線不得與煤氣管、自來水管、避雷針、電話線等連接。接地不良可能會引起觸電或其他事故。        |
|         | 本器具含有僅用于實現功能用途的接地連接。                                                         |
|         | 由于本抽油煙機的安裝程序比較復雜，且重量較重，應由專業安裝維修人員按照說明書進行安裝。未按說明書要求安裝螺釘或固定裝置可能會導致觸電、脫落、起火等危險。 |
|         | 使用此新產品之前請開封檢查此產品是否受損，如果發現此產品有明顯的損壞，請勿安裝使用，請您立即聯系方太授權的服務中心。                   |
|         | 請遵照加熱設備廠家的安全指南，同時要遵照消防等管理部門頒布的安全標準進行。                                        |
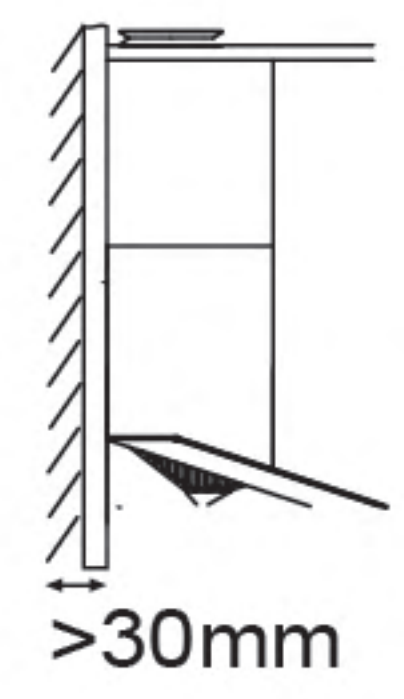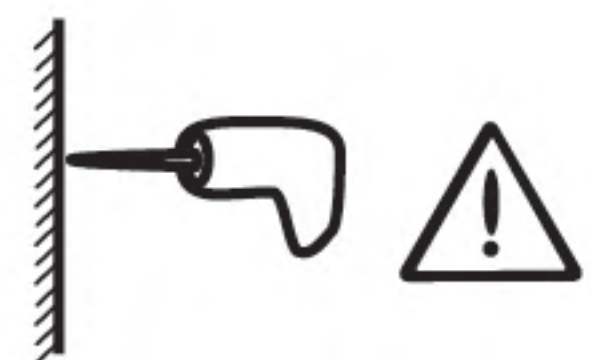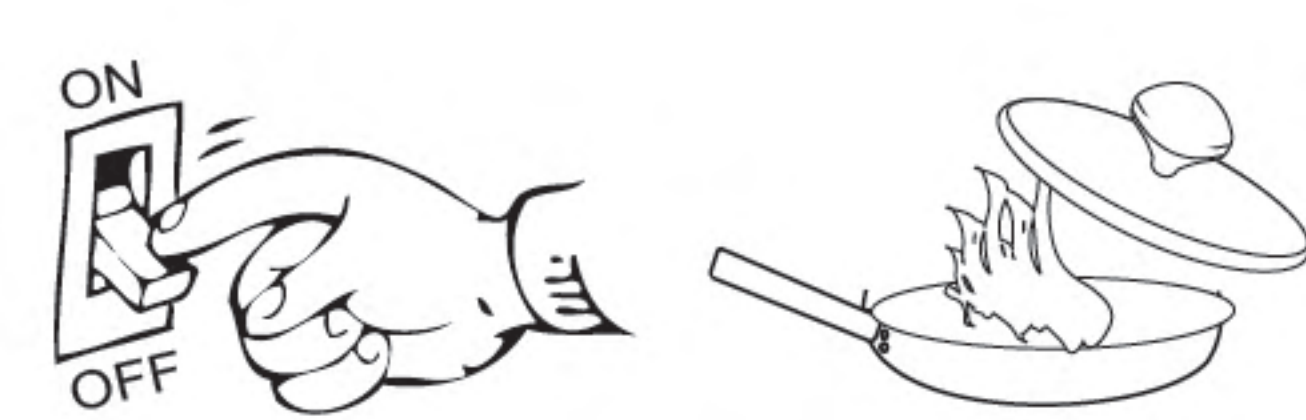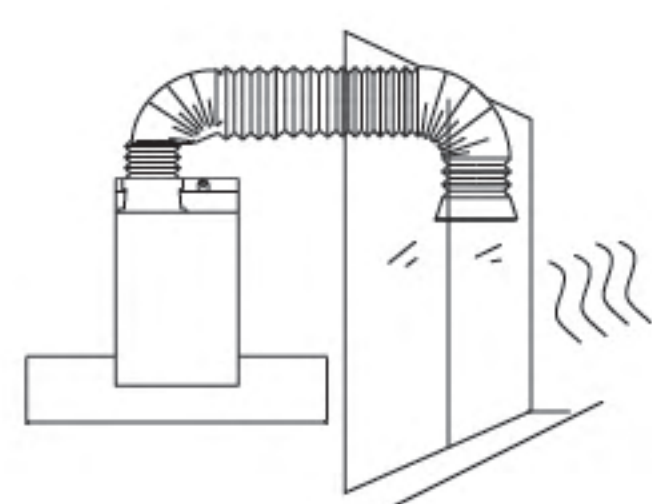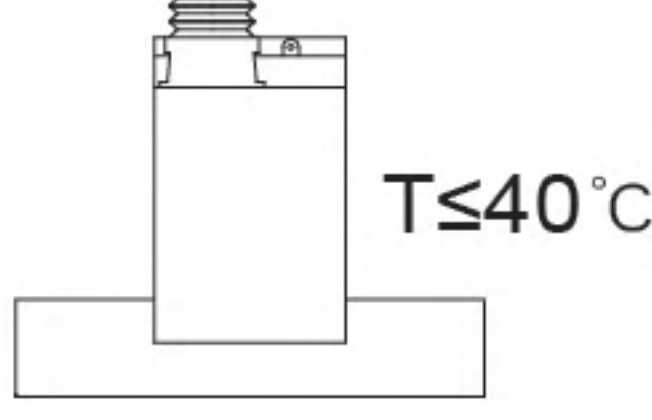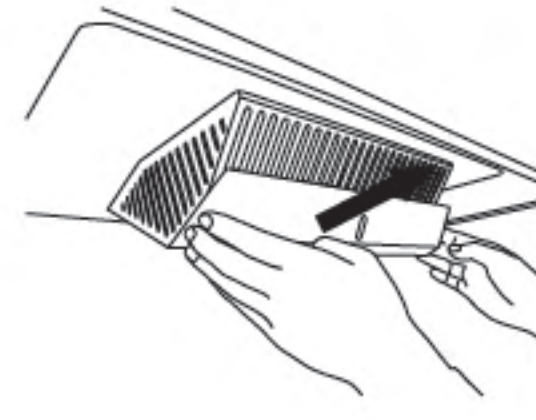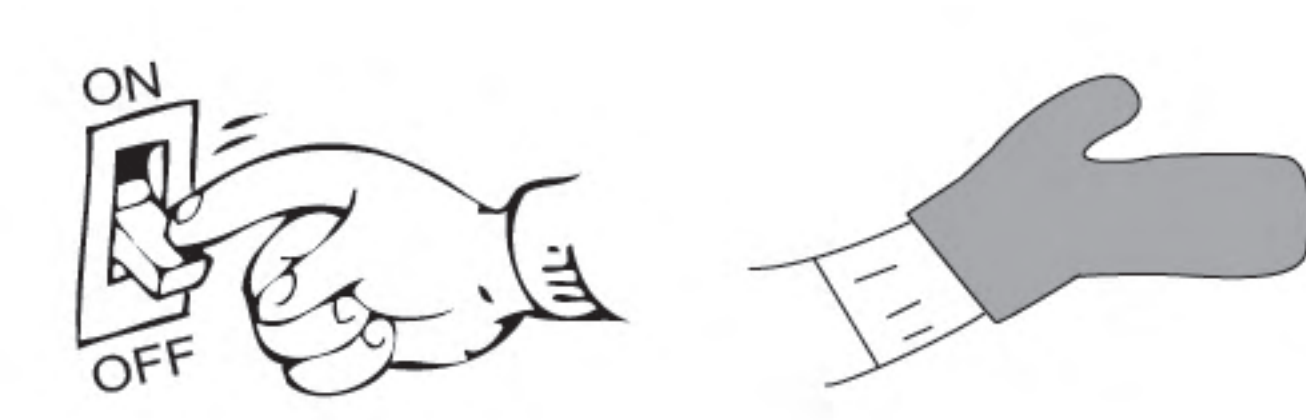
|                                                                                       |                                                                                          |
|---------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
|    | 安裝抽油煙機的牆壁要有足够的支撐强度，對于中空牆壁，中空板實心層的厚度必須大于30mm以上，對于混凝土牆壁可直接打安裝孔。整機必須牢固安裝在牆壁上。               |
|    | 當在牆壁、天花板上進行切割或者鑽孔時，請注意不要損壞電線以及其他隱藏的設備。                                                   |
|    | 本產品僅供家庭日常使用，請不要用于商業用途或在其它特殊環境中使用（例如：室外）；也不能用來排出有危險的或者容易爆炸的物質或者氣體。如您在特殊環境中使用本產品，方太將不承擔責任。 |
|    | 當抽油煙機與燃燒燃氣或其他燃料的器具同時使用時，房間必須通風良好（該條不適用於把氣體排回室內的器具）。                                      |
|   | 油鍋着火時，請立即關閉抽油煙機（抽油煙機的運行會助燃火勢）。采用有效的滅火方法滅火。例如，用金屬的蓋子將明火蓋住，立即關閉燃氣總開關，并使易燃物遠離明火。            |
|  | 出風管必須確保排到室外。爲了避免火灾的發生并保持空氣清新，請將廢氣排到室外。請不要將廢氣排到牆內、閣樓、車庫中（只適用於有出風管的抽油煙機）。                  |
|  | 抽油煙機使用環境的溫度不能超過40℃。                                                                      |
|  | 請按照本說明書規定的方法清洗抽油煙機，否則抽油煙機有起火的危險。                                                         |
|  | 當油杯內的儲油達到油杯容積的三分之二時，請及時清理，防止溢出。油杯中所收集的廢油請勿食用！                                            |
|  | 在移動抽油煙機進行安裝、清潔或者修理前，務必切斷電源，以免觸電；在進行安裝、清潔或修理時，應佩戴防護手套，以防被抽油煙機內金屬板快口傷手。                    |
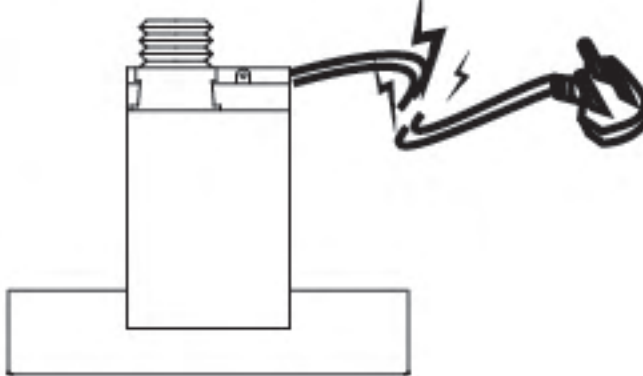
|                                                                                   |                                                                      |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------|
|  | 安裝完成后，插頭應在能够接觸到的位置。抽油煙機若長期不用，請切斷電源。                                  |
|  | 如果電源軟綫損壞，爲了避免危險，必須由制造商、其服務機構或類似的專業人員更換。                              |
|  | 出現異常現象時，關閉抽油煙機電源開關，拔下電源插頭或者切斷總電源，馬上致電方太授權的服務中心。異常狀態下連續運轉易發生觸電、火災等危險。 |
|  | 請不要讓兒童自己單獨使用，或放到嬰兒能够接觸到的地方，否則有可能導致燒傷、觸電或者其他意外傷害。                     |
|  | 請勿讓兒童玩耍塑料薄膜和包裝箱，這可能會產生窒息事故，所以請讓包裝材料遠離兒童，包裝材料不是玩具。孩童應嚴格監管以確保他們不會玩耍產品。 |

⚠ 禁止
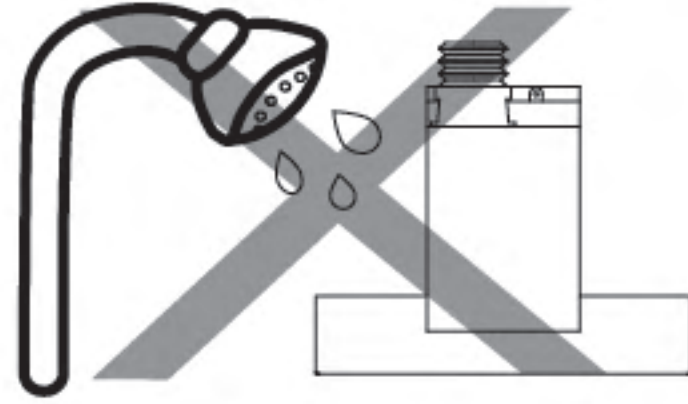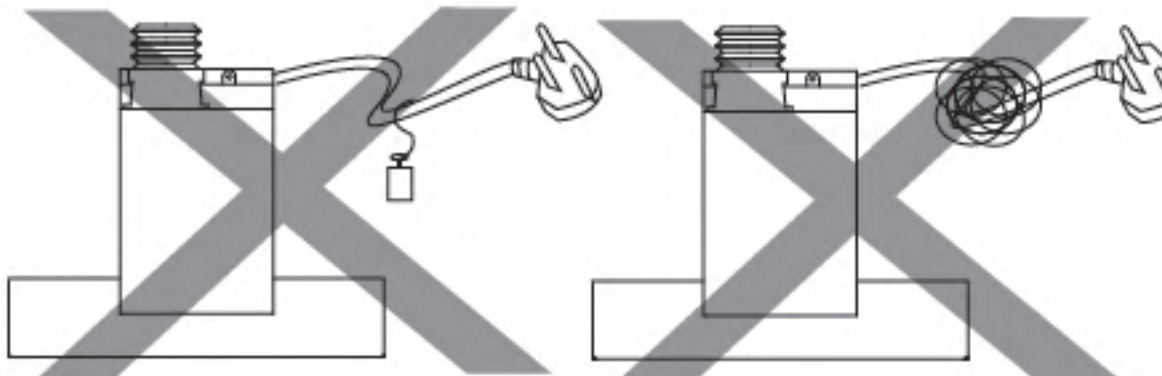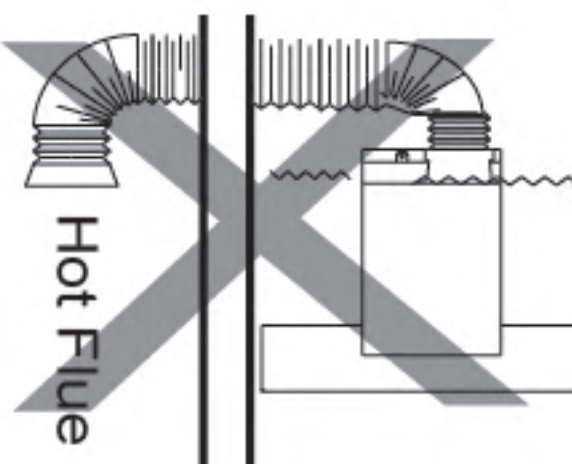
|                                                                                     |                                                                             |
|-------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|
|  | 如果不按本說明書規定的方法清洗抽油煙機，抽油煙機有起火的風險。                                             |
|  | 請不要對電源綫進行改動、拉伸、打結以及施加重物、擠壓等，否則易導致電源綫破損而發生觸電和火災等事故。                          |
|  | 禁止私自改動抽油煙機內部布綫，否則有可能會發生異常動作導致人體受傷。不當修理可能發生觸電、火災等危險。                         |
|  | 器具排出的氣體不應排到用于排出從燃燒燃氣或其他燃料的器具中產生的煙氣的煙道中（該條不適用於把氣體排回室內的器具）。<br>必須執行氣體排放的有關規定。 |
|  | 禁止在沒有鍋具的情況下使用燃氣竈，否則會損害上方的抽油煙機。禁止火焰直接烘烤抽油煙機。                                 |











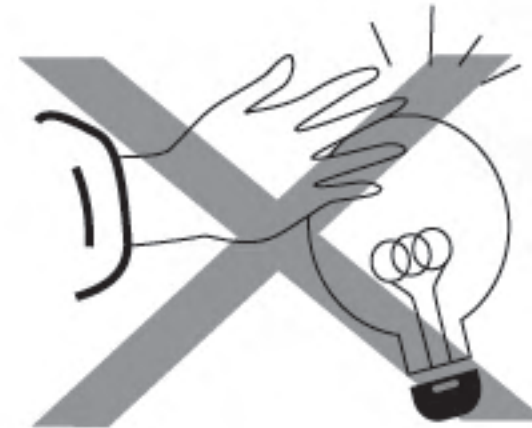
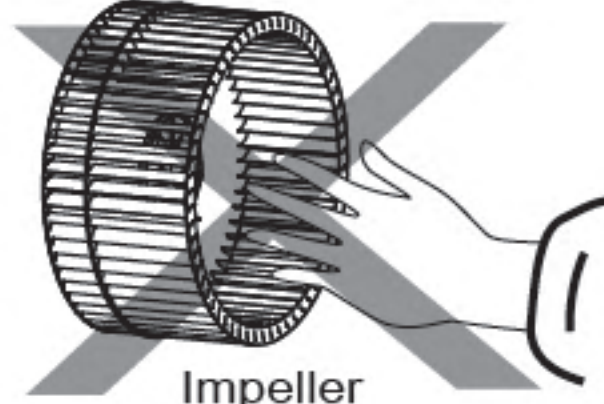
|                                                                                     |                                                                |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------|
|  | 請勿觸摸已經開啓或者剛關閉不久的燈泡，以免燙傷。                                       |
|  | 抽油煙機運行時不要將手或其他物品伸入葉輪中以免造成傷害。                                   |
|  | 嚴禁摩打、開關、接插件等電器零件沾水；禁止用水衝洗抽油煙機。抽油煙機被水淋濕后，請不要使用；如果使用會導致漏電、觸電等事故。 |
|  | 請不要用潮濕的手觸摸電源插頭、電器零件以及操作電源開關，否則易發生觸電事故。                         |



- a. 保養服務須由方太公司授權的服務機構或人員執行。如私自拆機維修，產品將不享受保修。
- b. 爲避免任何可能對產品的損害，請確保實際電壓和頻率與本說明書中闡明的一致。
- c. 當抽油煙機與使用非電能的設備同時使用時，室內負壓不得超過4Pa (4x10-5bar)（針對德國市場）。
- d. 其他燃燒器具產生的燃燒氣體可能由于回流會對安全產生不利影響，這些氣體可能導致一氧化碳中毒，因此在安裝抽油煙機后，應由專業人員測試煙管，以確保燃燒氣體不會回流（針對澳洲市場）。
- e. 本公司產品上使用了鋼化玻璃，玻璃的鋼化機理決定這種玻璃存在極小概率的自爆。一旦發生非使用不當的自爆，本公司承諾免費提供該配件。鋼化玻璃在以下情況，發生破裂的幾率可能會大大提高，請避免發生：例如用炊具或其他硬物敲擊玻璃，特別是敲擊玻璃四個角部；打開油煙機周圍櫥櫃門時撞擊到玻璃；玻璃處于過冷和過熱、冷熱交替嚴重的環境等情況。

安裝

包裝清單
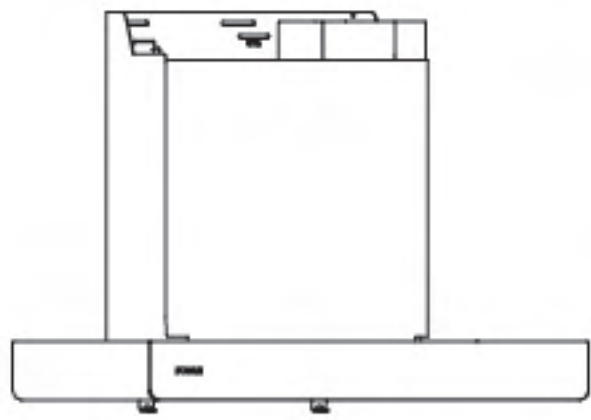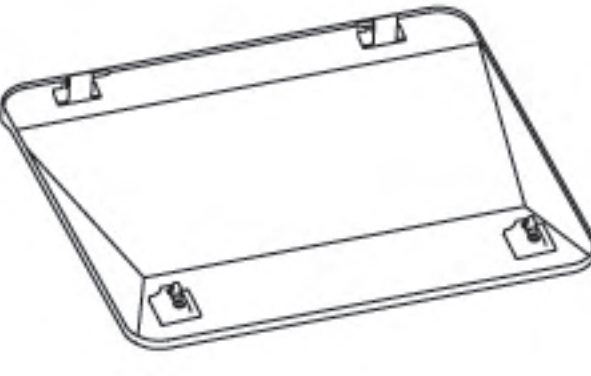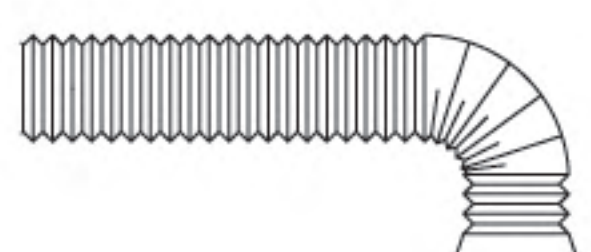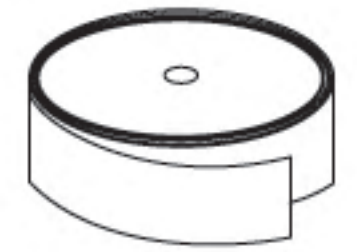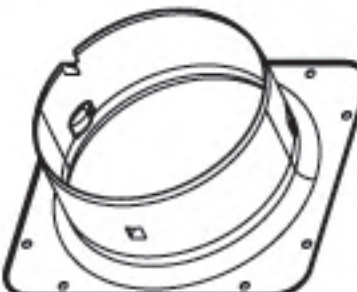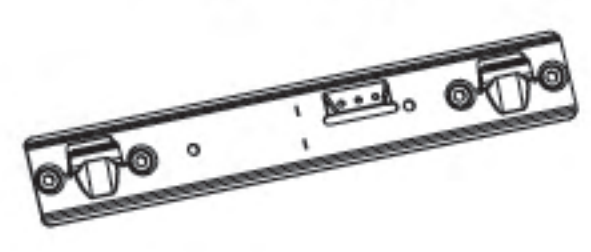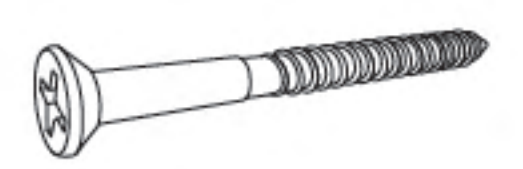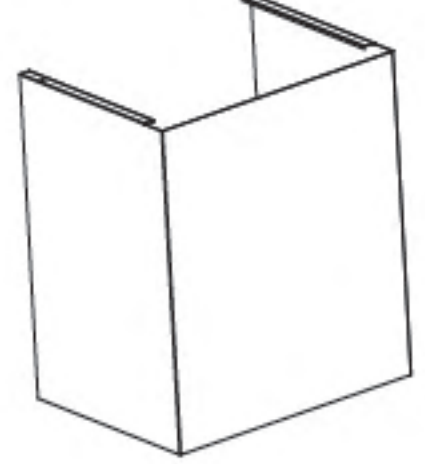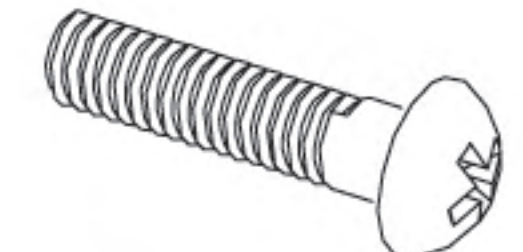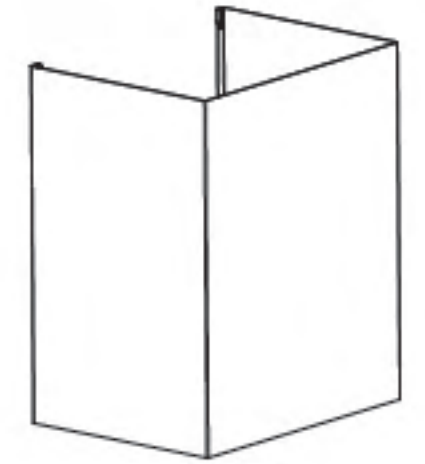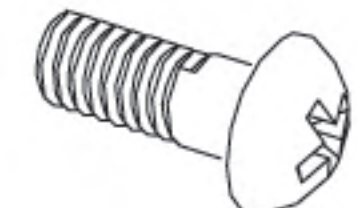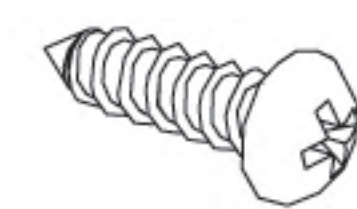
|                                                                                                                                                                                            |   |                                                                                               |   |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---|-----------------------------------------------------------------------------------------------|---|
| 主機（軸測圖）<br>                                                                                               | 1 | 蝶翼板<br>     | 1 |
| 出風管<br><br>+<br>密封膠帶<br> | 1 | 出風罩<br>     | 1 |
| 掛鉤<br>                                                                                                    | 1 | 上密封墊<br>    | 1 |
| 木螺釘<br>ST4.5×60<br>                                                                                      | 6 | 產品使用說明書<br> | 1 |
| 膨脹管φ10×60<br>                                                                                           | 6 | 裝飾罩<br>    | 1 |
| 出風罩螺釘<br>M4×18mm<br>                                                                                    | 8 | 風機外罩<br>  | 1 |
| 風機架螺釘<br>M4×6mm<br>                                                                                     | 2 | 裝飾罩掛鉤<br> | 1 |
| 出風管螺釘<br>ST3.9×9.5mm<br>                                                                                | 4 |                                                                                               |   |
| 裝飾罩掛鉤螺釘<br>ST2.9×19mm<br>                                                                               | 2 |                                                                                               |   |


安裝警告

| ⚠ 注 意                                                                                         |                                                                                                                                  |
|-----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| <br>注意     | 建議廚房裝修完成后再安裝抽油煙機。                                                                                                                |
| <br>嚴格執行   | 確保抽油煙機安裝的牆面平整，抽油煙機必須保持水平。                                                                                                        |
| <br>嚴格執行   | 新抽油煙機的包裝：請以環保的方式處置這些包裝材料，保持一個良好的環境。請勿讓兒童玩耍塑料薄膜和包裝箱，這可能會產生窒息事故，所以請讓包裝材料遠離兒童，包裝材料不是玩具。                                             |
| <br>嚴格執行   | 抽油煙機較重，且安裝過程複雜，因此請聯系專業人員按照產品使用說明書安裝。                                                                                             |
| <br>嚴格執行 | 在牆上或天花板上開鑿或鑽孔時，請注意不要損壞電線和其他隱藏的設備。安裝時請切斷抽油煙機電源。                                                                                   |
| <br>嚴格執行 | 安裝抽油煙機的牆壁要有足够的支撐强度，否則抽油煙機可能掉落損壞。                                                                                                 |
| <br>嚴格執行   | 如果安裝抽油煙機前需要移動燃氣竈，請在移動前關閉燃氣閥門。                                                                                                    |
| <br>嚴格執行   | 安裝抽油煙機后，請確保機器能够正常運行，并仔細閱讀和保存好產品使用說明書。                                                                                            |
| <br>嚴格執行   | 爲了保護環境，請妥善處理不能使用的舊油煙機。                                                                                                           |
| <br>嚴格執行   | 抽油煙機可能有非常鋒利的邊，在進行安裝、清潔或修理時，請佩戴合格的防護手套，謹防被抽油煙機內金屬板快口等劃傷和擦傷。                                                                       |
| <br>嚴格執行 | 請使用專用電源插座，并且專用電源插座應有可靠接地。                                                                                                        |
| <br>嚴格執行 | 出風管必須確保排到室外。爲了避免火災的發生并保持空氣清新，請將廢氣排到室外。請不要將廢氣排到牆內、閣樓、車庫中。（只適用於有出風管的抽油煙機）器具排出的氣體不應排到用于排出從燃燒燃氣或其他燃料的器具中產生的煙氣的煙道中（該條不適用於把氣體排回室內的器具）。 |



牆面安裝  
安裝抽油煙機的牆壁要有足够的支撐强度，對於中空牆壁，中空板實心層的厚度必須大于30mm以上，對於混凝土牆壁可直接打安裝孔。整機必須牢固安裝在牆壁上。

## 產品尺寸圖

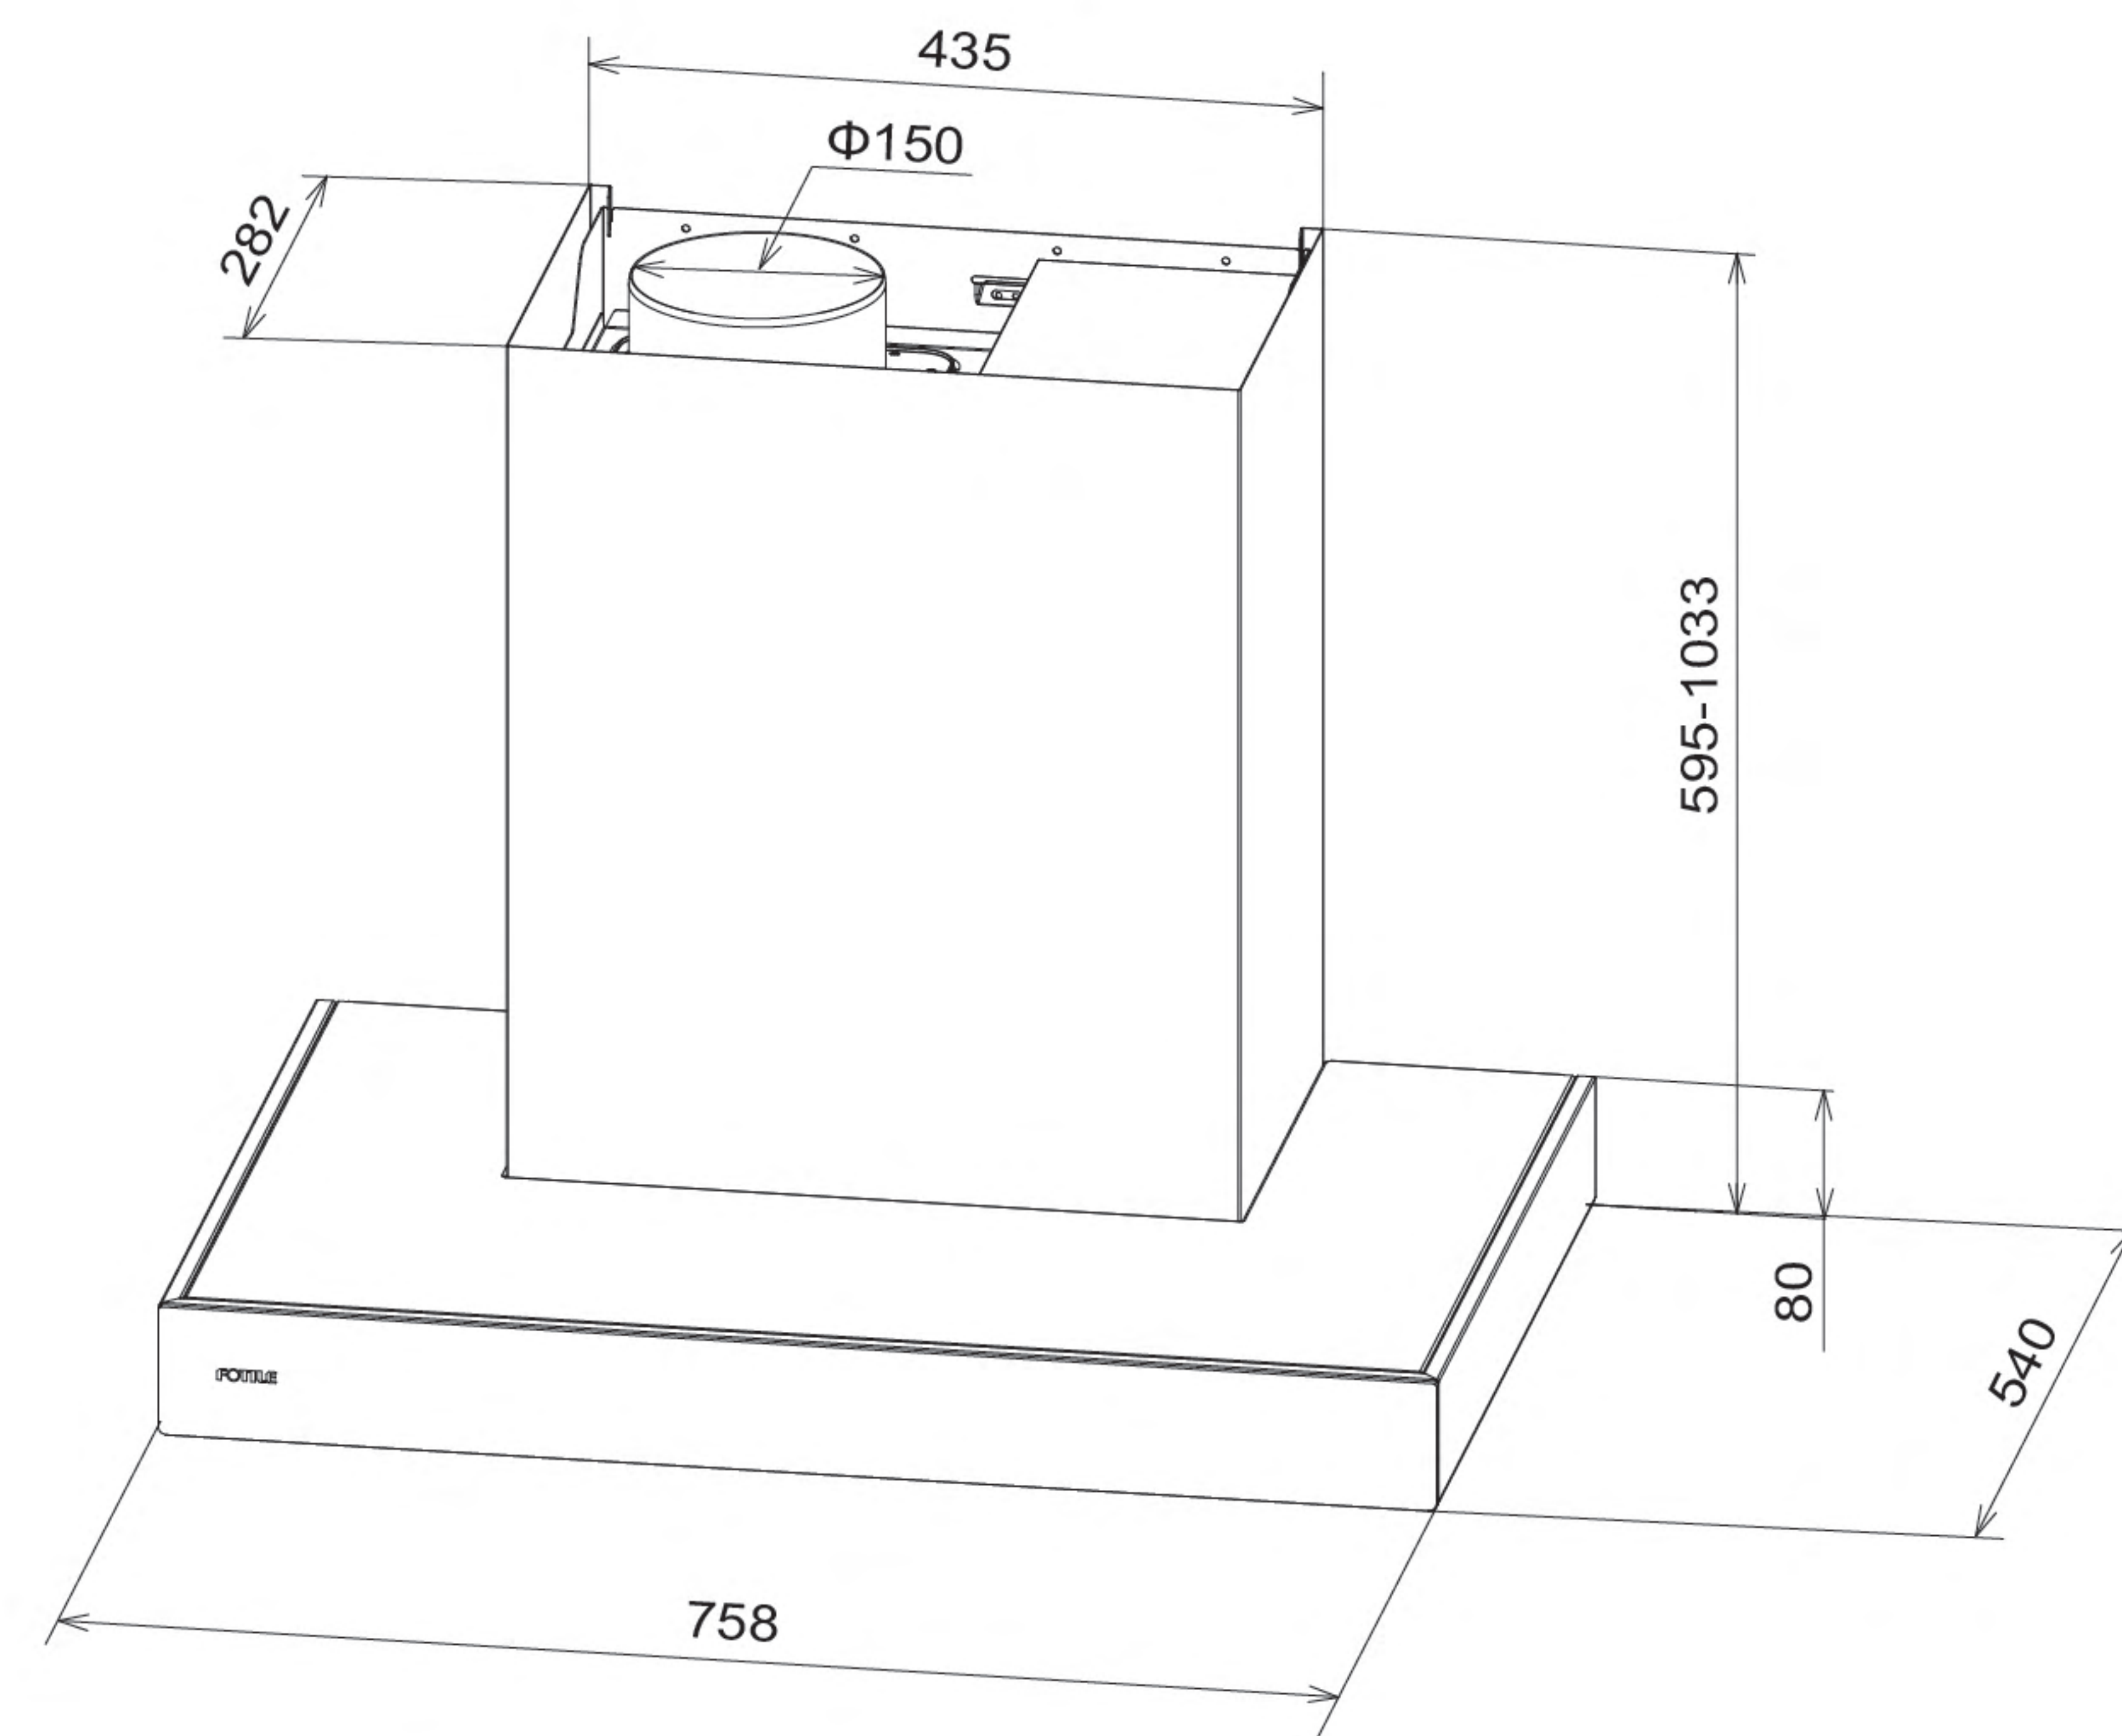


產品基本尺寸(單位: mm)

## 安裝建議

### ■ 安裝位置

1. 該抽油煙機只能安裝于家庭廚房；請勿在其他場合使用該抽油煙機。
2. 抽油煙機必須安裝在爐竈的上方，抽油煙機必須保持水平。
3. 抽油煙機周圍環境的溫度不能超過40℃。
4. 安裝牆面應為不可燃物，嚴禁安裝在木質等易燃的牆面上。

### ■ 抽油煙機與櫥櫃安裝示意圖（單位：mm）

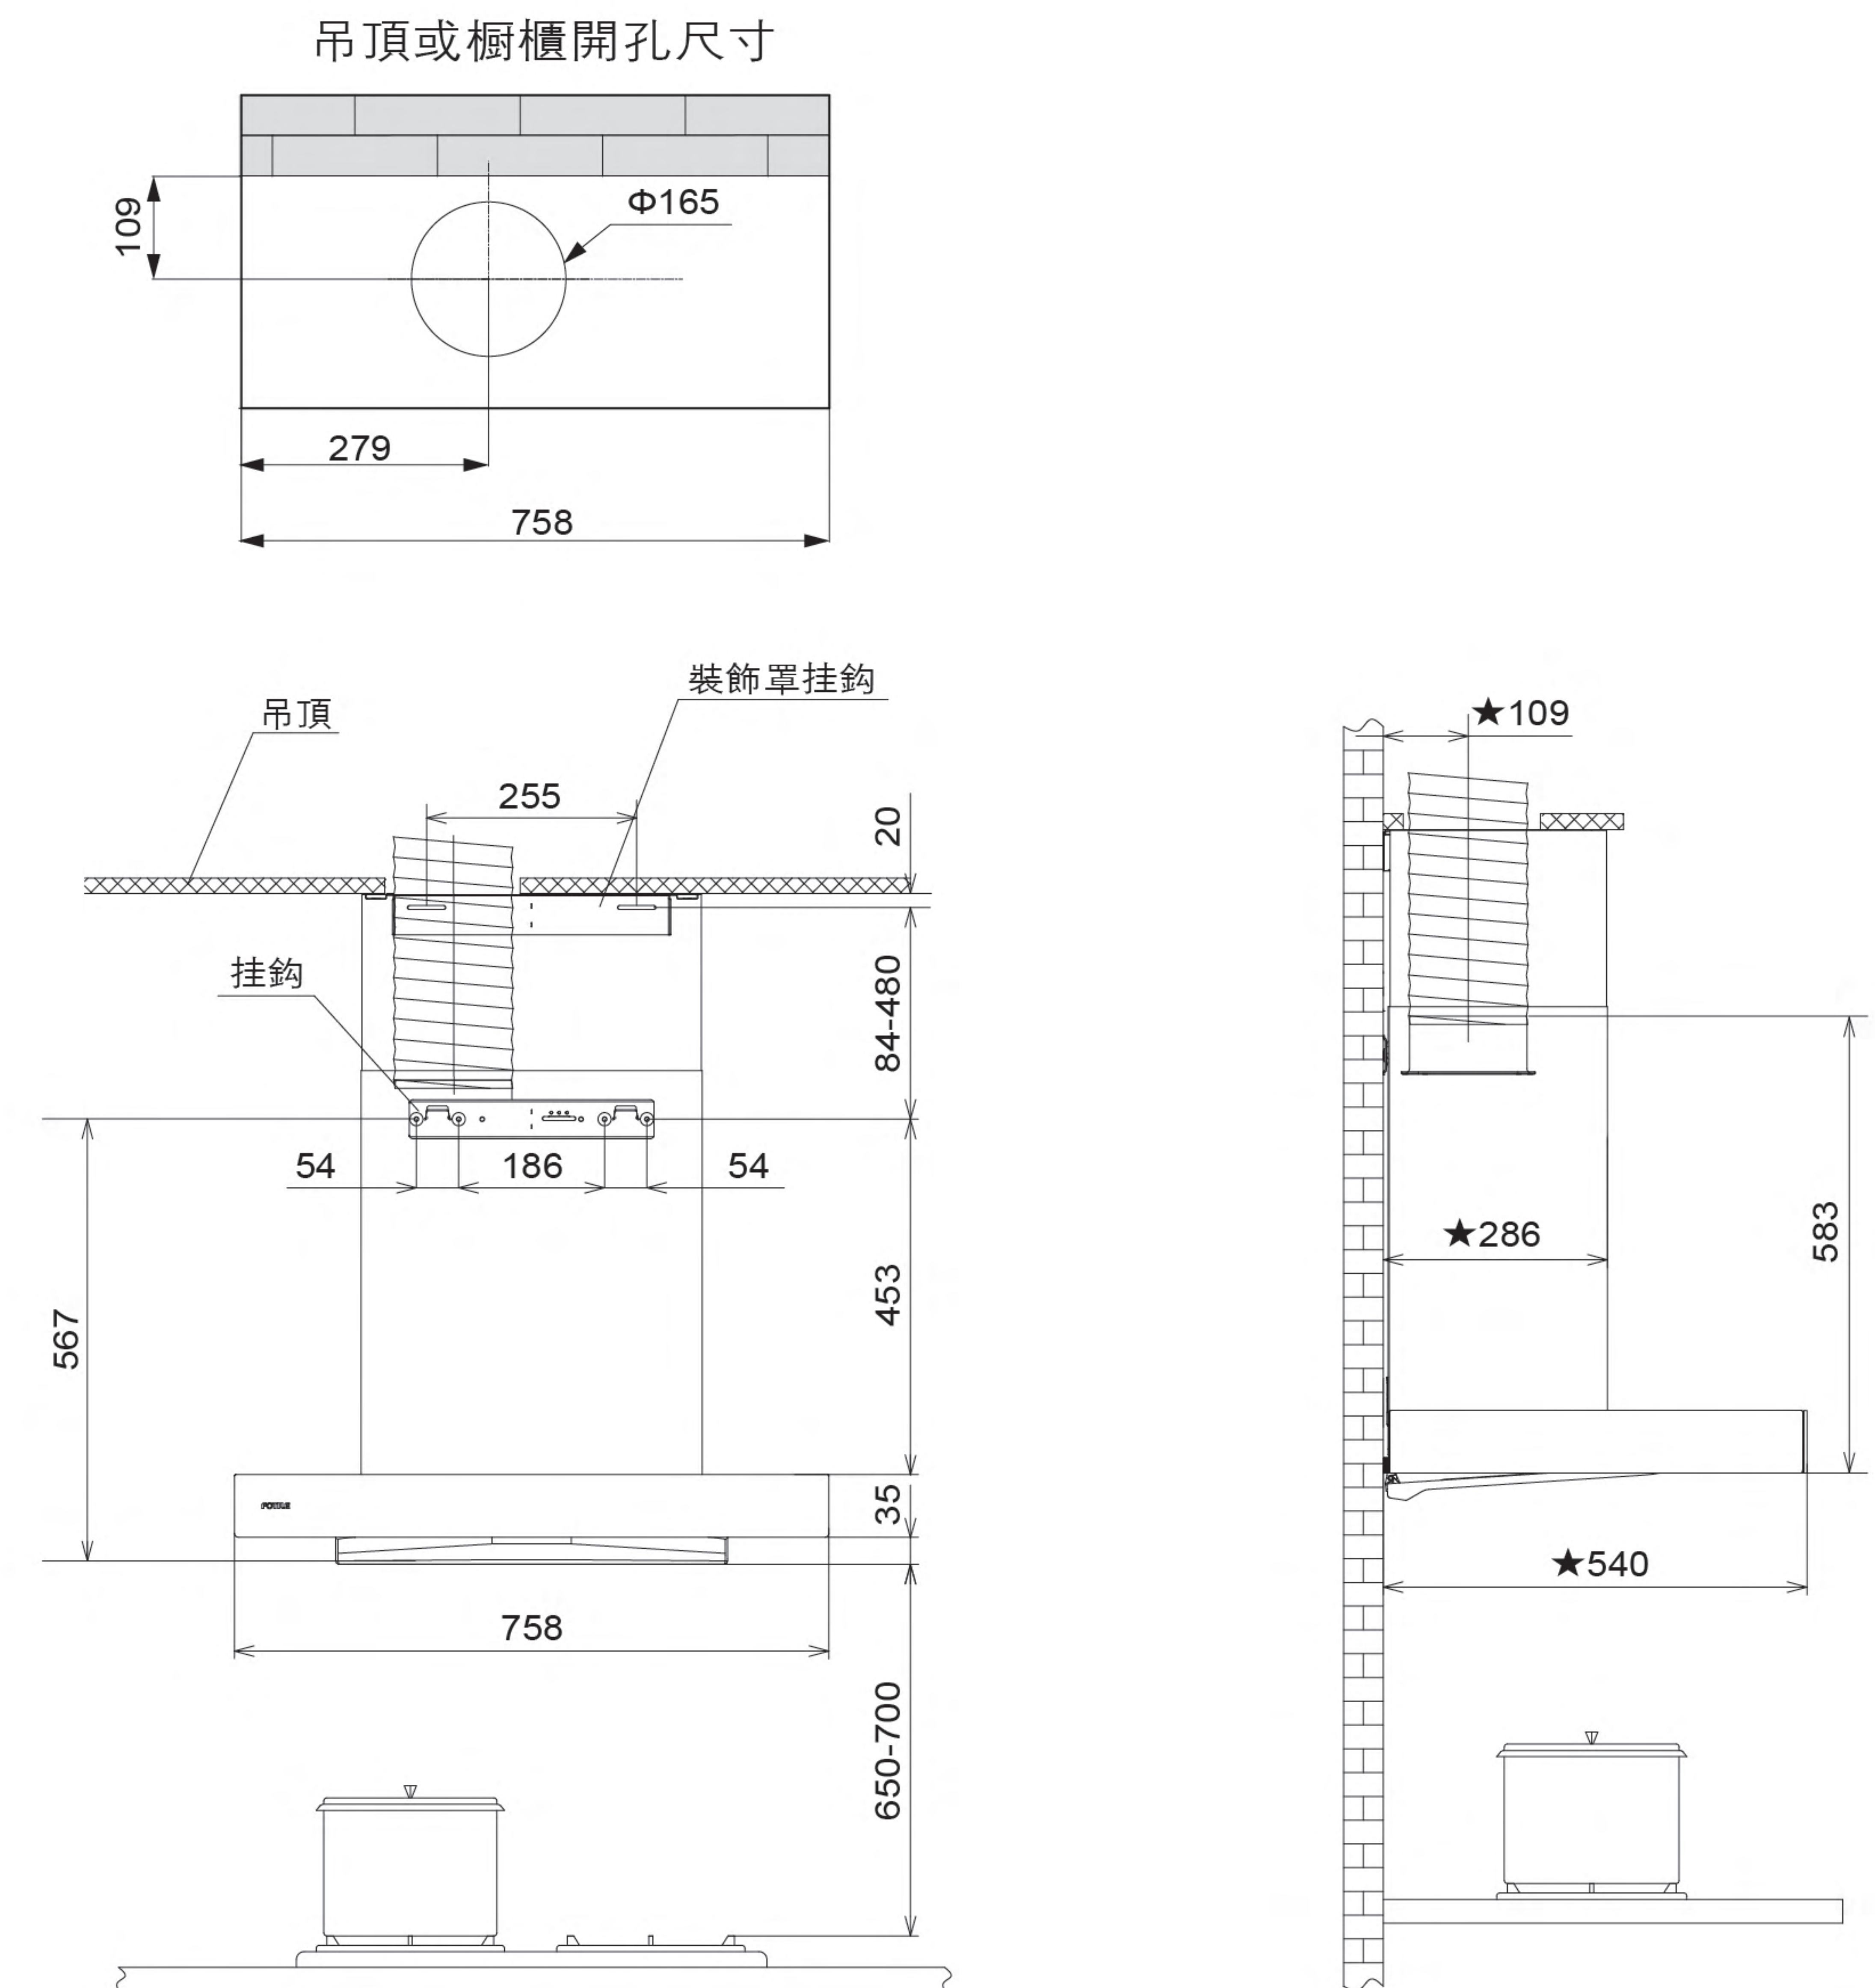

安裝示意圖（★表示到牆的距離）



注意：

抽油煙機的安裝高度（即爐竈上烹飪器具的支承面與抽油煙機最低部位的距離）不得低於650mm。

如燃氣爐竈安裝說明規定了較大的安裝距離則對此應予考慮。為保證抽油煙機效果，請在推薦安裝高度內安裝抽油煙機。若實際安裝高度超過推薦安裝高度，則產品的抽油煙機效果可能會受到一定影響。如所屬地區有相關法律規定抽油煙機安裝高度，建議遵守相關法律。

## ■ 安裝前的準備工作


### 1. 警告：

- (1) 為了不對抽油煙機造成損害，請確保不要讓雜物等進入排風口。
- (2) 估算抽油煙機通到室外的出風管的位置，參見安裝示意圖。
- (3) 一個直線的、較短的出風管將使得抽油煙機的排烟更加順暢。
- (4) 出風管與牆孔的連接處使用管道膠帶嚴格進行密封。必須確保出風管與出風罩連接牢固。
- (5) 牆洞過小會影響排烟效果，在保證安全的前提下，建議擴孔至出風管尺寸。

### 2. 工具準備


安裝本抽油煙機應具備以下工具（包括并不限于以下工具）

- |                  |           |
|------------------|-----------|
| (1) 衝擊電鑽（帶鑽頭Φ10） | (2) 十字螺絲刀 |
| (3) 卷尺           | (4) 水平尺   |


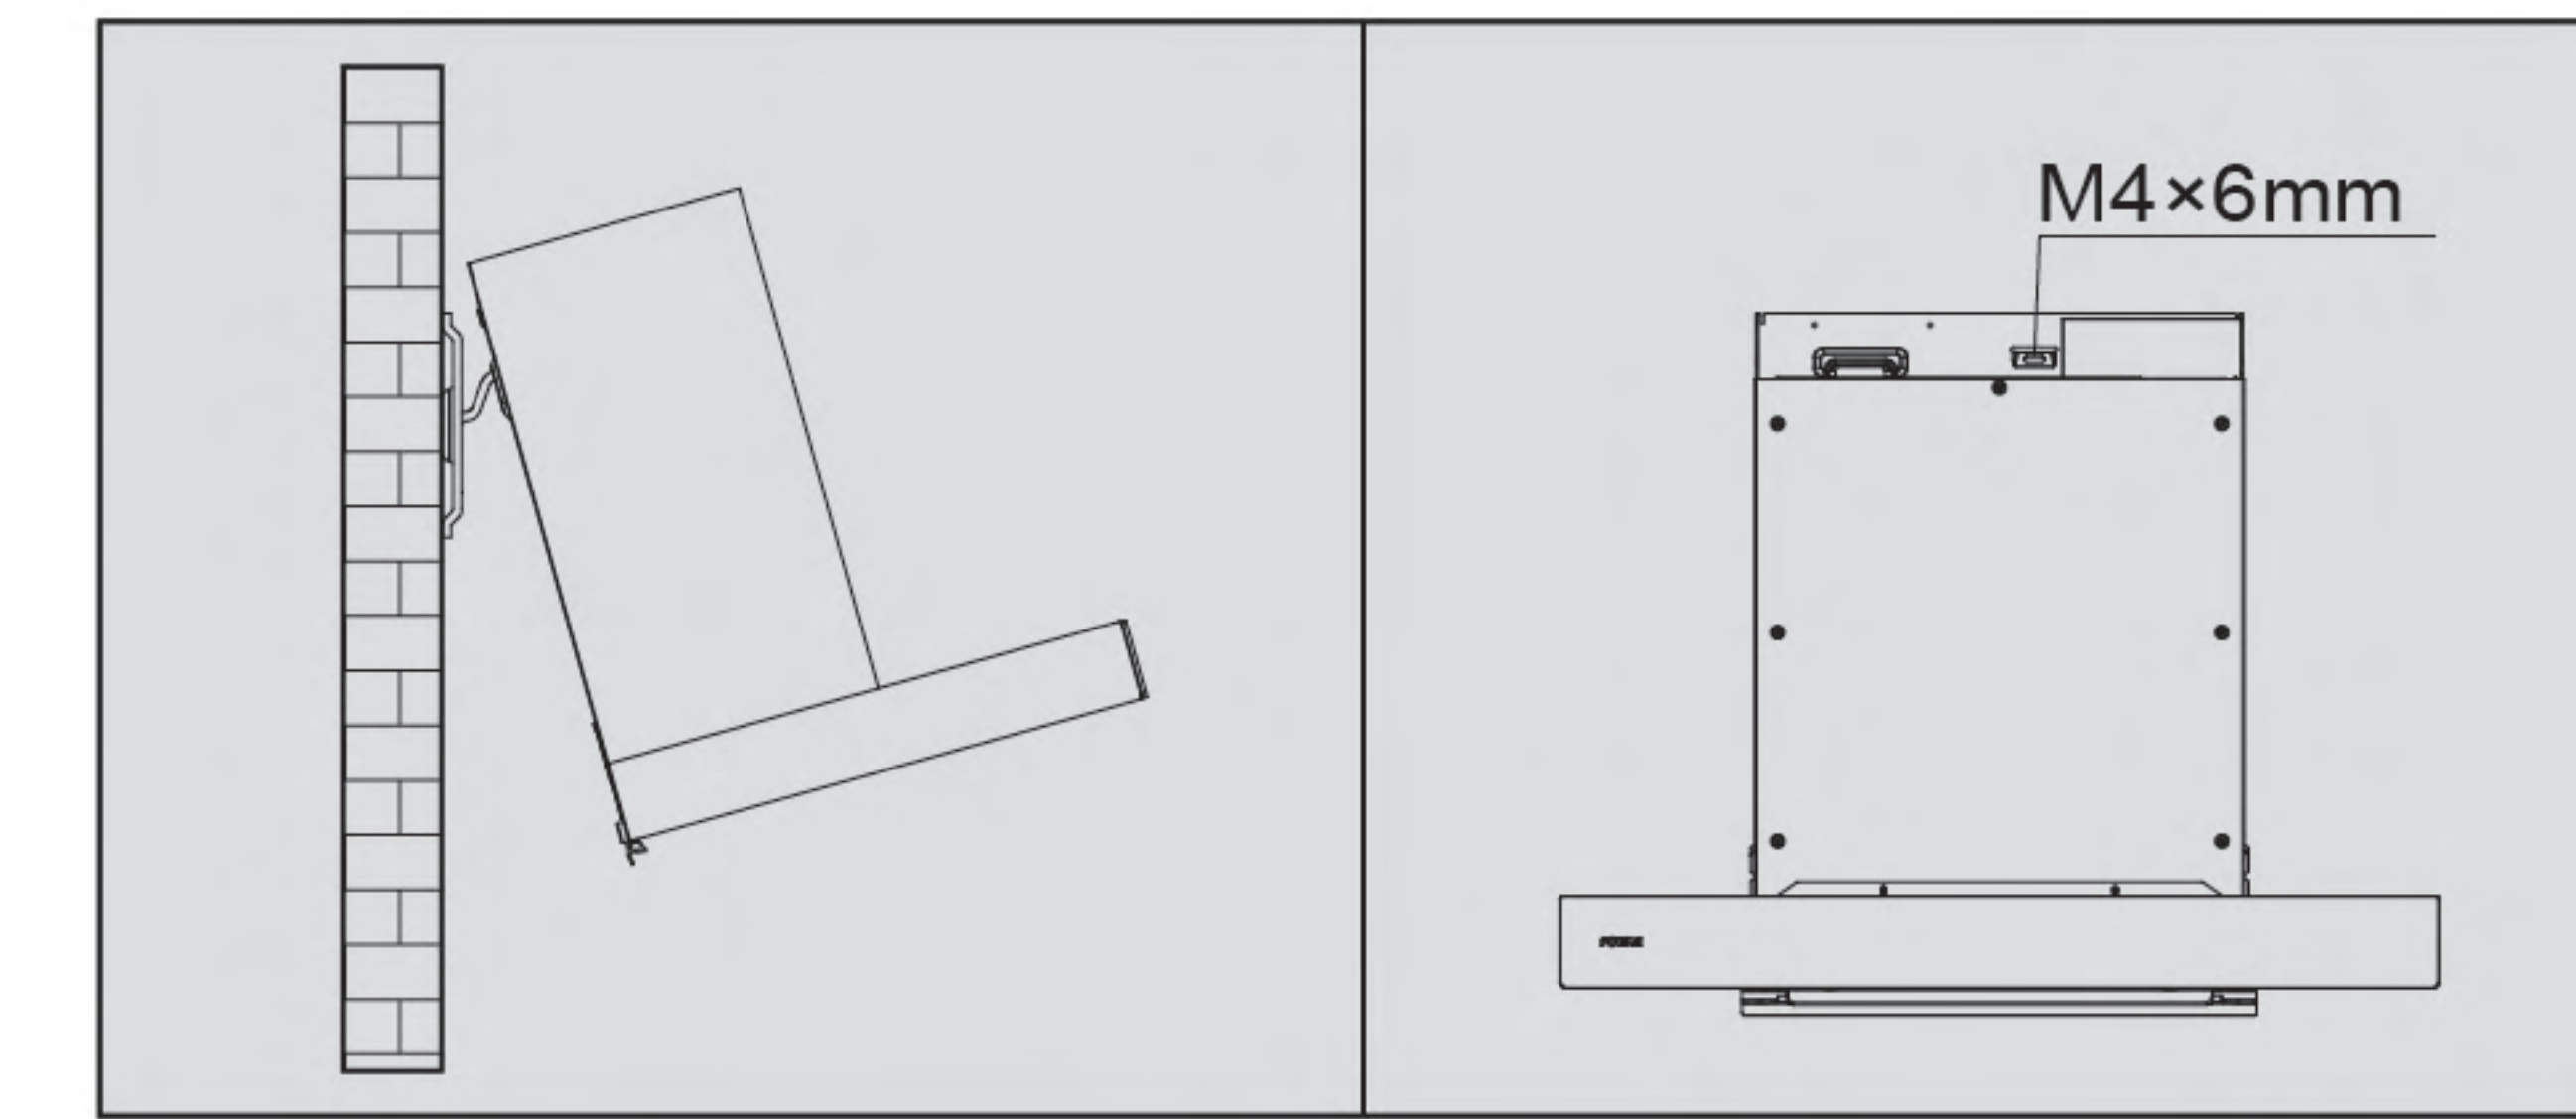


## 安裝步驟


1. 衝擊電鑽應配備衝擊鑽頭備用。
2. 包裝箱內抬出整機，擰下抽油煙機背部固定風機外罩的2顆螺釘，取下風機外罩和裝飾罩。

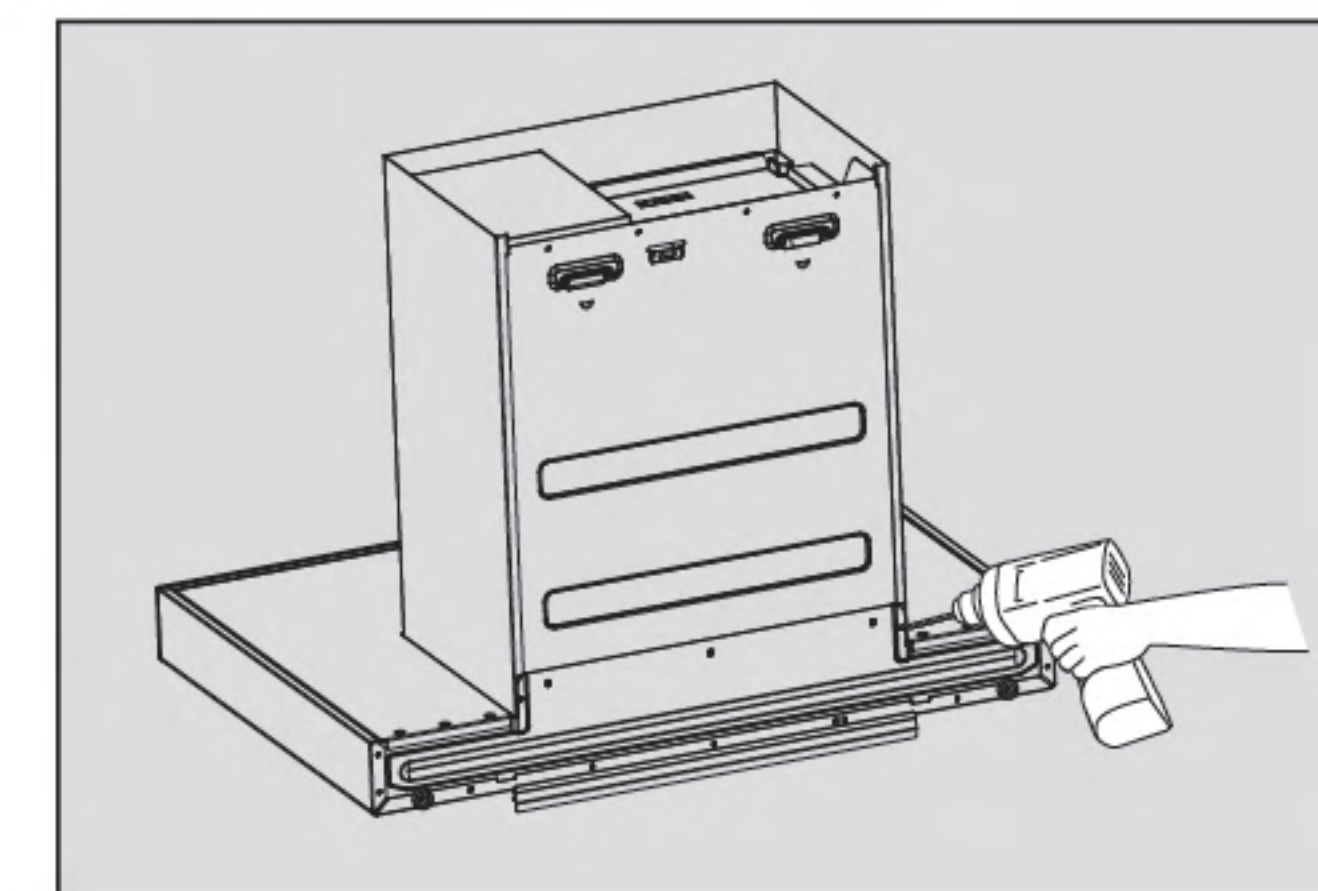


3. 如安裝示意圖所示，在打孔標識處用電鑽打Φ10mm孔，並埋設膨脹管，用掛鉤螺釘固定掛鉤，並用水平尺確保掛鉤水平。裝飾罩掛鉤可用2顆裝飾罩掛鉤螺釘挂定到吊頂上。

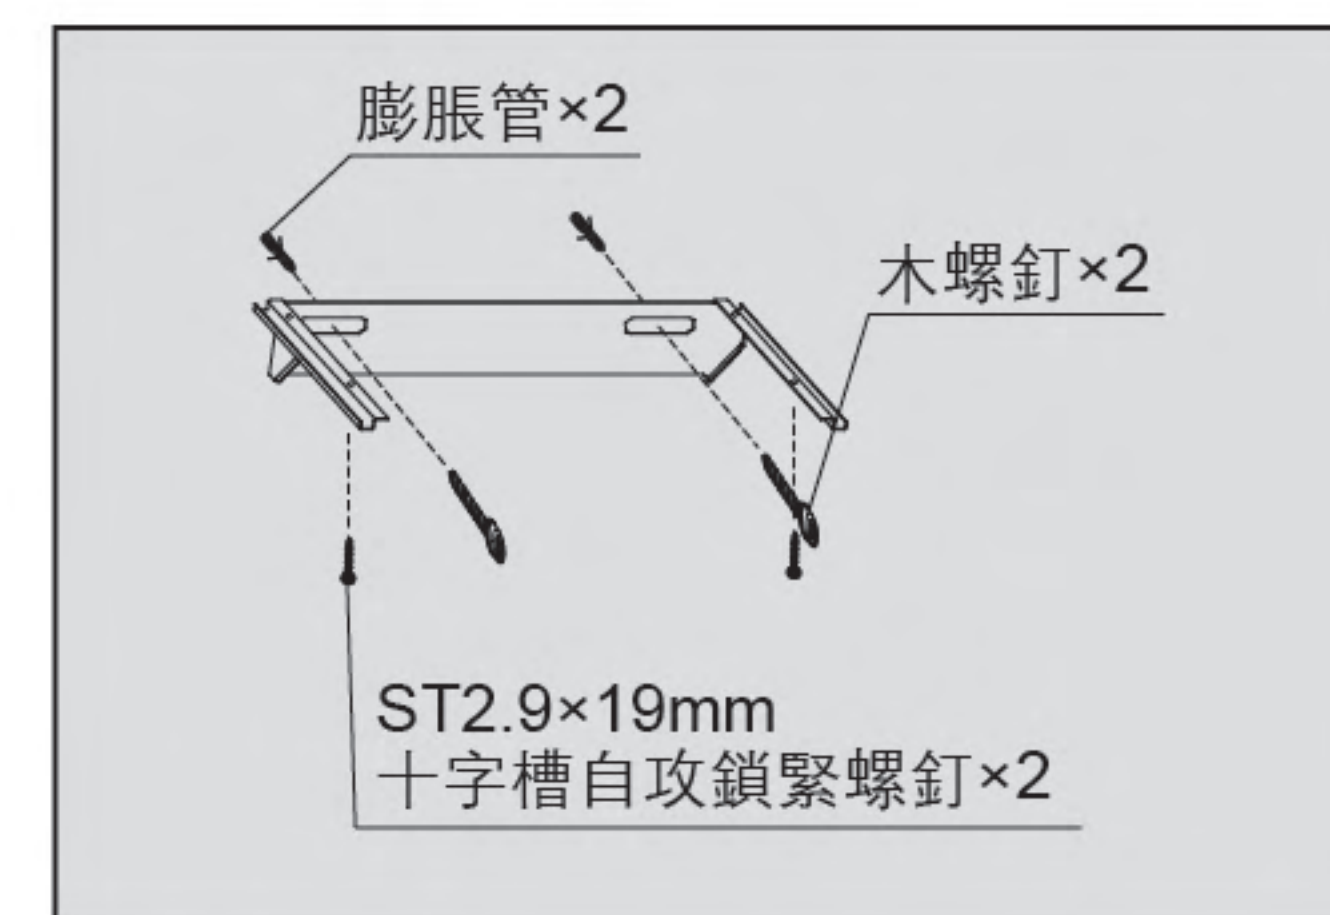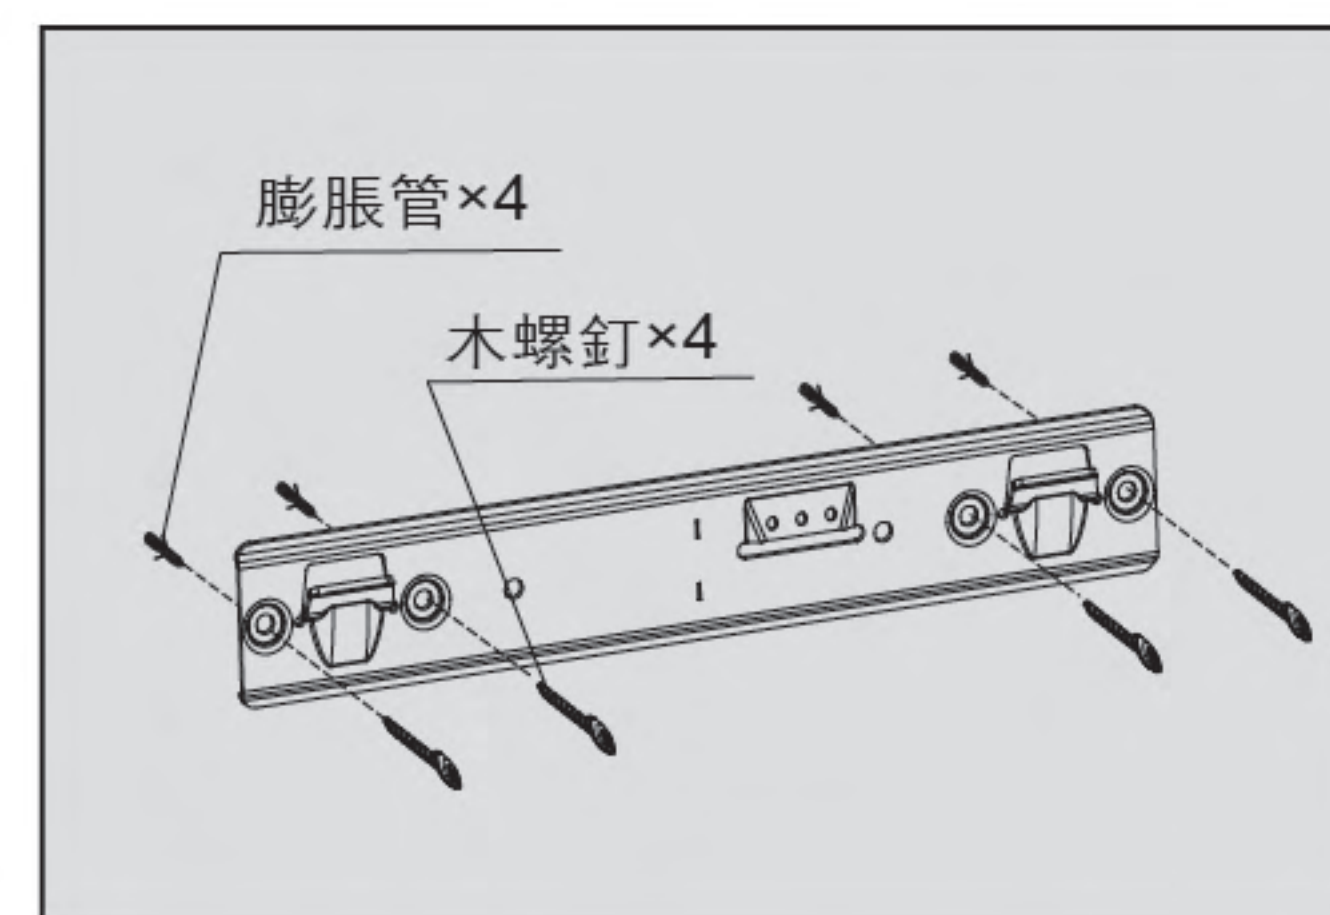


4. 如圖所示，用8顆M4×18mm出風罩螺釘將出風罩及密封圈固定在主機頂部上。

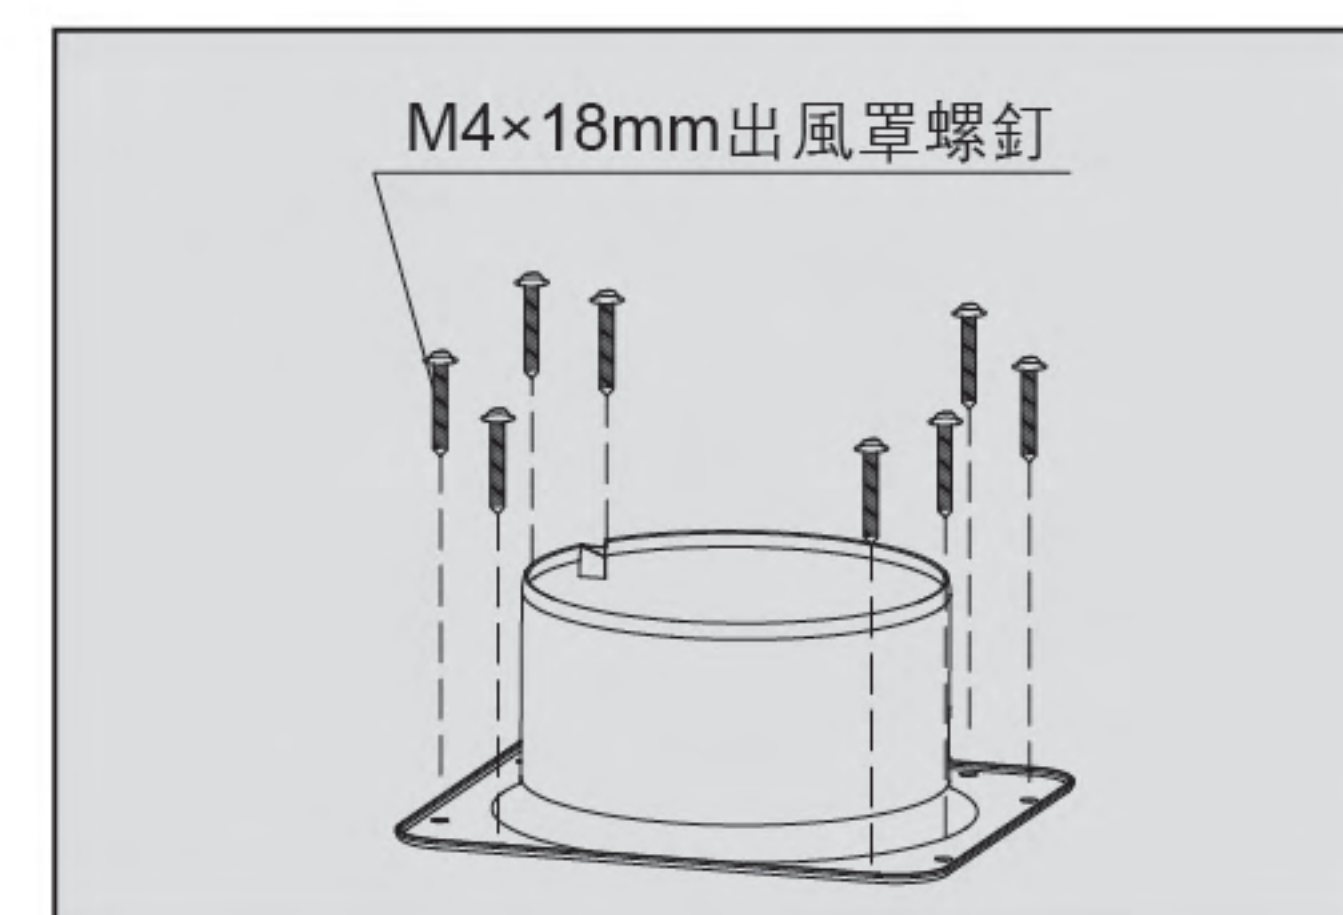




5. 布置出風管：鋁箔出風管與預留的煙管或牆孔間須密封嚴密以防漏煙，煙管不能擠壓變形、小角度轉彎、轉彎數量不超過2個，煙管須拉直並固定。
6. 抬起主機，將背部掛鉤孔挂入掛鉤，用水平尺確認主機水平，並用風機架螺釘M4×6mm將風機架與掛鉤固定。

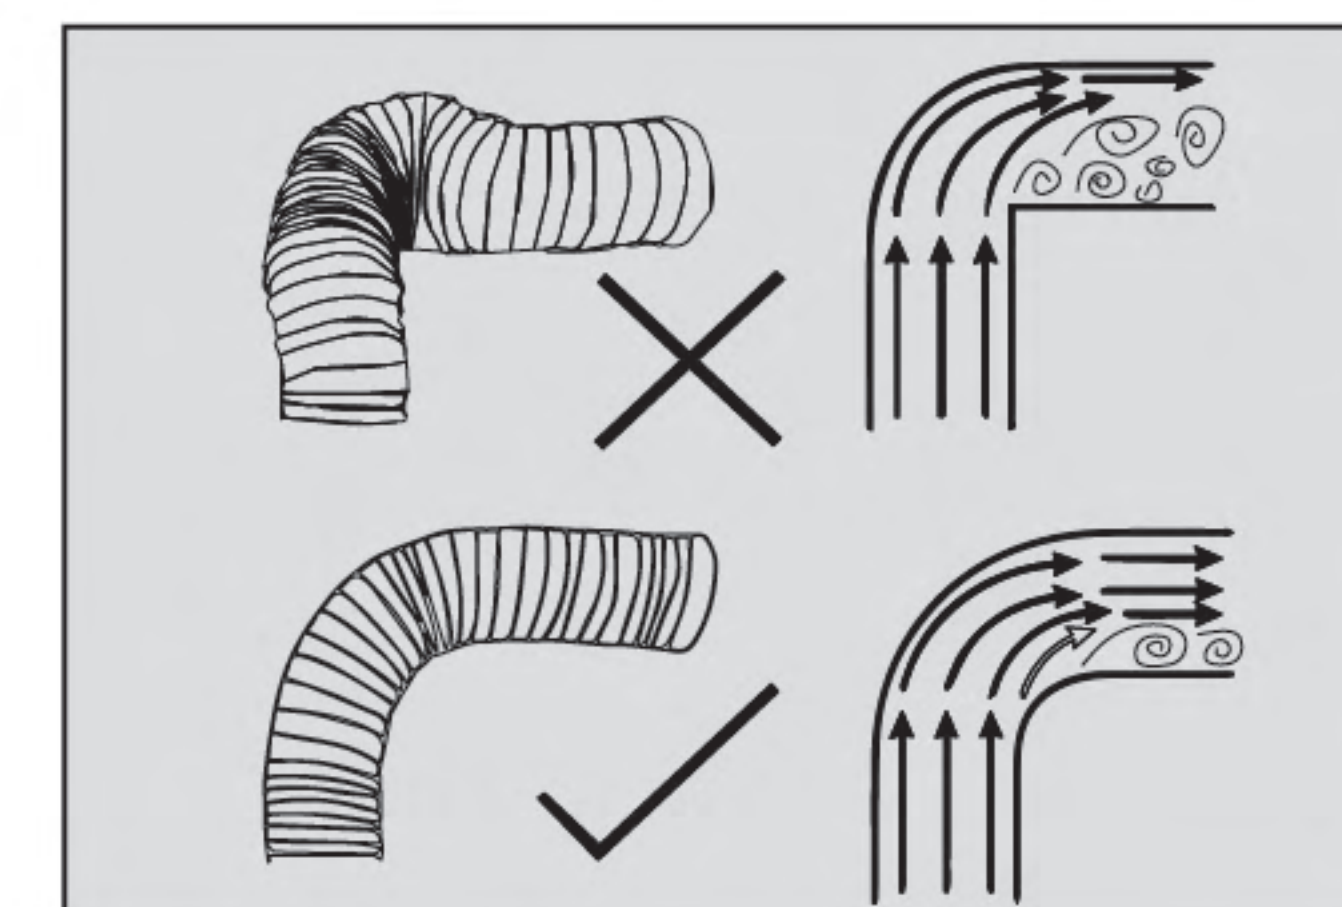


7. 連接出風管：根據實際距離剪去多余出風管或補接煙管，把煙管套進出風罩連接圈，然後用2顆出風管螺釘（ST3.9×9.5）將出風管預固定，最後用密封膠帶纏繞固定密封好。把抽油煙機的電源綫插到插座上，通電後開風機檢測是否有漏風。

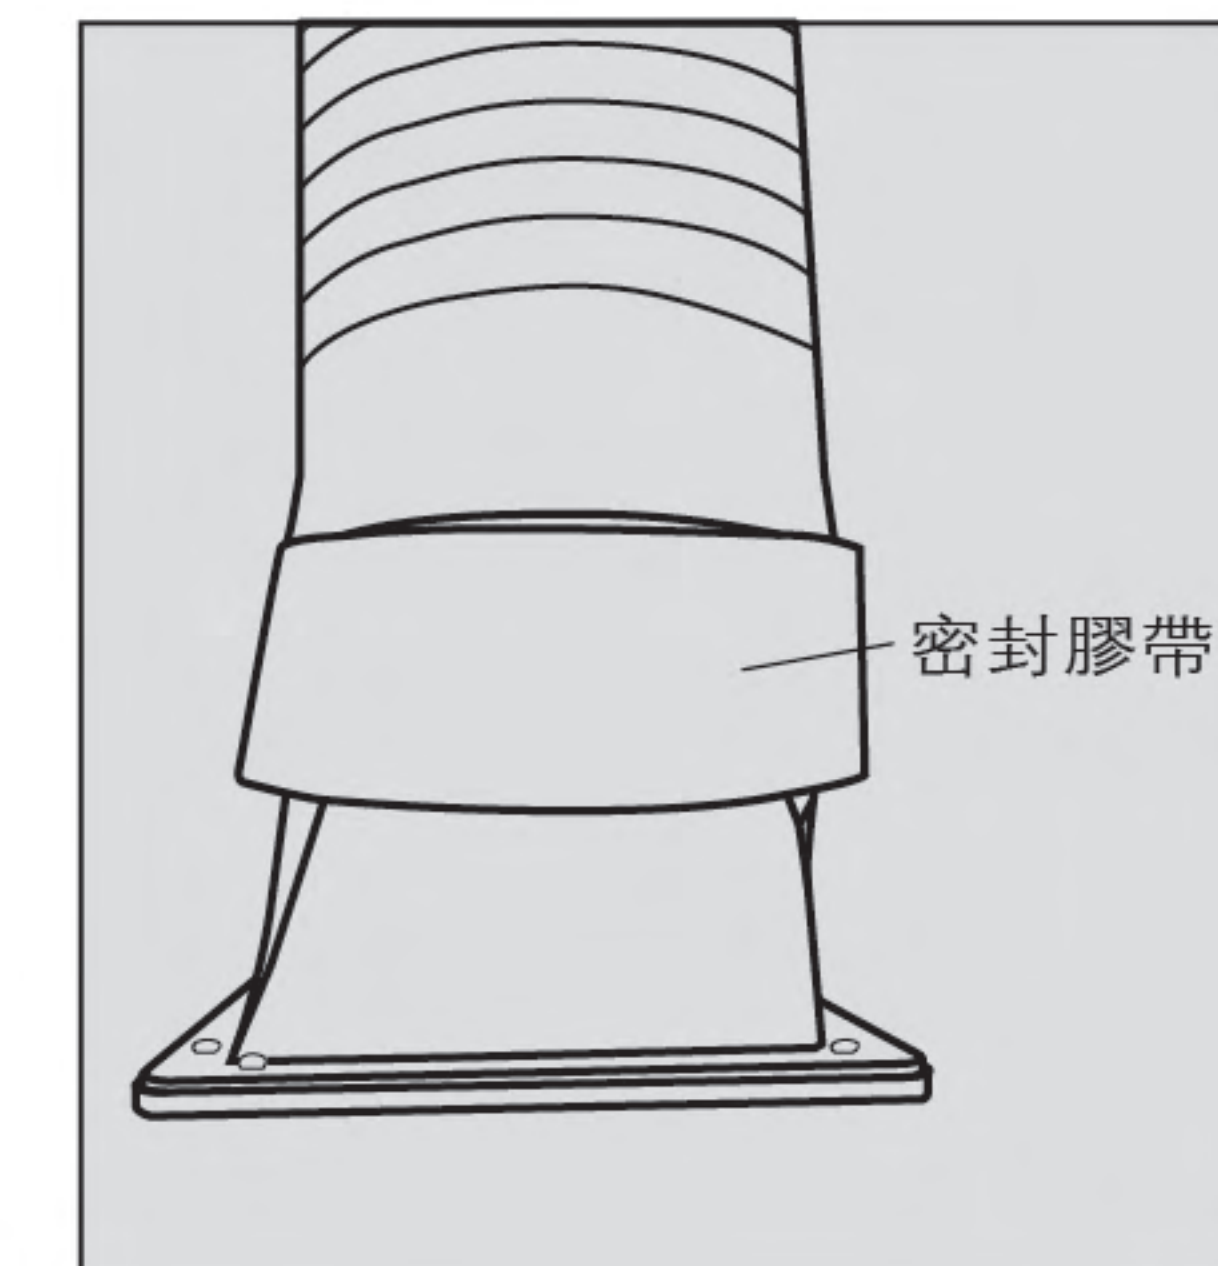




8. 風機外罩、裝飾罩安裝：
  - (1) 把風機外罩、裝飾罩表面保護膜撕掉；
  - (2) 將裝飾罩放入風機外罩；
  - (3) 把風機外罩、裝飾罩同時拿起，先把裝飾罩卡入裝飾罩掛鉤內，然後同時將裝飾罩、風機外罩沿裝飾罩掛鉤組件推到底；
  - (4) 把裝飾罩、風機外罩推到底後，風機外罩緩緩滑下來，將風機外罩卡扣卡入風機架，然後將風機外罩插入頂板與風機架的間隙內。

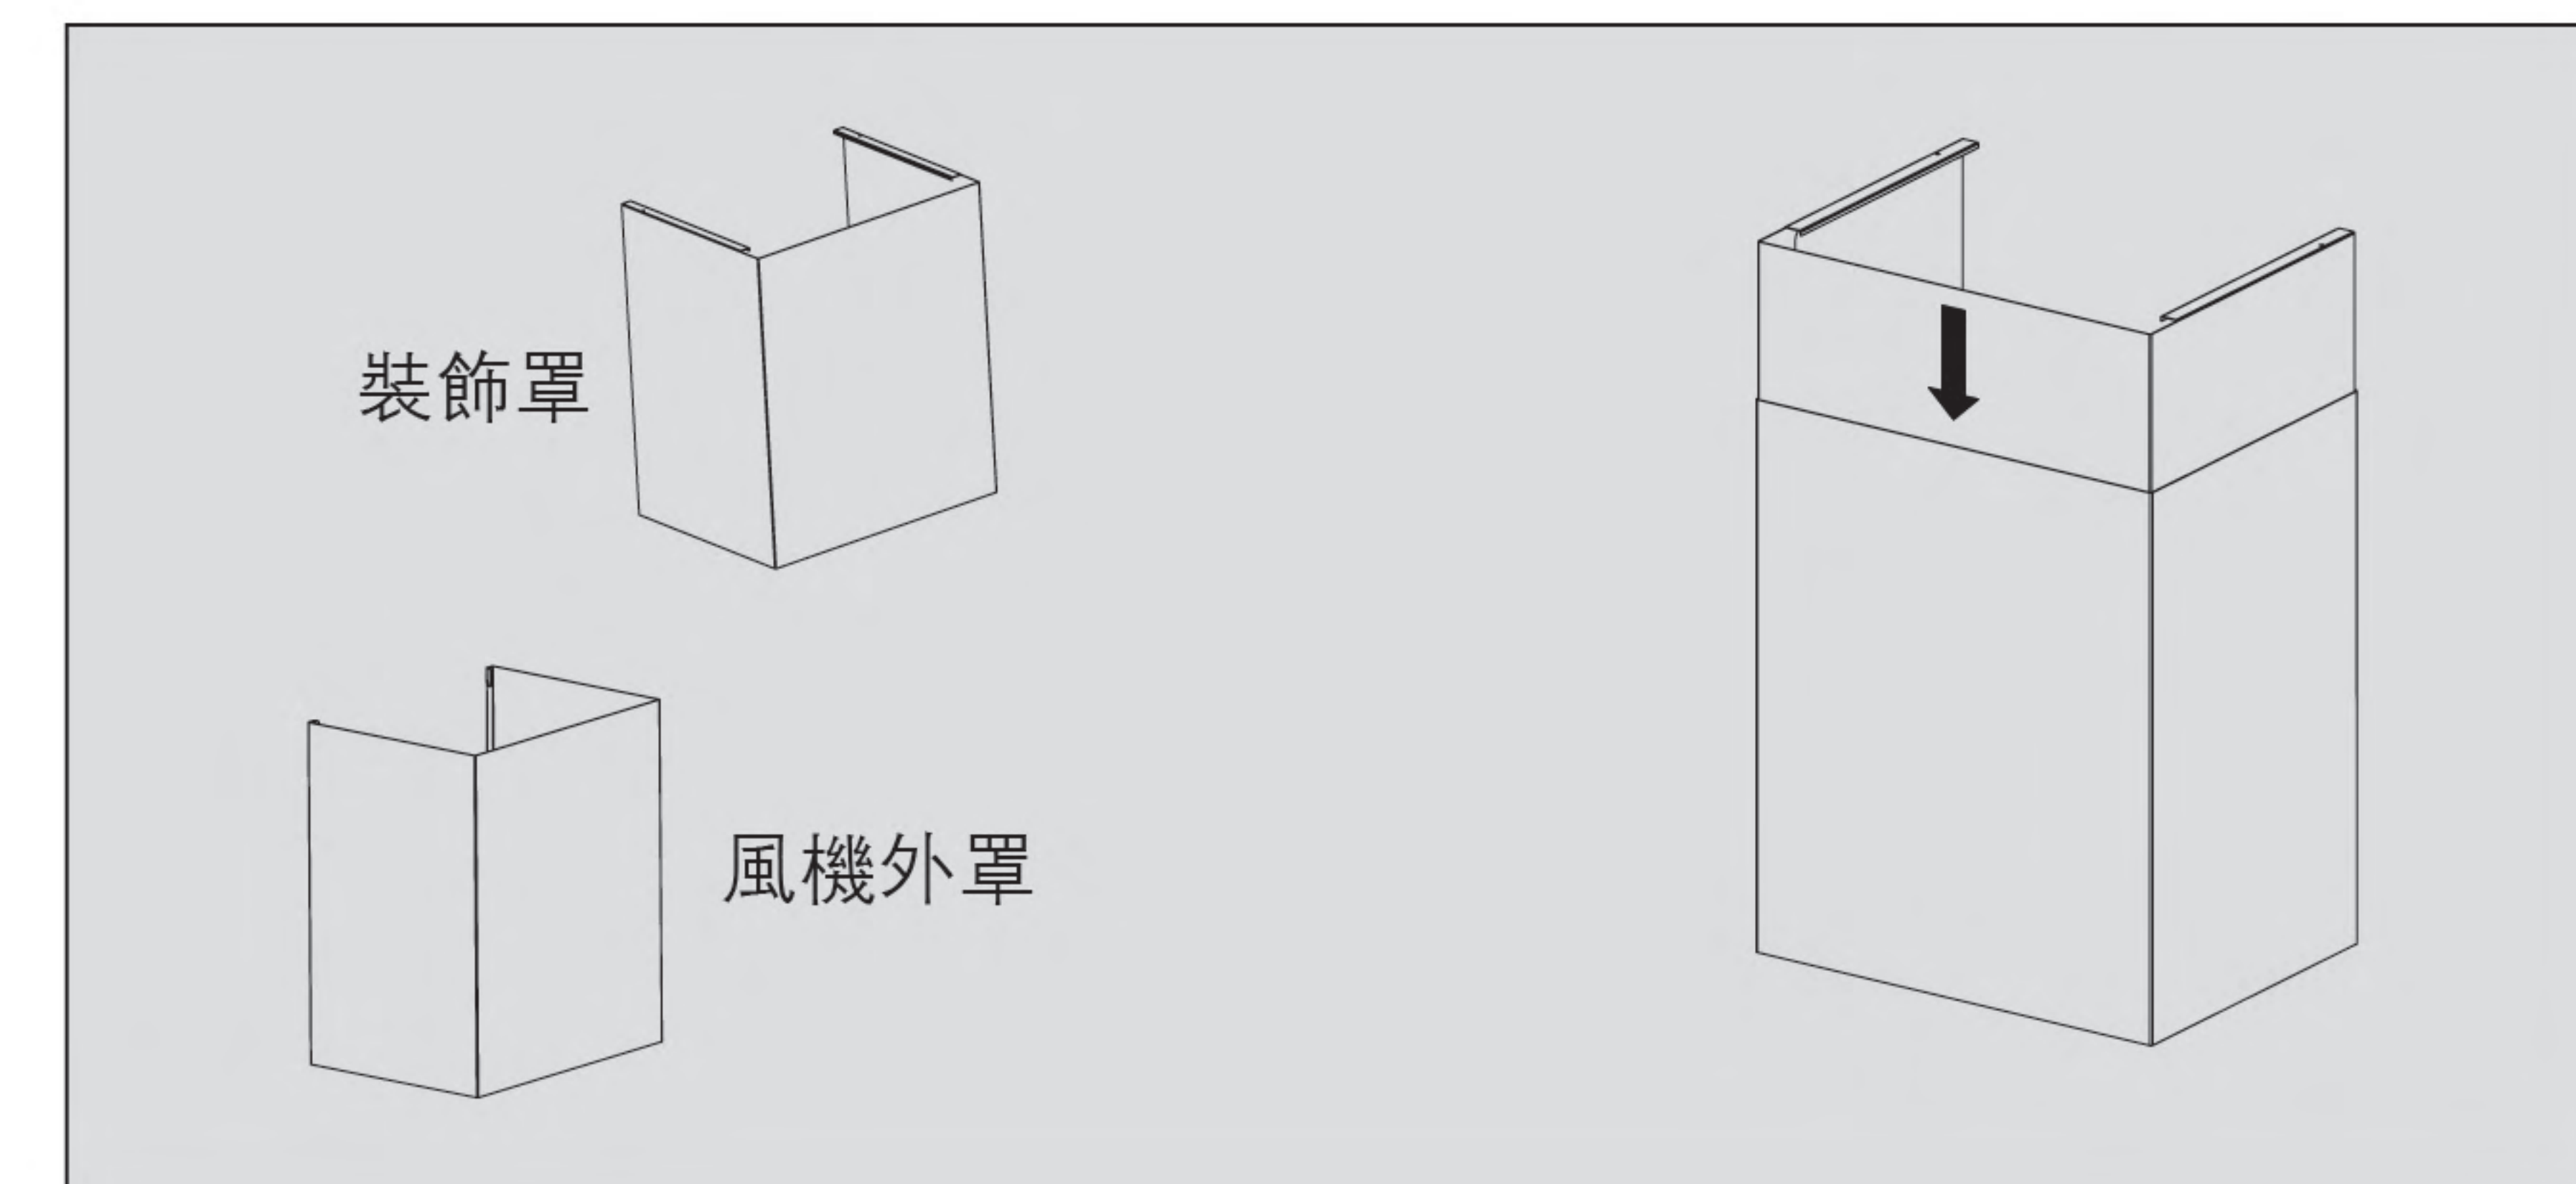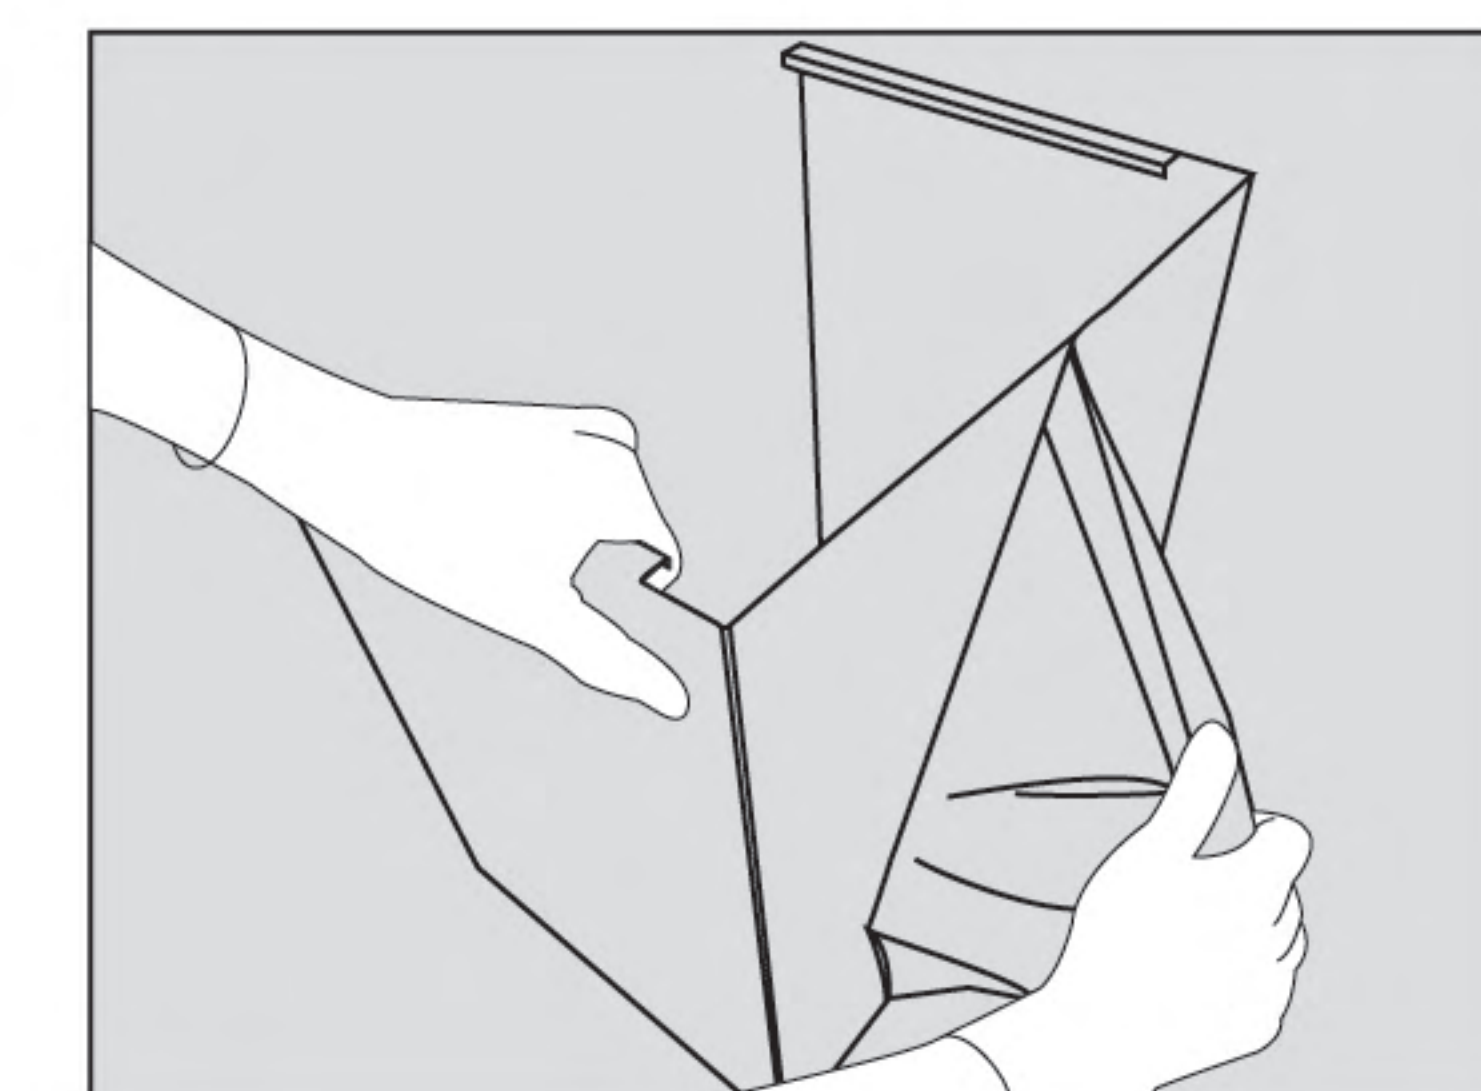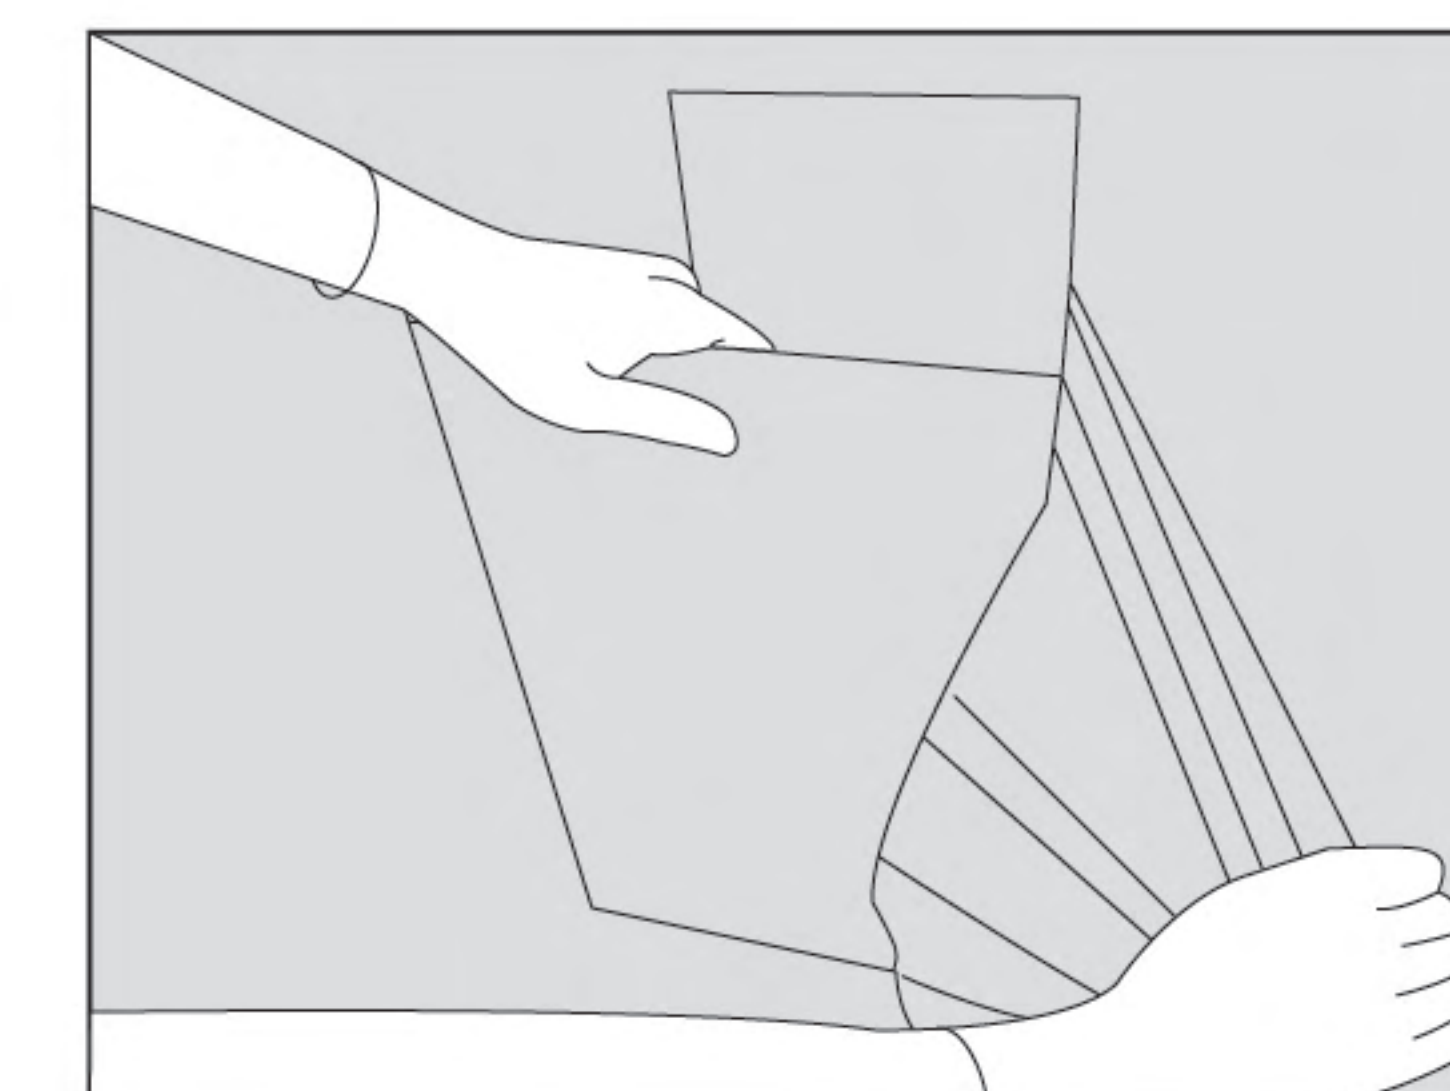

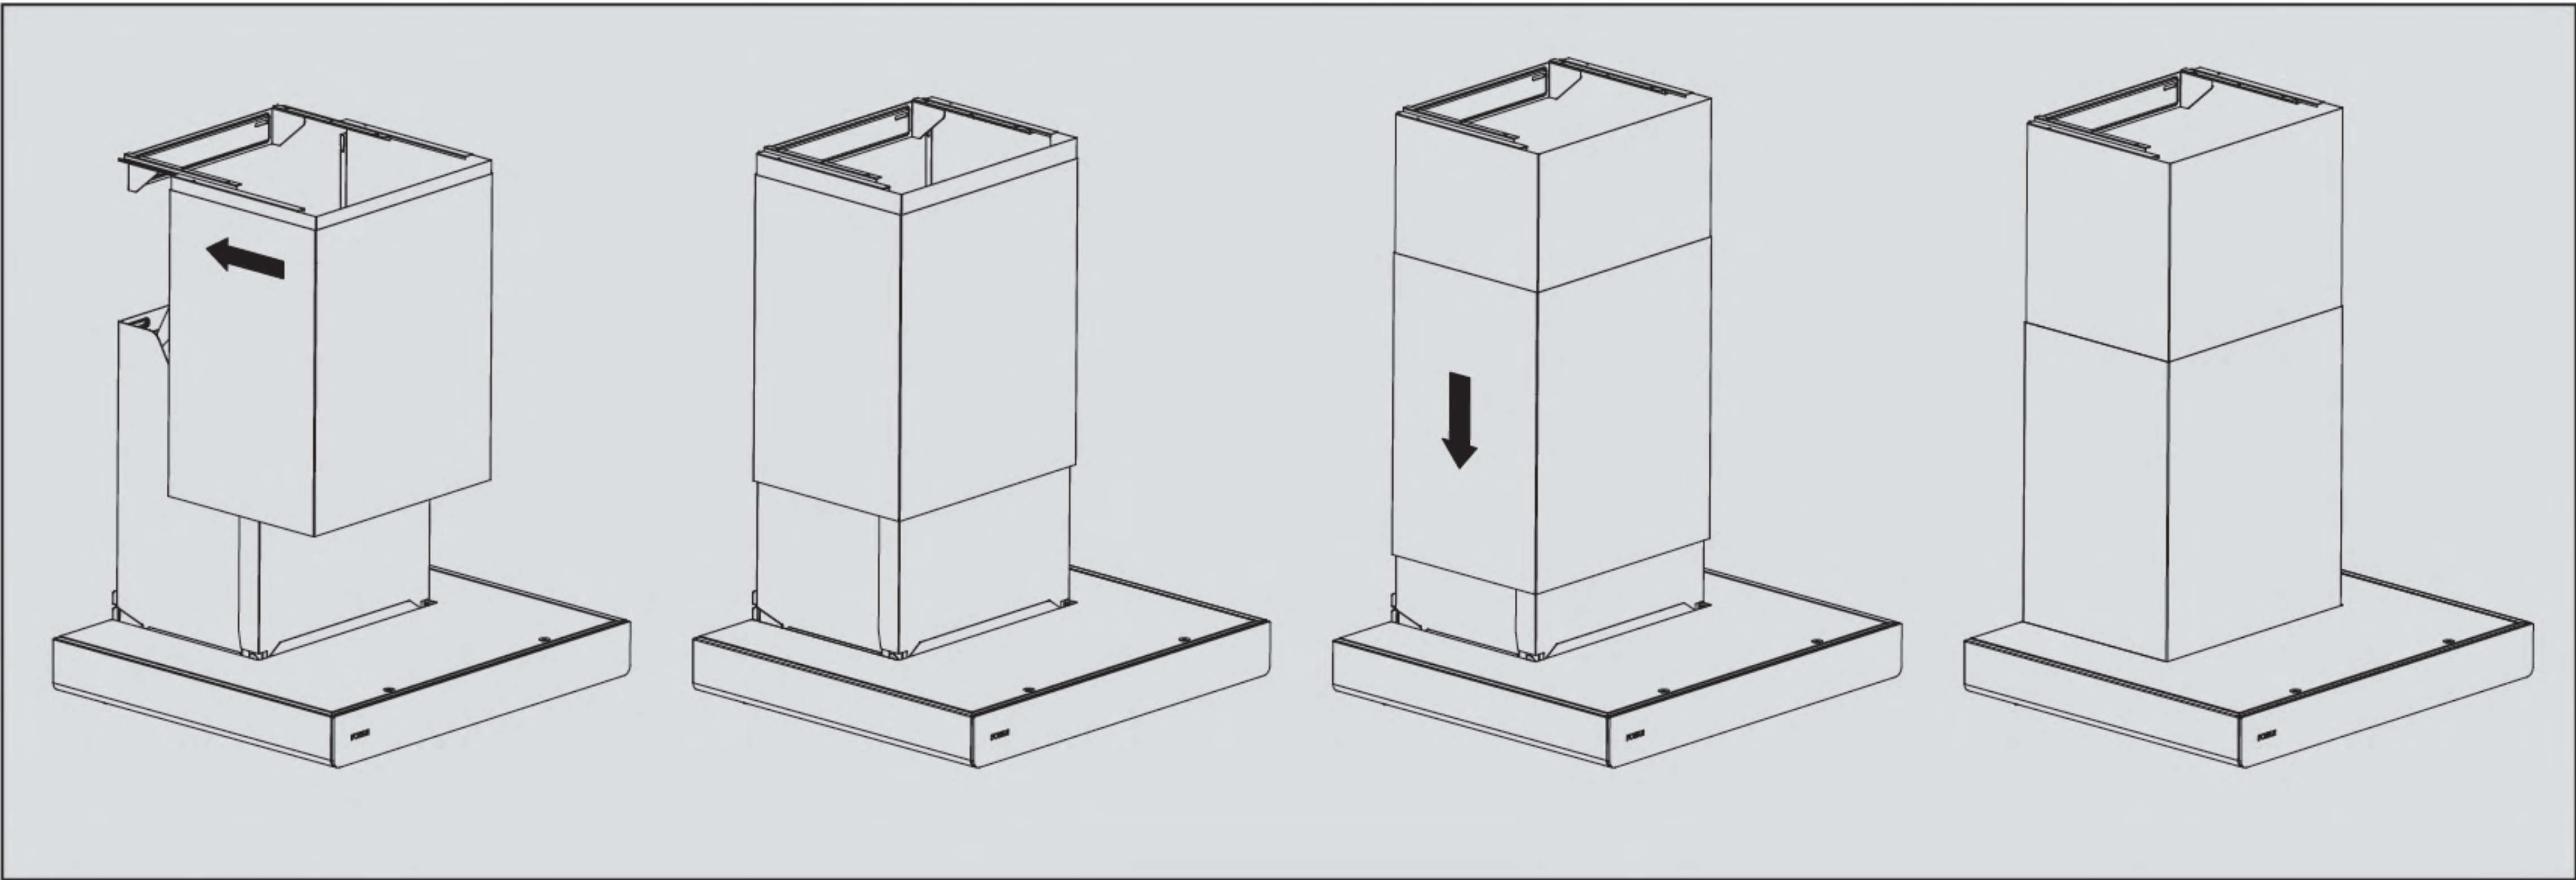

9. 安裝蝶翼板：

- (1)把蝶翼板表面保護膜撕掉；
- (2)雙手緊握蝶翼板前側，將蝶翼板后側的左右掛鉤，放入集烟罩底部的掛鉤架內；
- (3)雙手托住蝶翼板，使其向上旋轉，然後用力將蝶翼板卡扣卡入集烟罩的碰扣內。

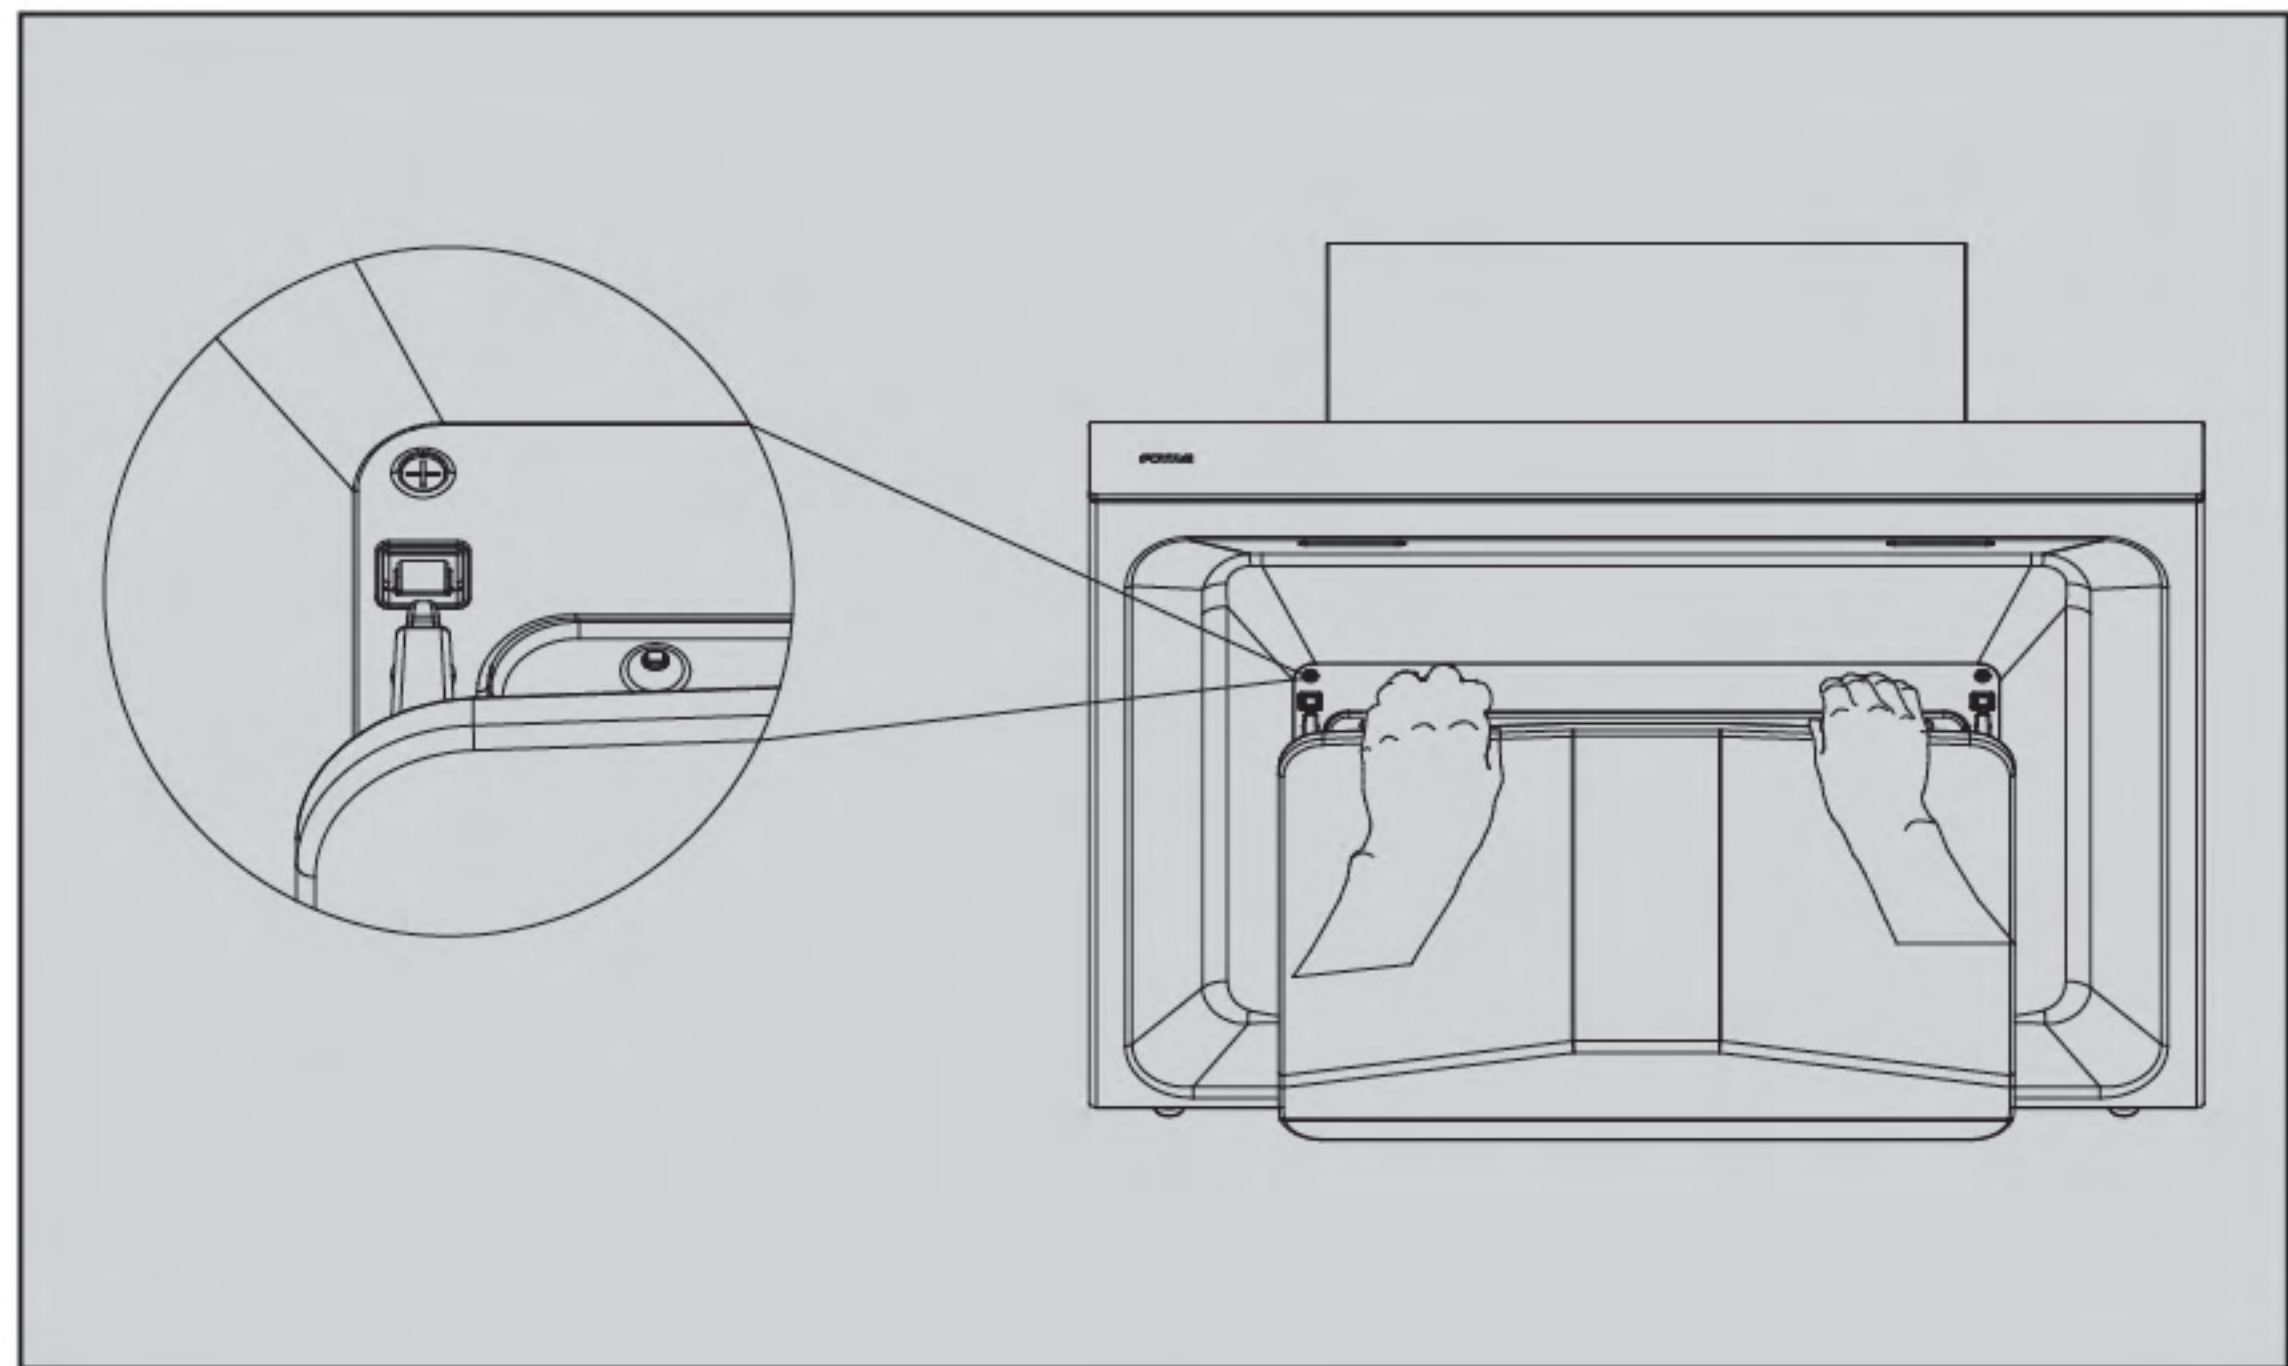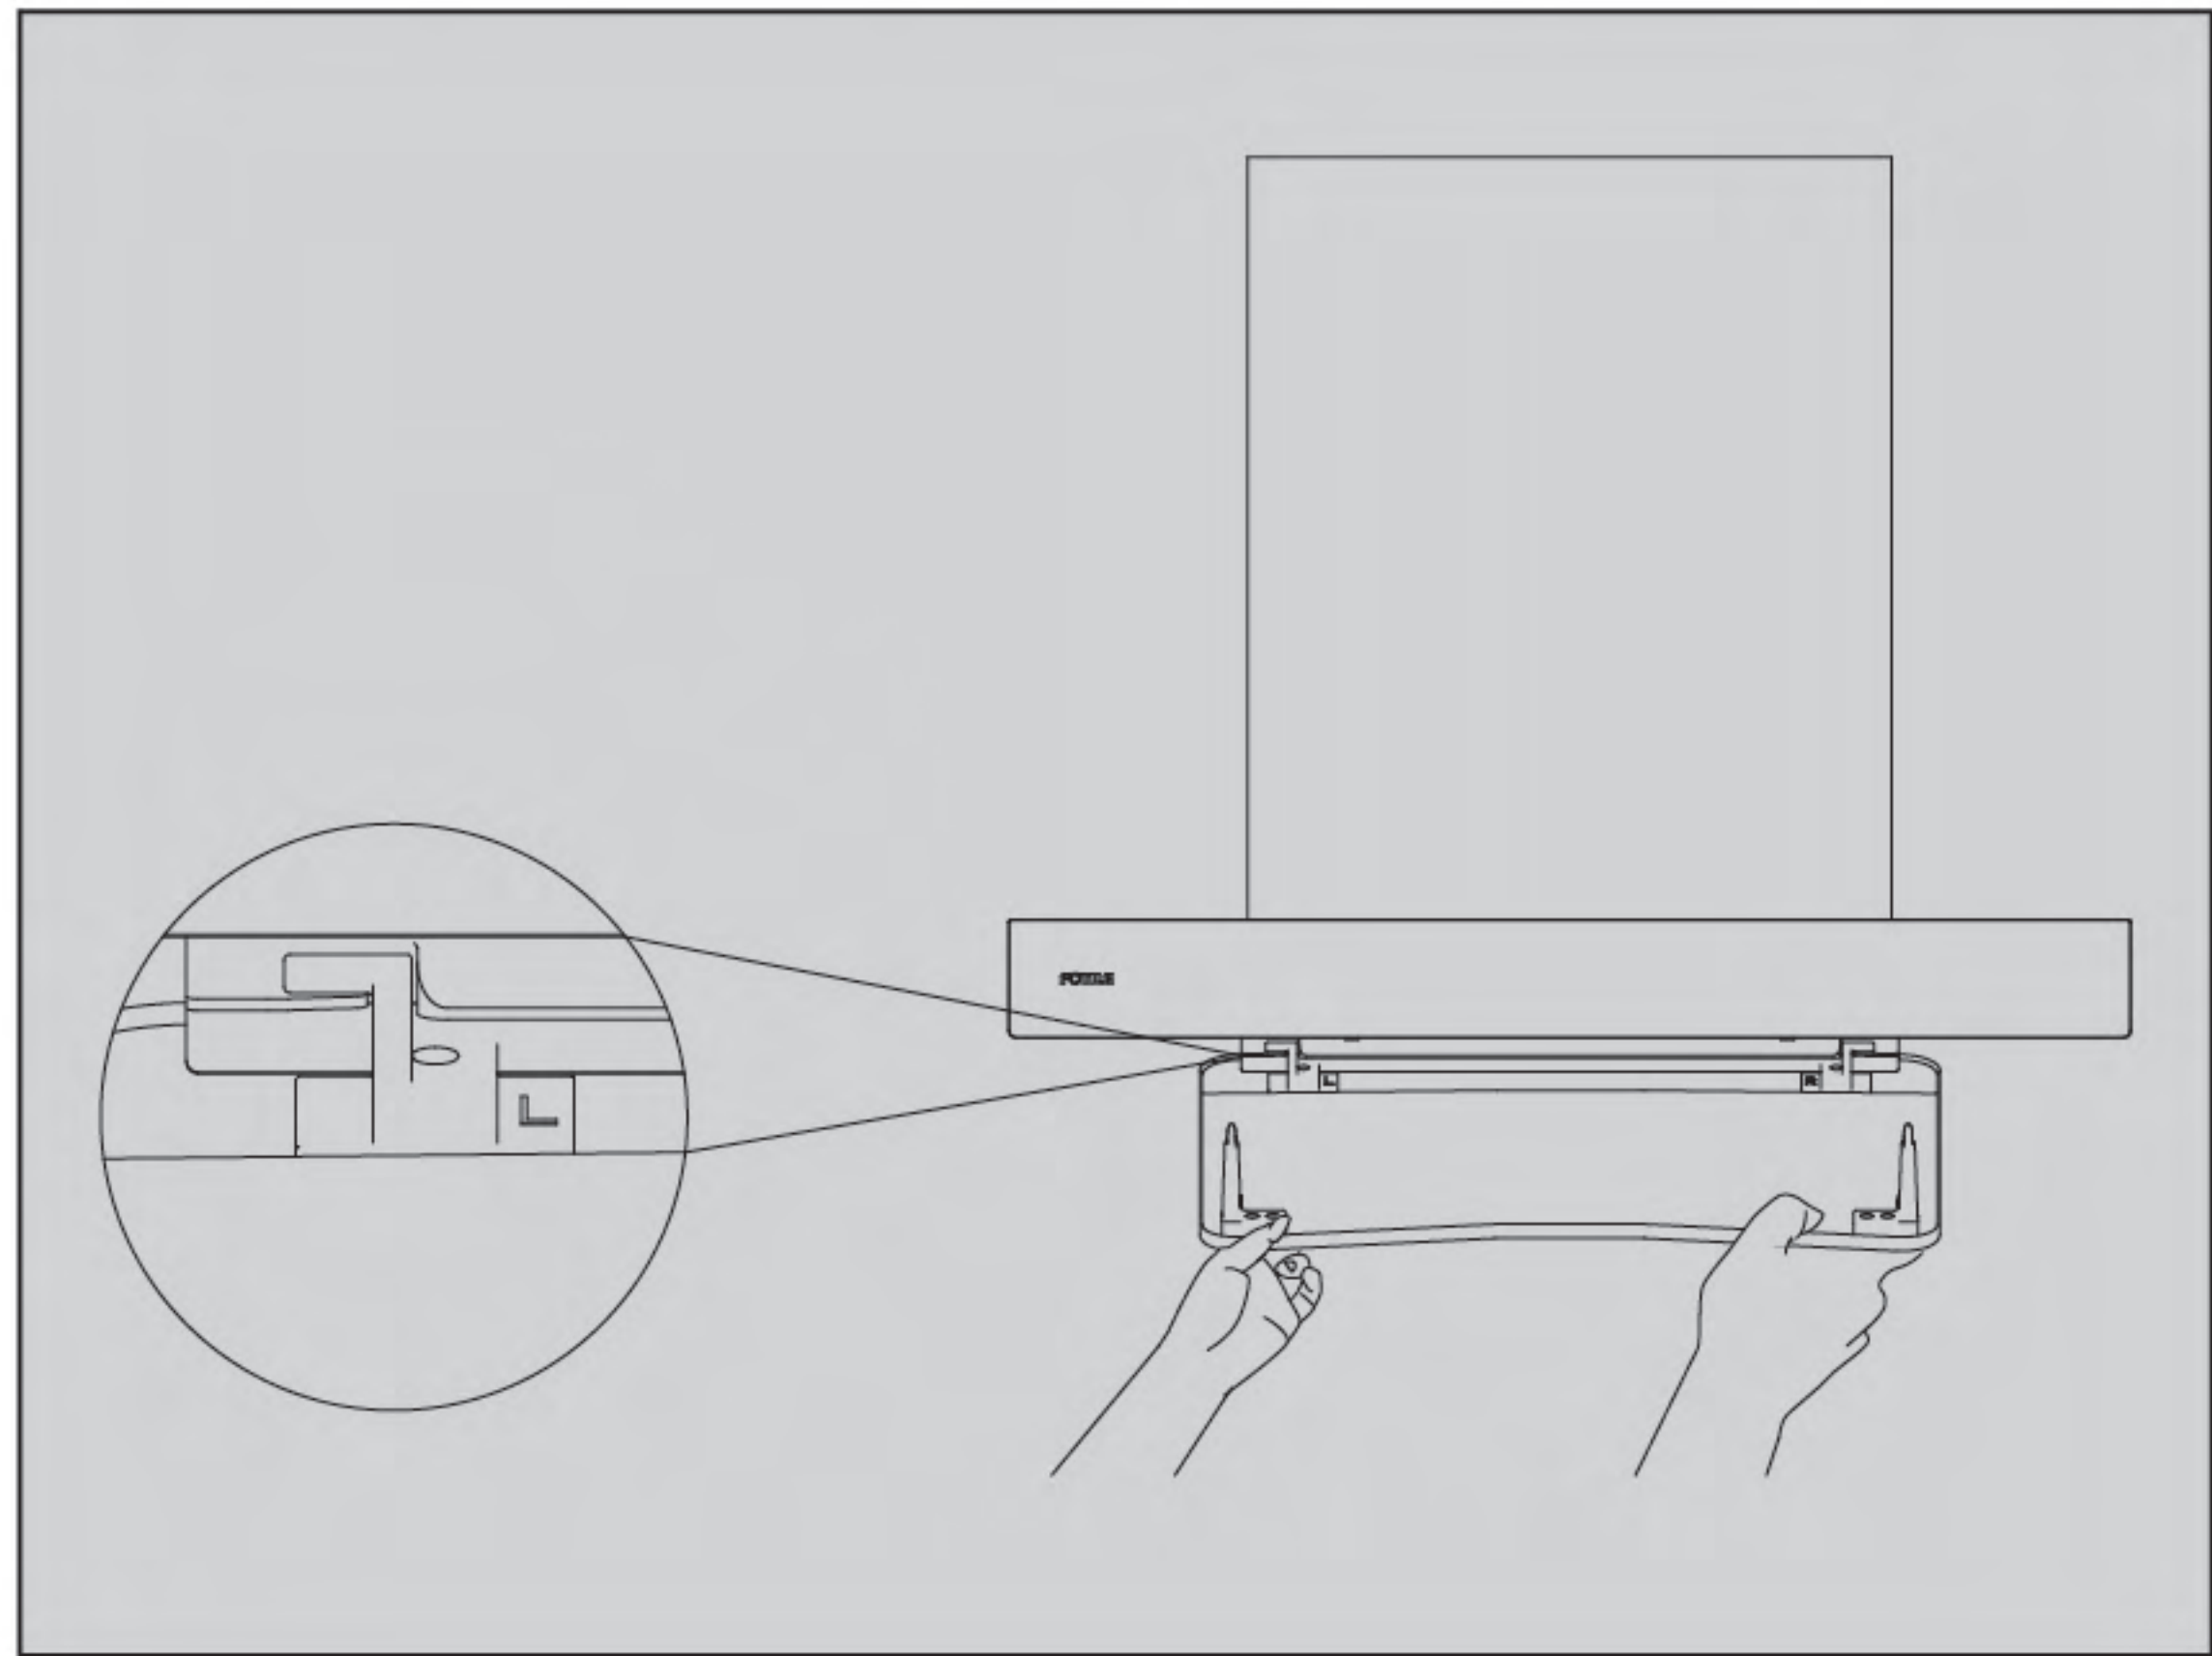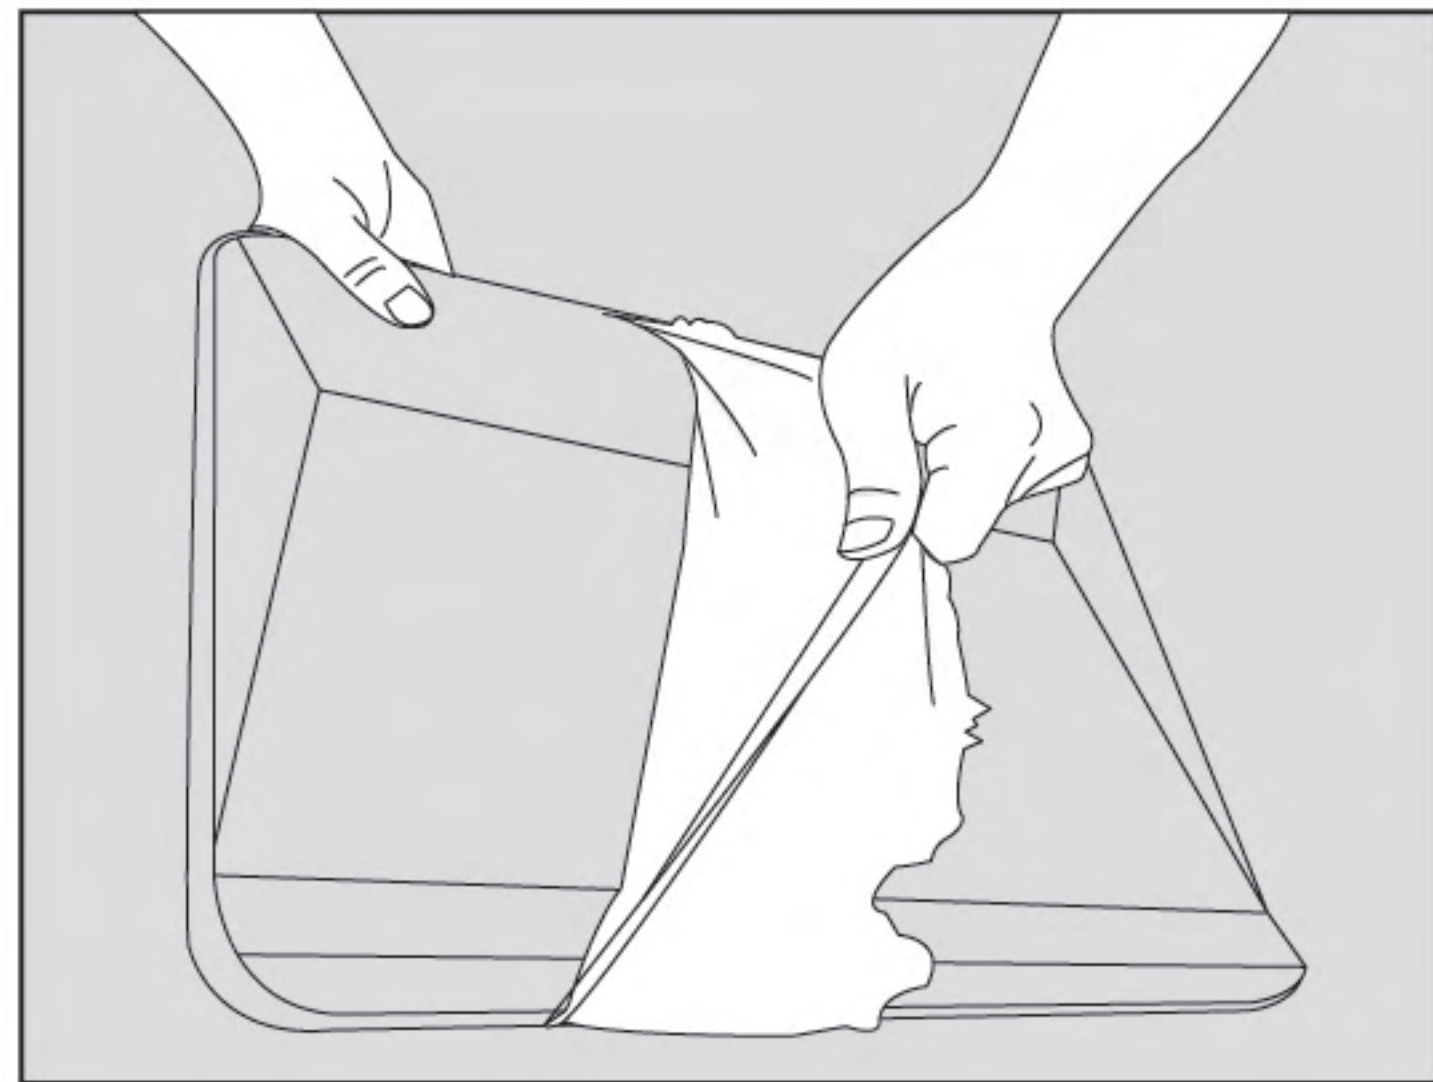

- a.安裝前先取下風機外罩；
- b.根據鑽孔地方的具體情況選定鑽頭。



禁止抽油煙機排出的氣體排到用于排出燃燒燃氣或其他燃料的煙霧使用的熱煙道中。

安裝后的調試

- 1. 輕觸 鍵，檢查抽油煙機是否開啓，再輕觸 鍵，檢查照明是否正常工作。
- 2. 再輕觸 鍵或 鍵，檢測電機轉動是否正常，如出現下列異常情況，應立即切斷電源，停止運轉，並檢查是否安裝緣故（若確定抽油煙機發生故障，請致電方太授權的服務中心）。
  - (1) 機體震動劇烈
  - (2) 膨脹管鬆動
  - (3) 葉輪不轉動
  - (4) 葉輪轉動時明顯的摩擦聲
  - (5) 電機出現異常聲響
- 3. 按照操作說明，檢查所有按鍵功能是否正常。（若確定吸油煙機發生故障，請致電方太授權的服務中心）。

正確處理本產品



此標記表示本產品不應與其他家庭垃圾一起處理。為防止不合理的廢品處理可能會對環境或人類健康造成危害，需要對本產品合理回收利用，以促進材料、資源的可持續利用發展。如您需要退回使用過的機器，請使用回收采集系統或聯系相關零售商，他們會把機器環保、安全的回收利用。

清洗保養

1. 清潔維護注意事項


為了更加舒適地使用，請經常對抽油煙機表面進行清潔，這有利于抽油煙機的正常使

- 1. 只用中性皂或者中性洗滌劑進行清潔，清潔后用柔軟的布擦干機體表面。
- 2. 如果抽油煙機表面有污點，使用中性清潔劑清潔，並避免清潔劑接觸各按鍵。把清潔劑滴至污點處并短暫停留（清潔劑不要在機體上停留過長時間，那樣將造成損害），使用柔軟的抹布將污點擦去，用微濕的毛巾將清潔劑除去，然後再用柔軟的干毛巾將機體擦干。
- 3. 不要讓污漬在抽油煙機表面停留時間過長。
- 4. 如不小心將含鹽的溶液、消毒劑、漂白粉以及其他清潔劑沾到不銹鋼面板，應立即用濕布擦拭。




- a.如果不按說明書規定的方法清潔，抽油煙機有起火的危險。
- b.當清潔、維修抽油煙機前，務必先拔掉電源線插頭，以免觸電。
- c.清潔時應防止摩打、各控制鍵等電器零件進水。
- d.當風機在使用時，禁止將手放入風機運行區域。
- e.切勿使用汽油、酸性物質、苯、溶劑或任何其他化學藥劑清洗抽油煙機。
- f.請不要使用清潔球、刷子以及粗布等粗糙物進行清潔，以防止劃傷機體表面。

II. 常規清潔

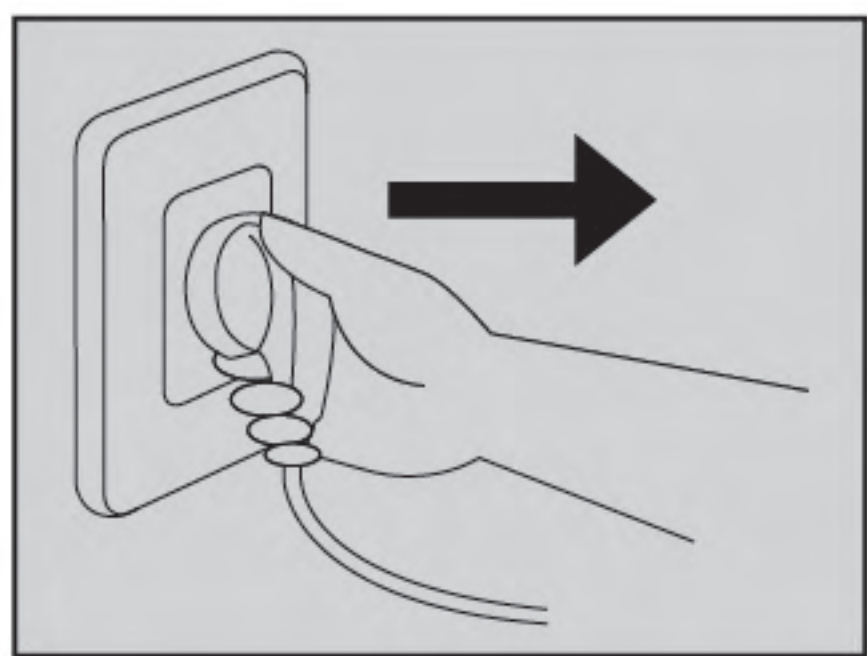


1.進行清潔之前斷開電源。

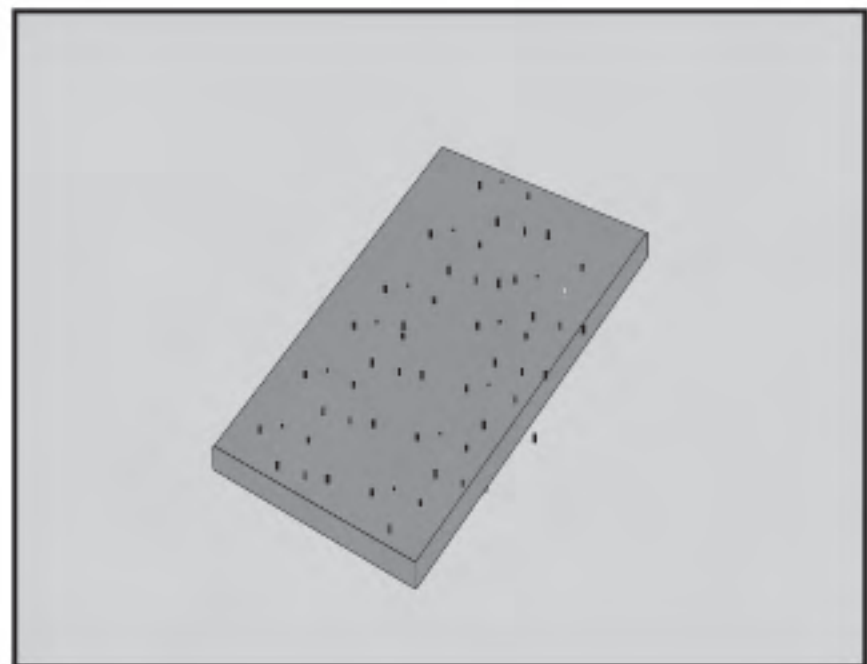

3.請勿使用粗糙材料(例如鋼絲球、刷子或粗布等)清潔產品表面。否則將嚴重劃傷表面。




5.如不銹鋼面板沾有含鹽液體、消毒劑、漂白粉和其他清潔劑，請立即使用濕布將其擦淨，然後使用干布將其擦干。

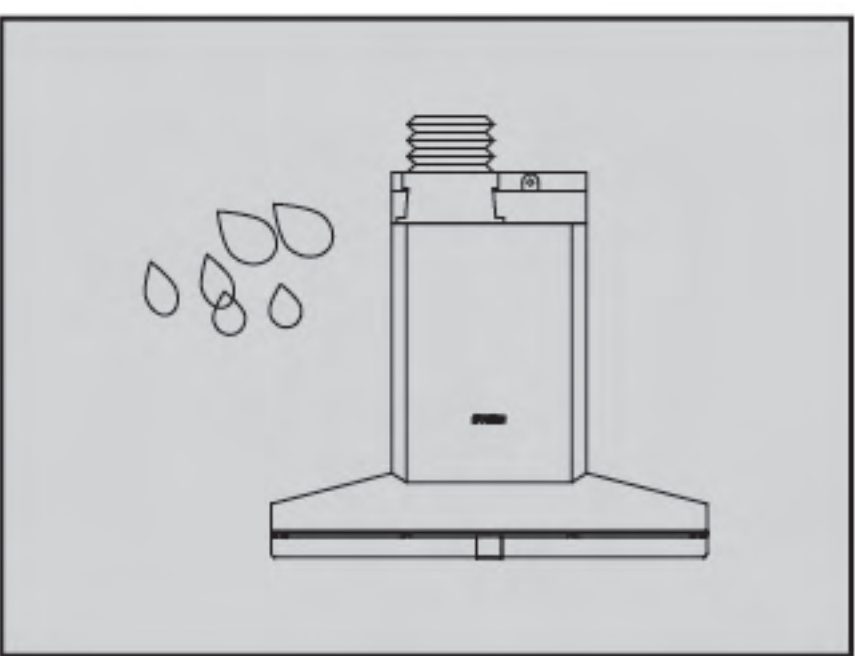



2.所有電子原件(包括摩打和開關等)均需遠離水源。



4.請勿使用汽油、酸性物質、苯、溶劑和其他化學試劑進行清潔。如需清潔產品，請使用中性的清潔劑並在清潔後使用軟布將產品表面擦干。

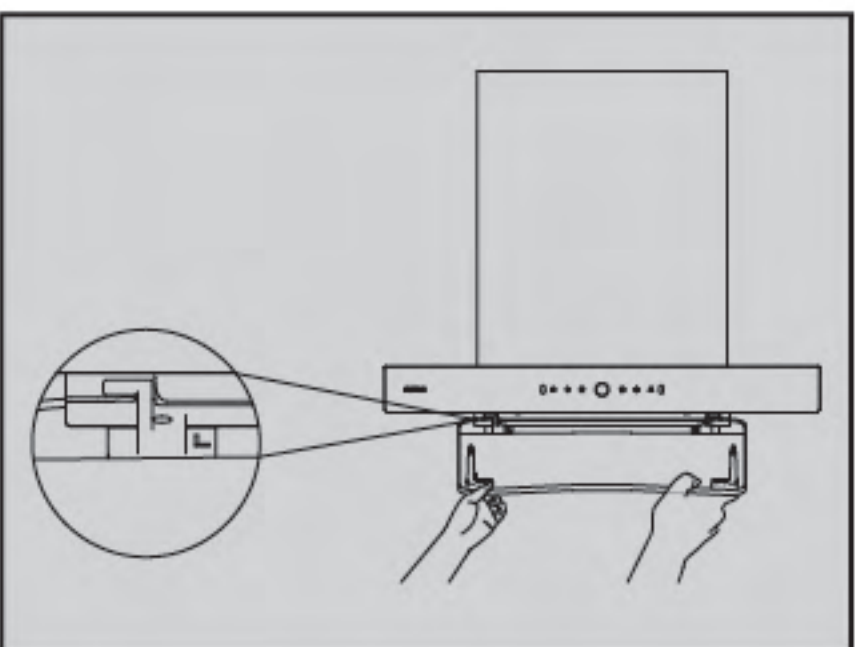

6.首先，用雙手抓住蝶翼板前沿，向下翻轉，使蝶翼板卡爪脫離，然後向下翻轉一定角度，最後雙手平端着蝶翼板向外取出。

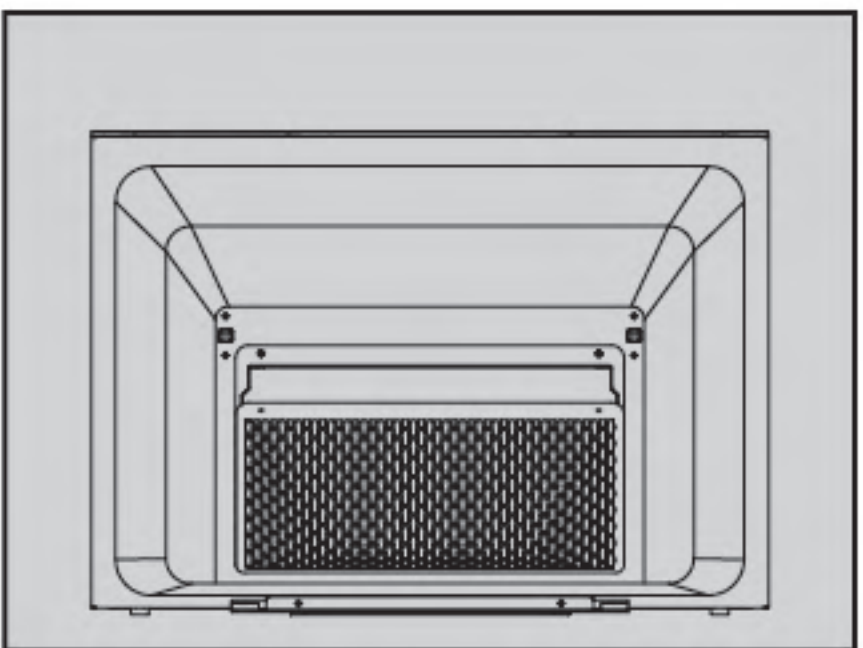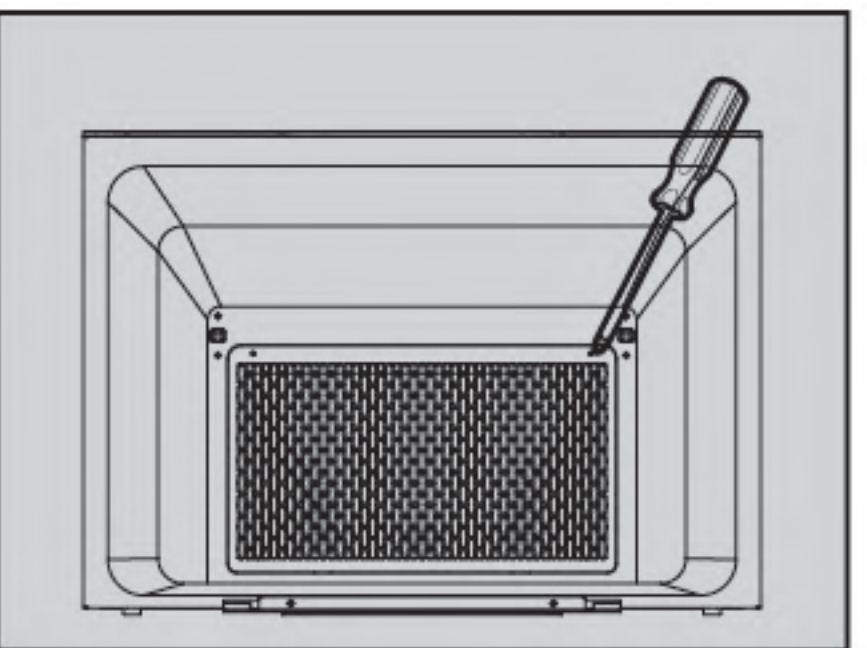

7.用左手拖住油網，右手用十字螺絲刀打開固定油網的兩顆螺釘，取下油網。



- a.當清潔、維修抽油煙機前，務必先拔掉電源綫插頭，以免觸電。
- b.每次使用抽油煙機後，請擦拭抽油煙機外表面並將擋煙板關閉。
- c.所用燈為LED燈：燈功率為3W，電壓範圍為12V，燈尺寸為寬度72mm/深度19mm/高度21mm。

使用方法

主要技術參數

電參數

| 型號      | 電壓/頻率         | 整機功率 | 摩打功率 | LED燈功率 |
|---------|---------------|------|------|--------|
| EMG7509 | 220~240V/50Hz | 290W | 284W | 3W×2   |


外排性能參數

|           |         |      |                            |     |     |  |
|-----------|---------|------|----------------------------|-----|-----|--|
| 型號        | EMG7509 | 產品尺寸 | 758mm(L)×540mm(W)×595mm(H) |     |     |  |
| 最大靜壓值(Pa) |         | 1000 |                            |     |     |  |
| 檔位        |         | 超強檔  | 高檔                         | 中檔  | 低檔  |  |
| 風量(m³/h)  |         | 1090 | 900                        | 710 | 470 |  |
| 噪音(dB(A)) |         | 57   | 52                         | 46  | 37  |  |



- a. 所示噪音值為聲壓級噪音，對應聲功率級噪音為：弱檔49 dB(A)，中檔58 dB(A)，高檔64 dB(A) 和超強檔69 dB(A)。
- b. 風量測試按照IEC 61591標準。噪音測試按照IEC 60704標準。

操作說明

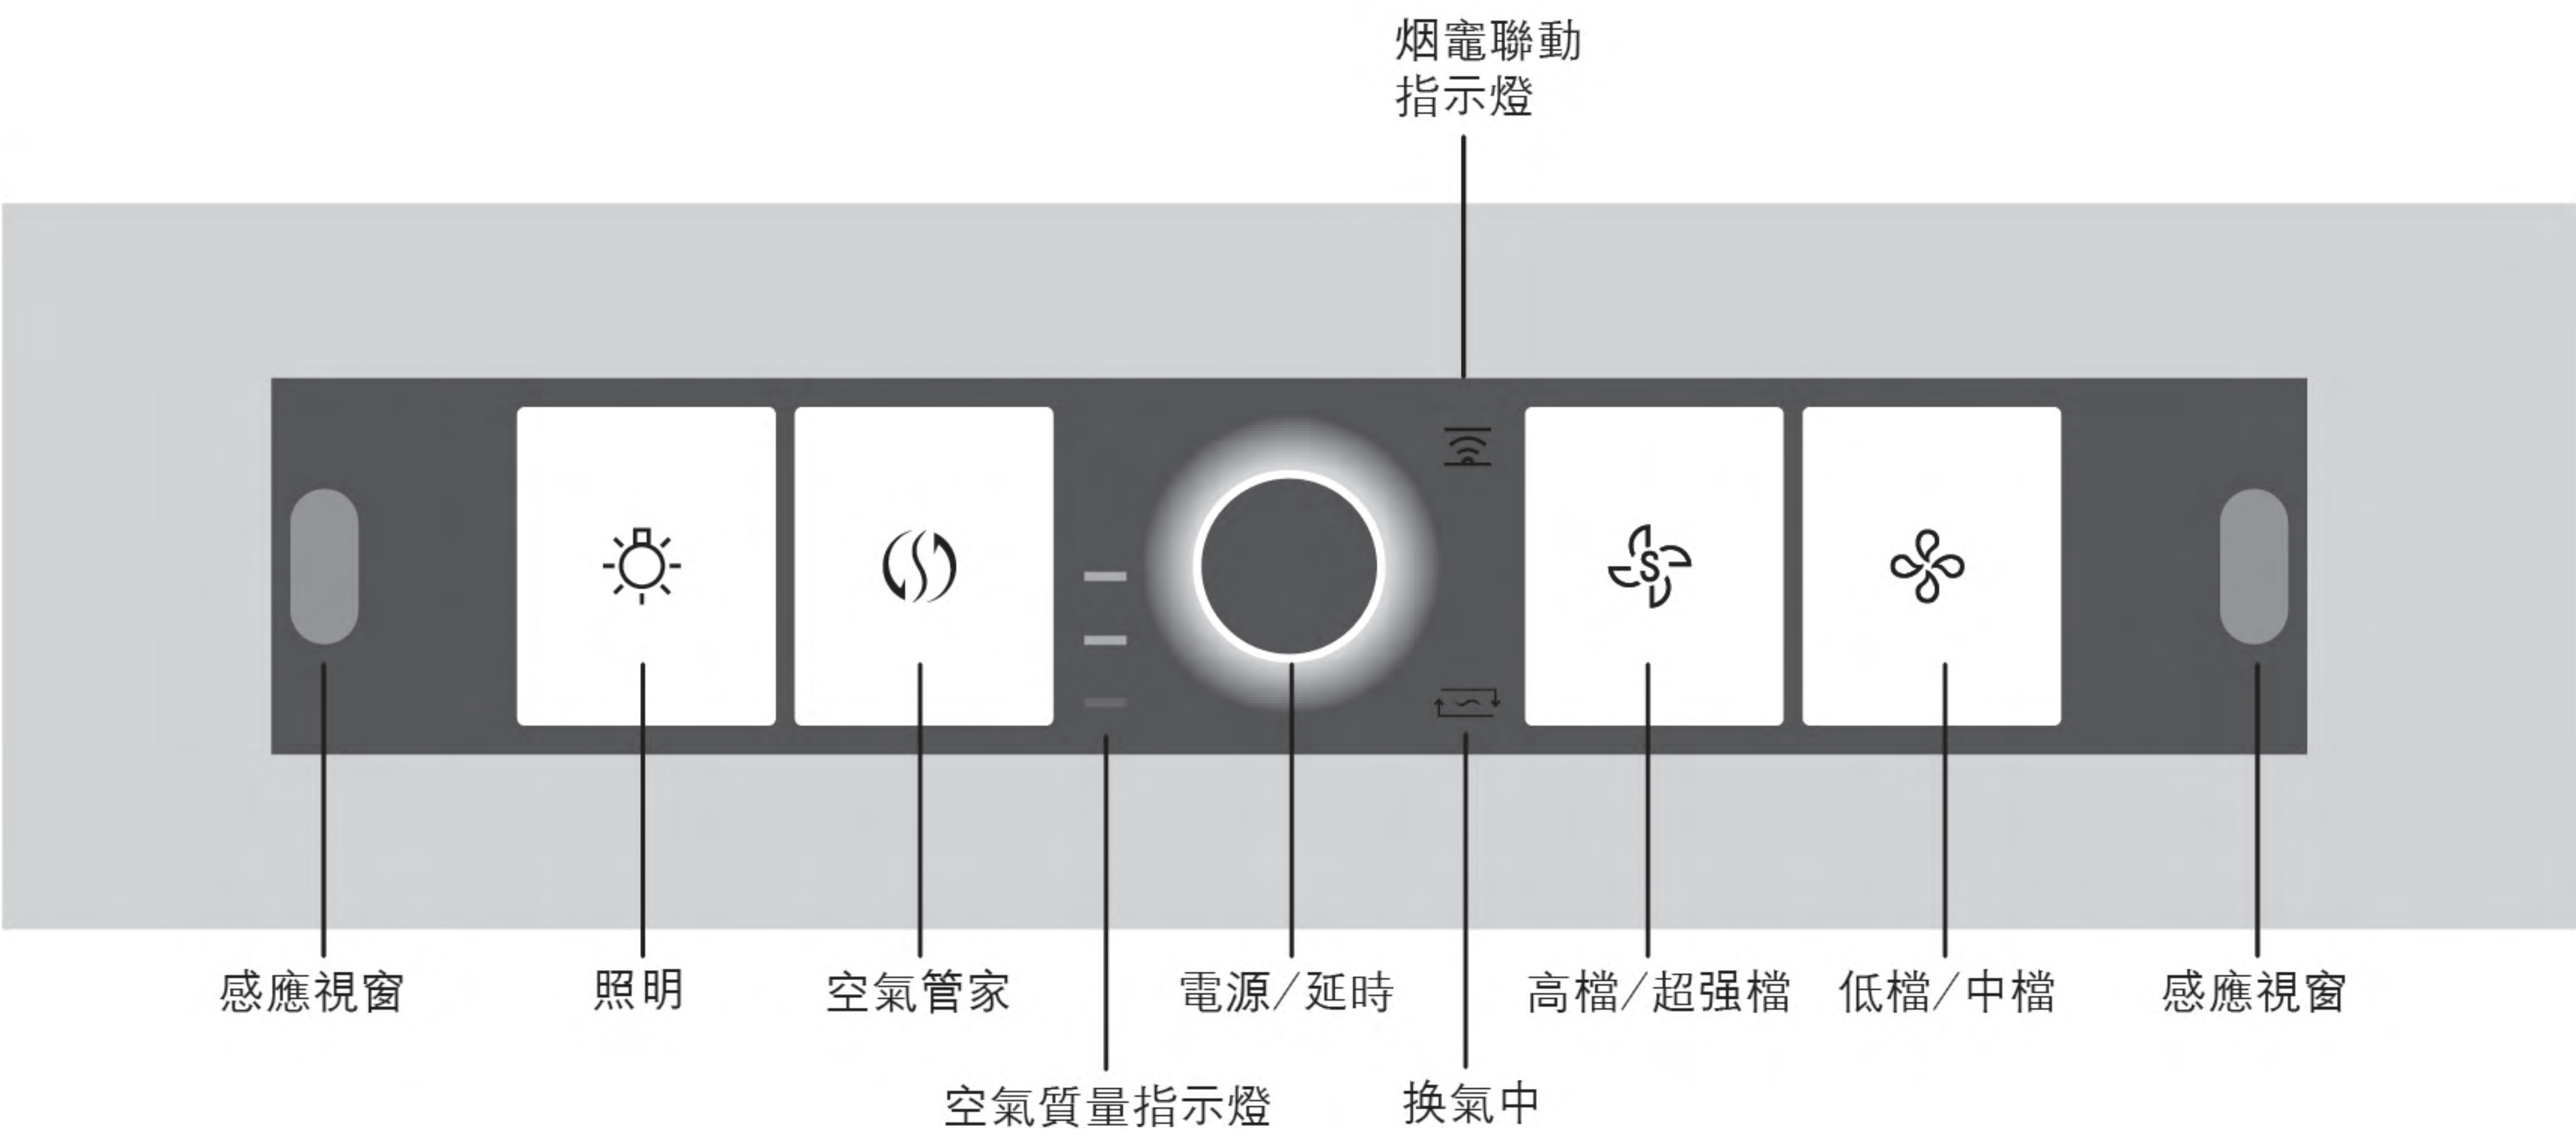


## ■ 手勢功能

在關機狀態下，揮手快速經過操作面板兩端感應窗口，抽油煙機啓動高檔運行，并打開照明燈；

再次揮手快速經過操作面板兩端感應窗口，電源/延時鍵○指示燈閃爍，抽油煙機處于延時關機狀態，照明燈保持原先狀態，風機以當前狀態運行1分鐘后，切換到低檔運行4分鐘，然后進入關機狀態。

在關機狀態下，同時按下照明燈鍵☀️和低檔/中檔鍵🌀5秒，控制板上所有按鍵點亮1秒后熄滅，開啓/關閉手勢感應功能。

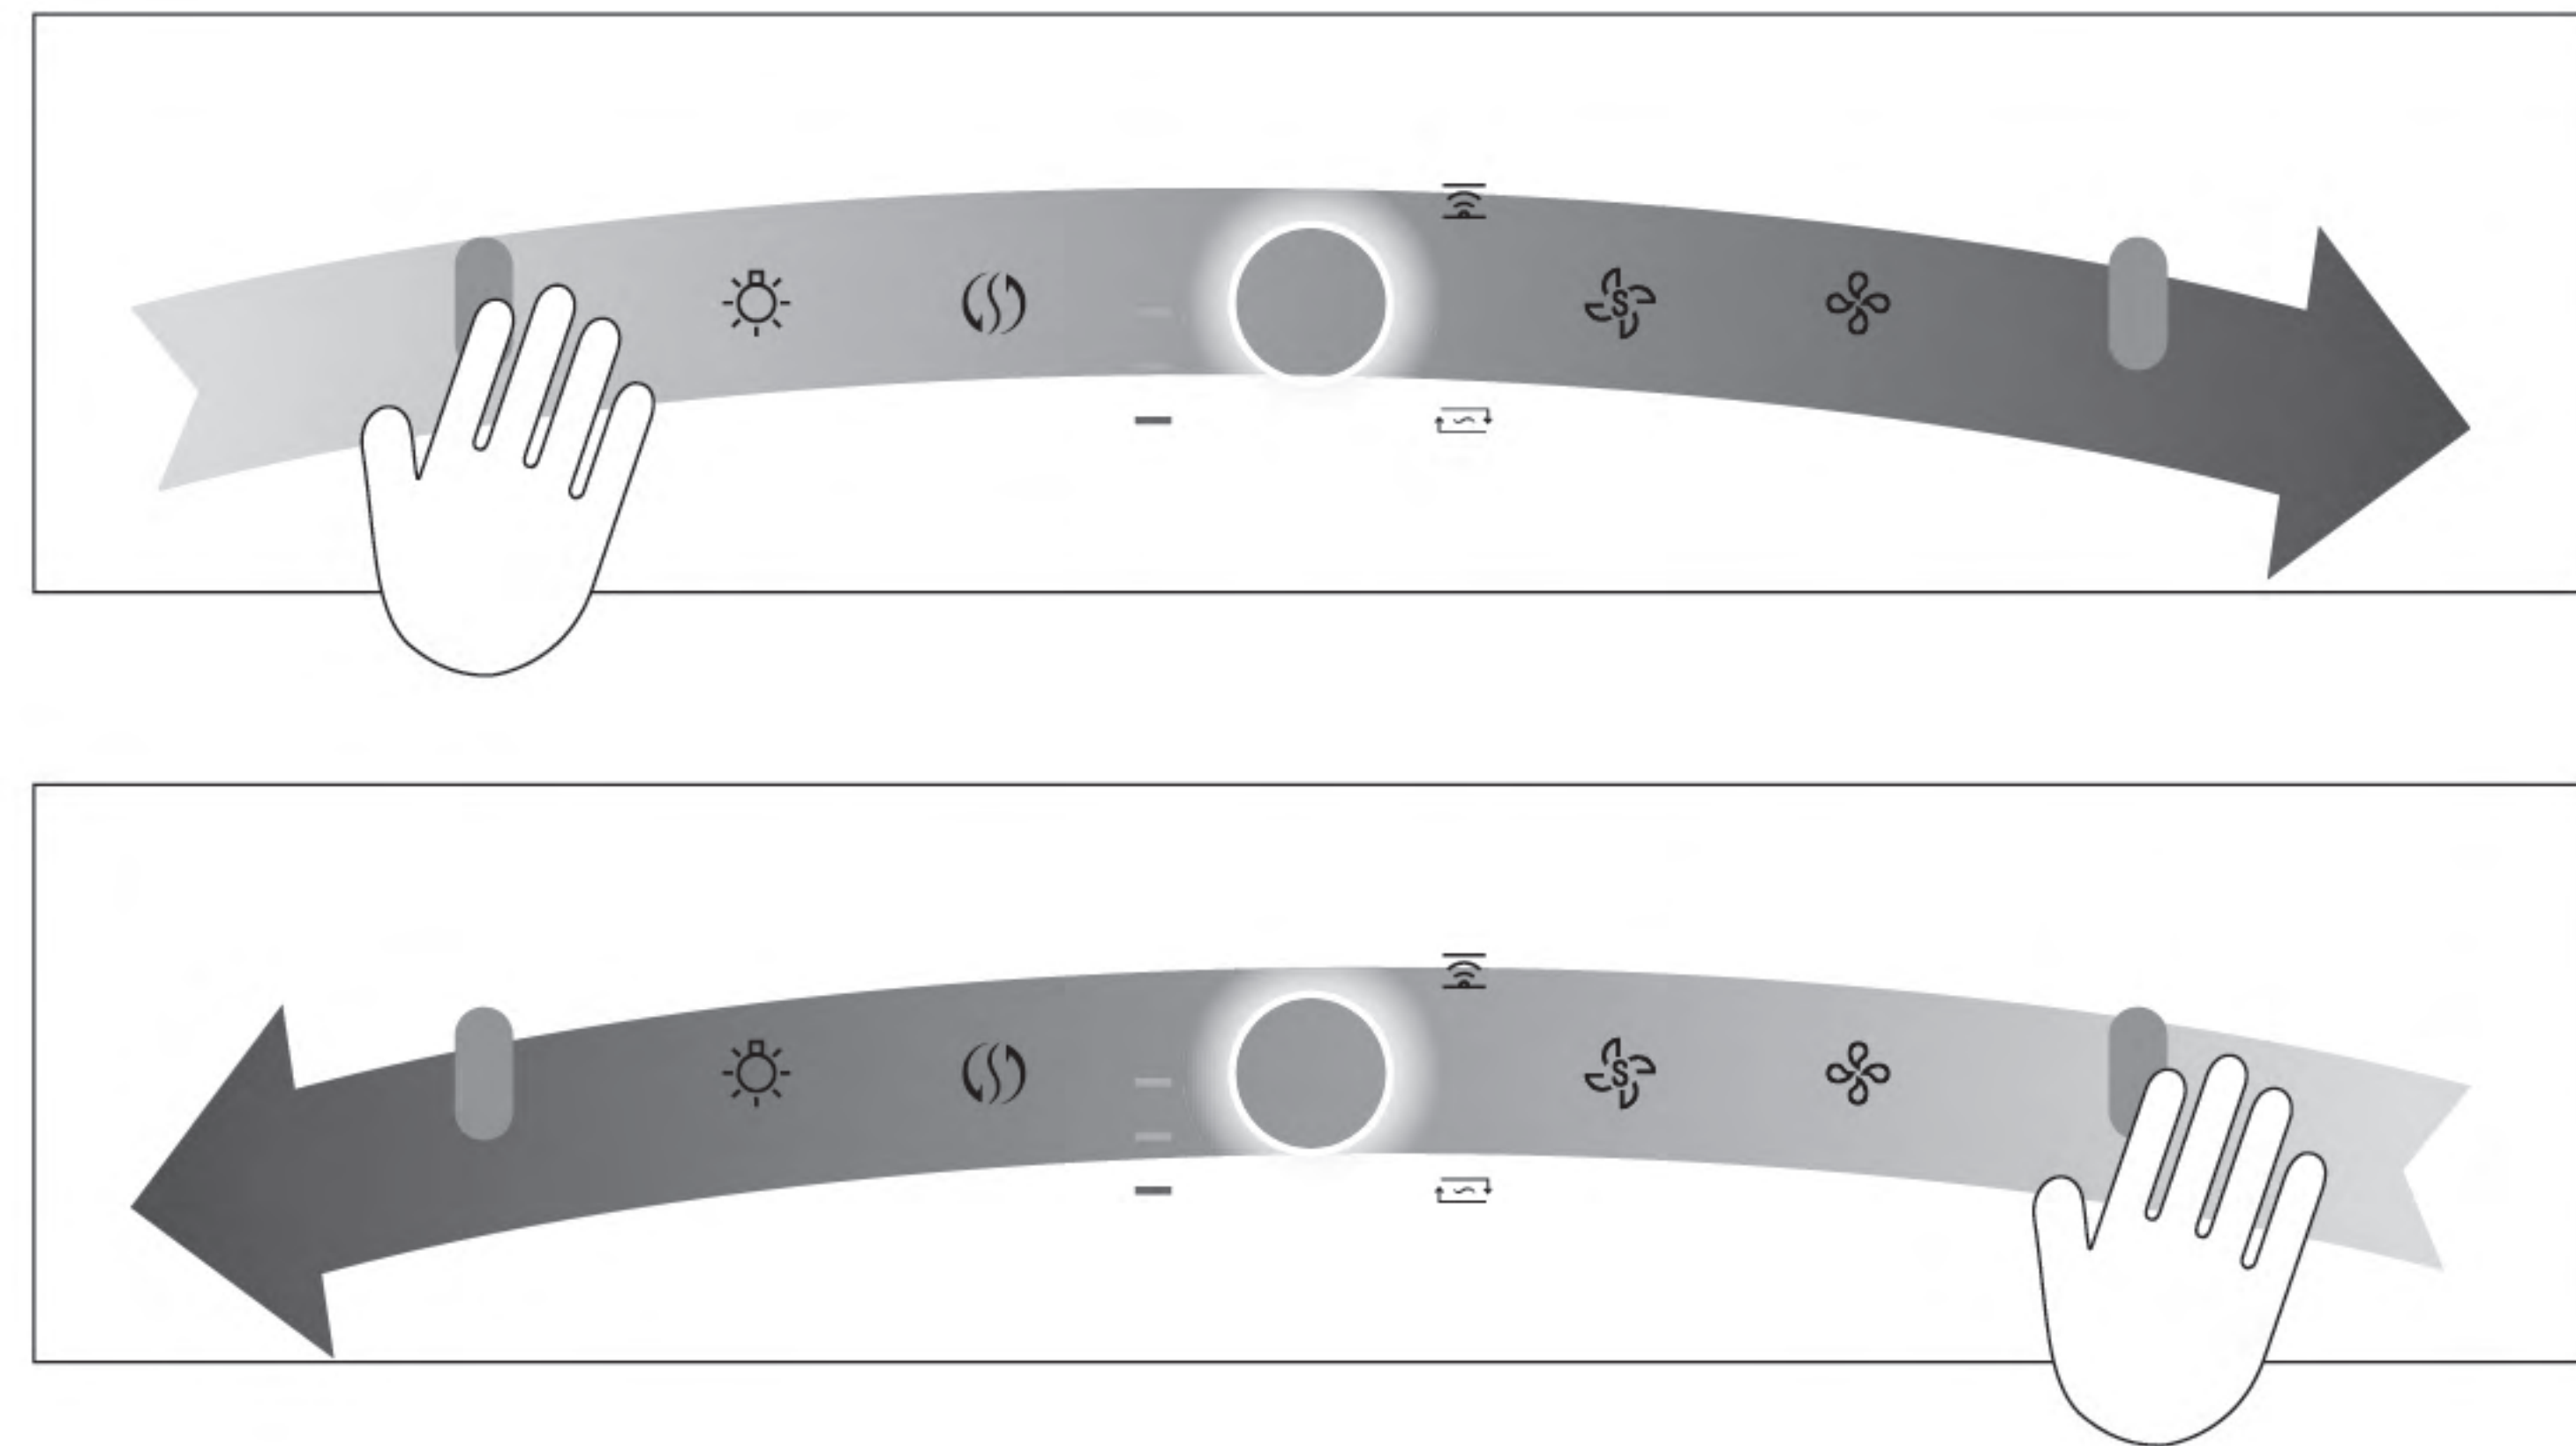

## ■ 電源/延時鍵 ○

在關機狀態下輕觸一下電源/延時鍵，抽油煙機進入待機狀態，電源/延時鍵指示燈全亮，其他按鍵指示燈微亮；在工作狀態下，輕觸一下電源/延時鍵，電源/延時鍵指示燈閃爍，抽油煙機處于延時關機狀態，照明燈保持原先狀態，風機以當前狀態運行1分鐘后，切換到低檔運行4分鐘，然后進入關機狀態。

在待機狀態或延時關機狀態下，輕觸一下電源/延時鍵保持微亮，其他所有按鍵燈熄滅，抽油煙機關機。

以下所有按鍵命令須在待機狀態下進行：

### ■ 高檔/超強檔鍵 🌀

輕觸一下高檔/超強檔鍵，高檔/超強檔指示燈半亮，抽油煙機在高檔運行；再輕觸一下高檔/超強檔鍵，高檔/超強檔指示燈全亮且閃爍，油煙機在超強檔運行，100秒后抽油煙機回到高檔運行，高檔/超強檔指示燈半亮。

抽油煙機在超強檔運行時，再輕觸一下高檔/超強檔鍵，高檔/超強檔指示燈微亮，抽油煙機停止運轉。

### ■ 低檔/中檔鍵 🌀

輕觸一下低檔/中檔鍵，低檔/中檔指示燈半亮，抽油煙機在低檔運行；再輕觸一下低檔/中檔鍵，低檔/中檔指示燈全亮，抽油煙機在中檔運行；再輕觸一下低檔/中檔鍵，低檔/中檔指示燈微亮，抽油煙機停止運轉。

### ■ 照明燈鍵 ☀️

輕觸一下照明燈鍵，照明燈打開全亮

說明：全亮狀態下，再次輕觸照明燈鍵，照明燈依次在全亮、半亮、夜燈、關閉狀態中切換。

## ■ 空氣管家 (S)

輕觸空氣管家鍵，按鍵閃爍，抽油煙機進入智能檢測空氣質量狀態；檢測到空氣質量好時，空氣質量指示燈綠色亮起，風機不運轉；檢測到空氣質量較差時，空氣質量指示燈黃色和“換氣中”指示燈亮起，風機低檔運行；檢測到空氣質量差時，空氣質量指示燈紅色和“換氣中”指示燈亮起，風機高檔運行。

在風機不工作且空氣管家關閉時，長按空氣管家鍵3秒，按鍵半亮，進入鎖屏狀態，所有按鍵及手勢功能被鎖住，觸按無效；再長按空氣管家鍵3秒，退出鎖屏狀態。

## 關於吸油煙機與竈具一體控制的說明



如果您同時購買了方太公司的具有煙竈聯動功能的抽油煙機和竈具，那么您可以享用我們的抽油煙機和竈具聯動功能！

### 使用方法：

1. 對碼連接（實現聯動之前需要進行抽油煙機和燃氣竈具的對碼連接）

(1) 抽油煙機和燃氣竈具安裝好并通電，同時確保竈具旋鈕都處于關閉狀態；

(2) 輕觸○，啓動抽油煙機，使其處于待機狀態或工作狀態，長按☀️照明燈鍵5秒，抽油煙機“嘀”一聲，同時煙竈聯動指示圖標☰閃爍，進入配對狀態。在此狀態下打開爐具旋鈕，等待片刻，當抽油煙機“嘀”一聲，同時☰常亮，表示對碼完成。

⚠️注意：如果您的抽油煙機或爐具的電控板維修或更換，請重新對碼，操作方法同上述。

2. 對碼成功后，可以實現抽油煙機與燃氣竈具的聯動功能

當燃氣竈具點火后，抽油煙機自動開啓，風機強檔運行，同時照明燈開啓；

當燃氣竈具關閉后，抽油煙機進入延時狀態。

3. 解除煙竈聯動配對

(1) 使抽油煙機和竈具通電，并確保竈具旋鈕都處于關閉狀態；

(2) 輕觸○，啓動抽油煙機，使其處于待機狀態或工作狀態，長按☀️照明燈鍵5秒，抽油煙機“嘀”一聲，同時煙竈聯動指示圖標☰閃爍，進入解除狀態。在此狀態下打開爐具旋鈕，等待片刻，當抽油煙機“嘀 嘀”兩聲，同時☰熄滅，表示解除完成。

⚠️提示：

1. 待機狀態下2分鐘沒有操作，抽油煙機會自動關機；

2. 建議蒸煮時開啓抽油煙機，保持廚房空氣清新，否則較多水蒸氣經過感應窗口可能會觸發手勢功能。

常見故障的識別和處理

| 故障現象               | 可能原因                | 檢修方法                    |
|--------------------|---------------------|-------------------------|
| 按開關，抽油煙機不工作，LED燈不亮 | 未接通電源               | 檢查電源插頭是否插好              |
|                    |                     | 檢查插座是否有電                |
| 電機轉動但LED燈不亮        | LED燈損壞              | 更換LED燈（本項必須由專業人員進行）     |
| 有機械振動噪聲            | 螺釘松動                | 檢查吸油煙機表面螺釘是否擰緊          |
| 吸力不强               | 吸油煙機與竈面的安裝距離太大      | 降低吸油煙機安裝高度（本項必須由專業人員進行） |
|                    | 吸油煙機周圍環境門窗通風太多，對流太大 | 關閉部分門窗                  |
| 噪聲太大               | 出風管表面凹陷變形           | 重新安裝出風管（本項必須由專業人員進行）    |



- a.更換LED燈，請聯系方太授權的服務中心。

b.上述故障排除后，抽油煙機仍不能正常工作，請聯系方太授權的服務中心。

c.保修期內保修需提供以下信息：

1.購買日期

2.產品型號

3.序列號

4.購買相關憑證

d.其他人員不得擅自維修抽油煙機，以免造成嚴重后果，而且產品將不享受保養服務。

e.以下情況不提供保修服務：

1.用戶搬運、安裝、使用、維護、保管不當而損壞的。

2.超出正常使用條件，強行使用本產品造成的故障和損傷（例如電壓超出264V或低于189V而損壞的）。

3.自行或非方太指定服務人員或服務機構安裝和拆修的產品。

4.購買憑證和保養卡訊息與產品不符的。

5.因不可抗力力造成產品損壞的（如自然災害、戰爭等）。

6.不根據“使用說明書”的規定使用，造成產品故障或損傷的。
- 17
- 18

**FOTILE**

**RANGE HOOD**

User Manual | EMG7509

Any needs,please contact FOTILE service center.  
Some pictures in this manual are sketch map,only  
for reference. If there are some discrepancies,  
please subject to real object.


**WWW.FOTILEGLOBAL.COM**

Dear User, thank you for purchasing the Fotile Range Hood. At Fotile, we manufacture exquisite appliances that are expertly crafted with the finest materials. Before using the Fotile Range Hood, please take some time to read through this Product Manual (manual). It will familiarize you with important safety, operation and maintenance instructions, as well as help maximize your culinary experience.

Before using the Fotile Range Hood, you must follow the instructions, as specified in this manual. Any damage resulting from the improper operation and/or maintenance of the appliance may result in the loss of warranty. The warranty will become invalid, and your warranty application, whether direct or indirect, will not be accepted by authorized service center of Fotile. If you require warranty or post-warranty after-sale service, please contact the local authorized service center of Fotile nearest you.

Your satisfaction with the Fotile brand is important to us. Our after-sales service centers provide assistance in resolving issues with Fotile appliances.

If you need service, please provide the product model and serial number on the product nameplate. Refer to diagram A below to locate the nameplate on your product.

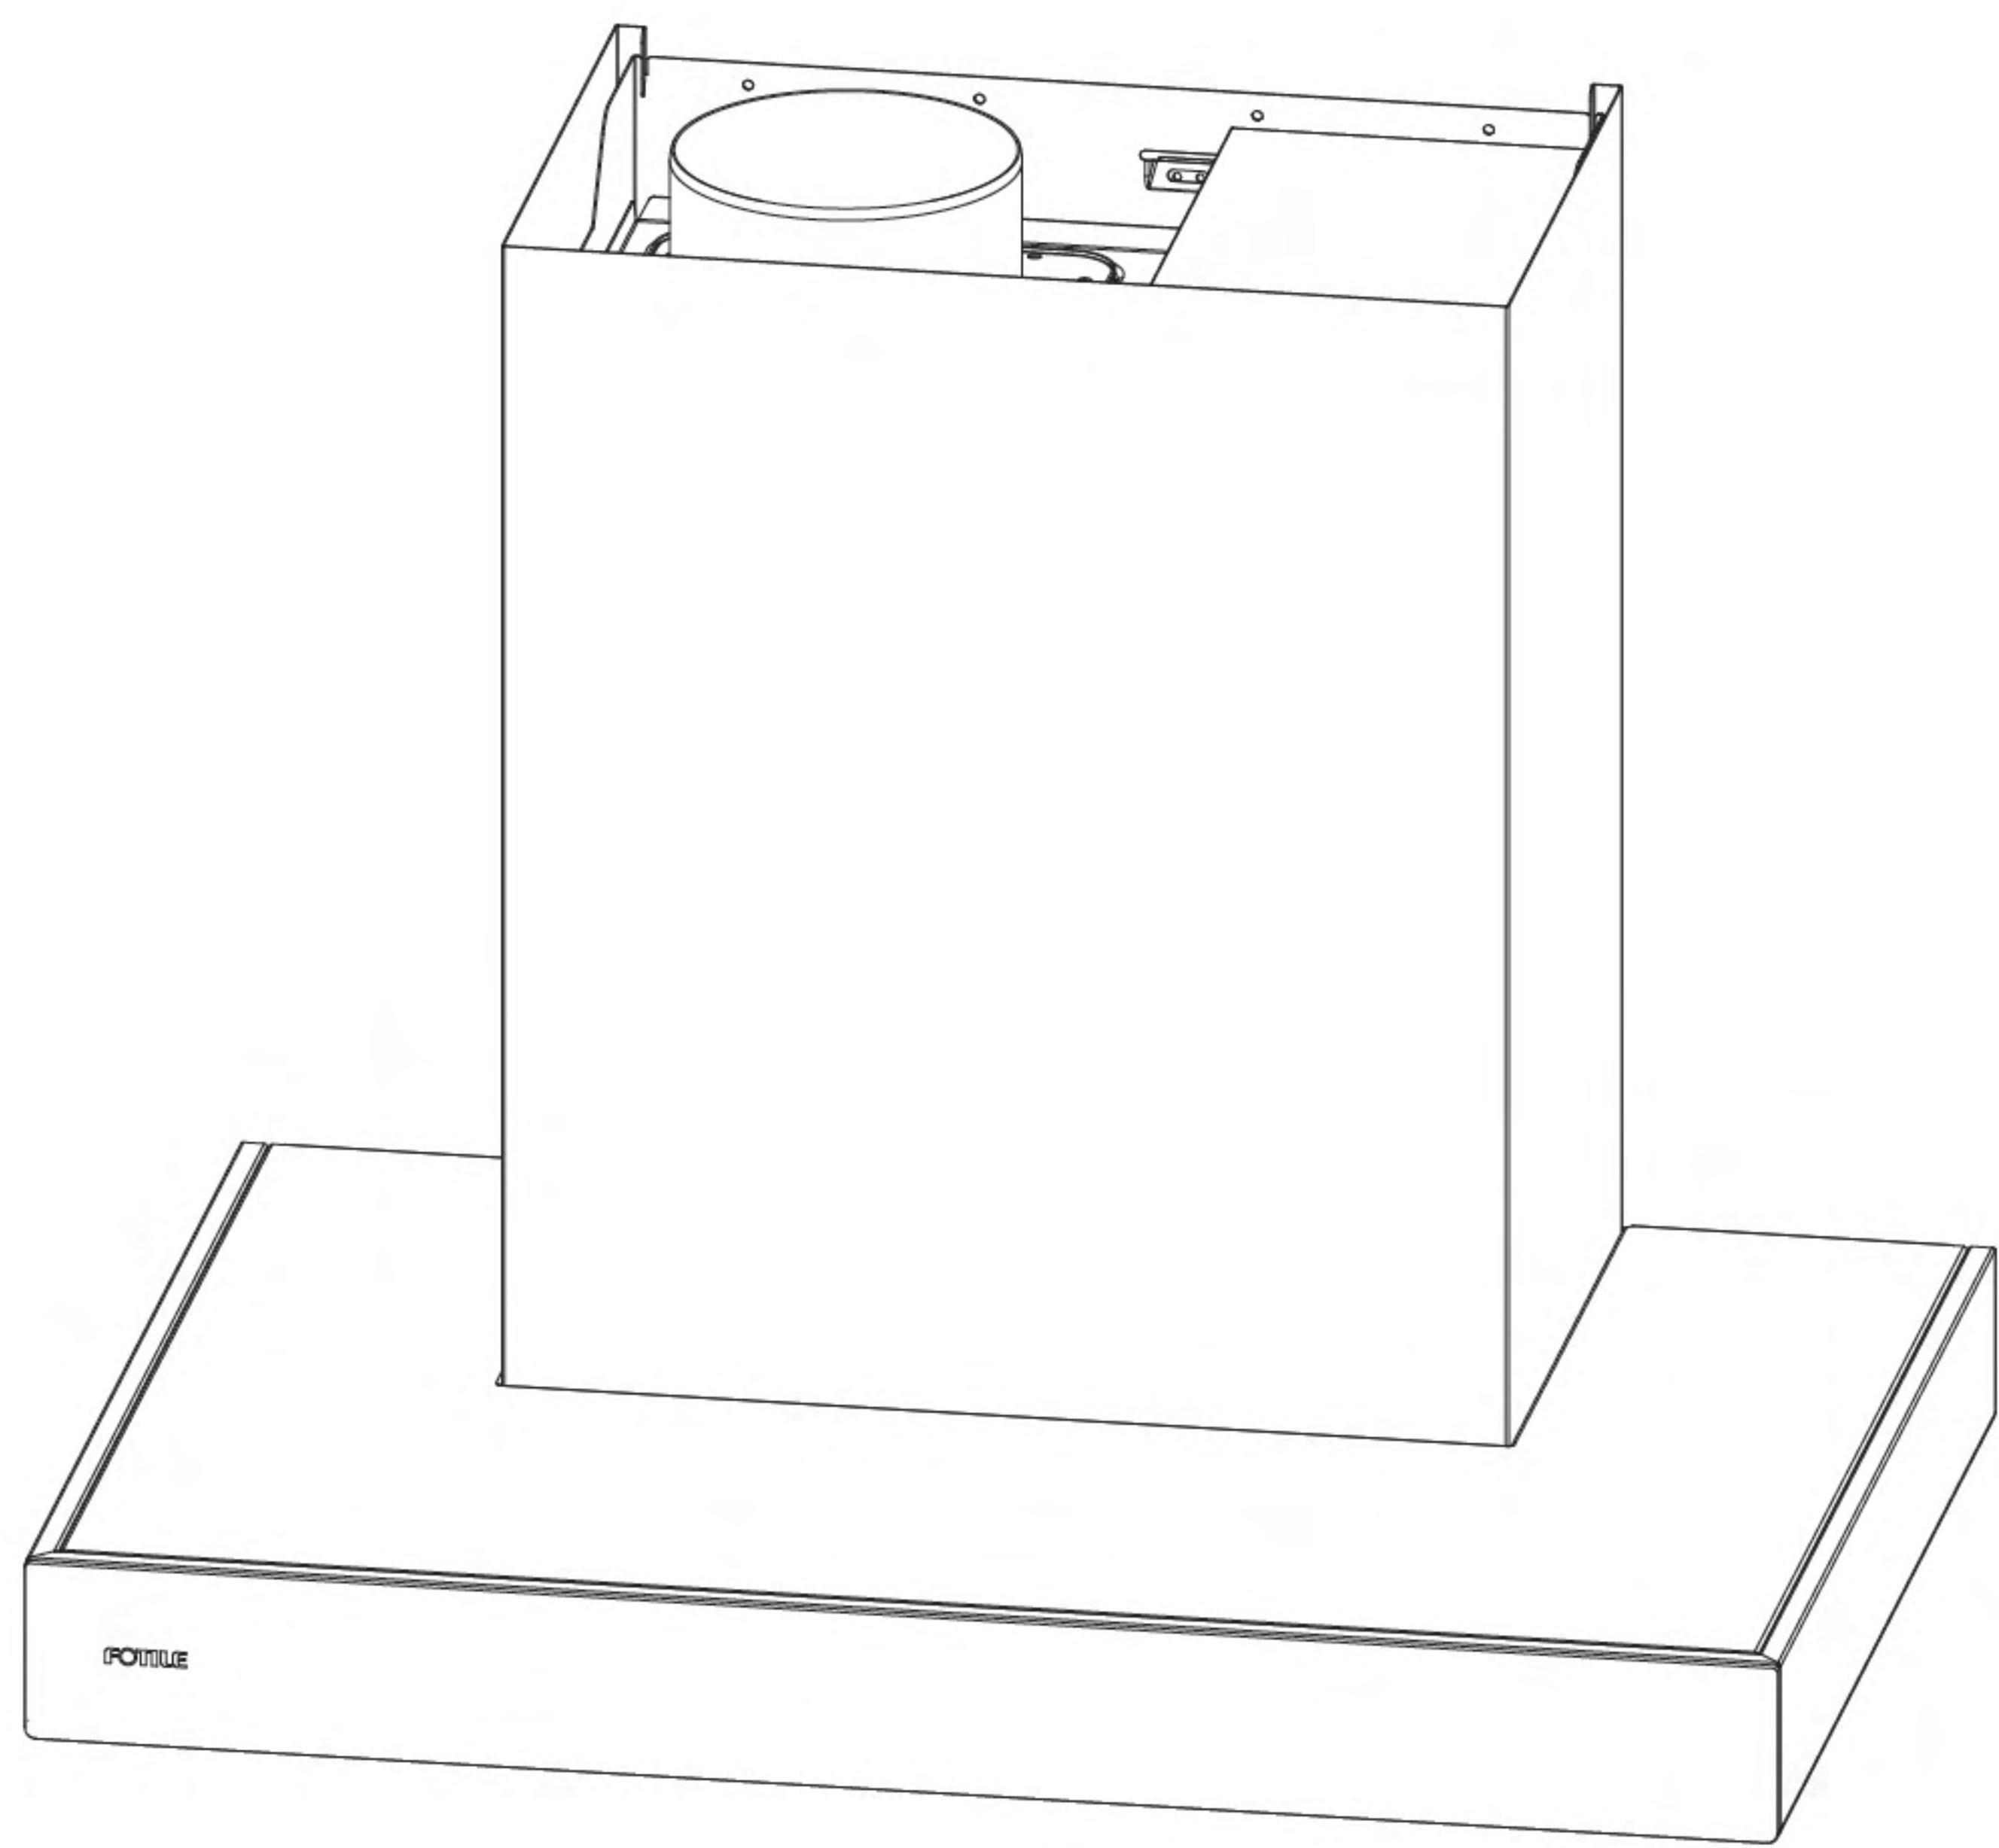

CONTENTS

|                                 |   |
|---------------------------------|---|
| Warning and Safety Instructions | 1 |
|---------------------------------|---|

|              |   |
|--------------|---|
| Installation | 5 |
|--------------|---|

|                          |    |
|--------------------------|----|
| Packing List             | 5  |
| Installation Warning     | 6  |
| Product Basic Conditions | 7  |
| Installation Suggestions | 7  |
| Installation Steps       | 9  |
| Debugging                | 13 |

|                          |    |
|--------------------------|----|
| Cleaning and Maintenance | 14 |
|--------------------------|----|

|       |    |
|-------|----|
| Usage | 16 |
|-------|----|

|                                           |    |
|-------------------------------------------|----|
| Main Technical Specifications             | 16 |
| Operation Instruction                     | 16 |
| Introduction to Hood-hob Linkage Function | 19 |

|                                         |    |
|-----------------------------------------|----|
| Normal Malfunction and Trouble Shooting | 20 |
|-----------------------------------------|----|

Product features and specifications are subject to change, at any time, without notice and may be different from those in this material. Please visit our website at [www.fotileglobal.com](http://www.fotileglobal.com) for the most up-to-date information.

Warning and Safety Instructions

Special version:

Please properly use the appliance, strictly complying with the user manual. FOTILE company will not bear responsibility for property loss and personal injury due to improper use.

Warning:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved (only for EU market).

Children shall not play with appliance.

Cleaning and user maintenance shall not be made by children without supervision.





CAUTION: Accessible parts may become hot when used with cooking appliances.





- a. Pour out the gathering oil periodically; please wipe the range hood surface once after every using the range hood.
- b. Please frequently clean the range hood surface and oil cup.
- c. There is a fire risk if cleaning is not carried out in accordance with the instructions.




Strictly execute


|                                                                                                          |                                                                                                                                                                                                                                                                                                 |
|----------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>Ground Connection | The plug should be connected with reliable ground wire to ensure safety. The ground wire should not be connected with gas pipe, tap water pipe, lightening rod and telephone line. Bad ground connection may cause electric shock or other accidents.                                           |
|                       | This appliance incorporates an earth connection for functional purposes only.                                                                                                                                                                                                                   |
|                       | Because the installation procedure of the range hood is complex, and the weight is heavier, it should be installed by professional person according to the instructions. Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards. |
|                       | If the new range hood is damaged obviously before using, please don't install and contact FOTILE service center soon.                                                                                                                                                                           |
|                       | Please comply with the safety guideline provided by the heating equipment manufacturer priorly and safety regulations published by the fire authority simultaneously.                                                                                                                           |
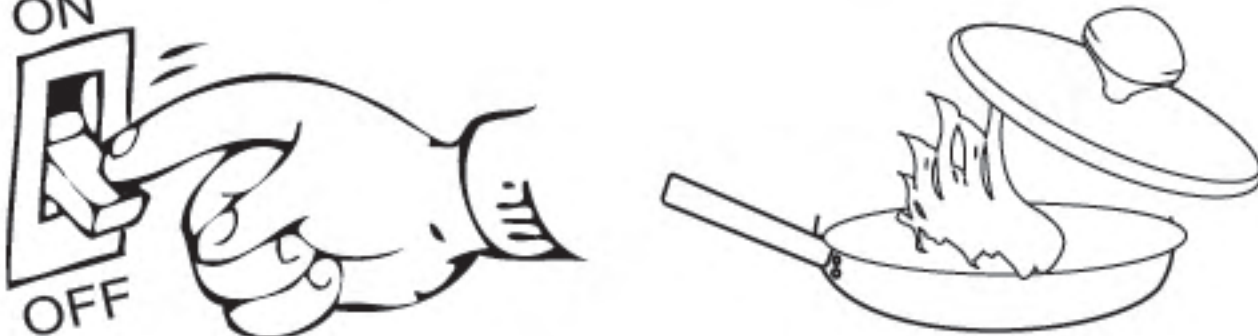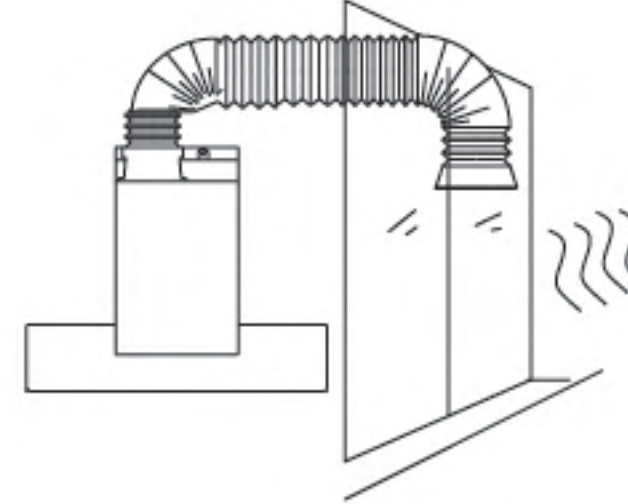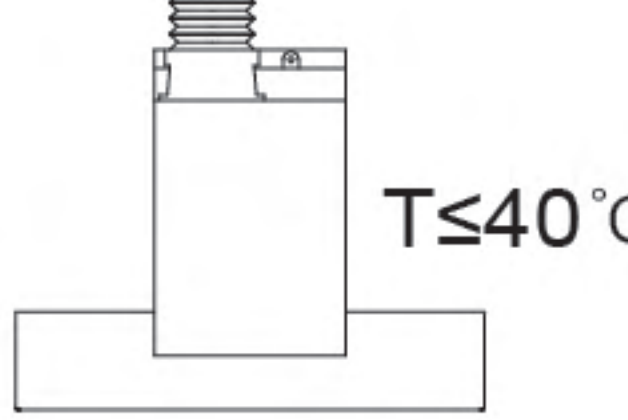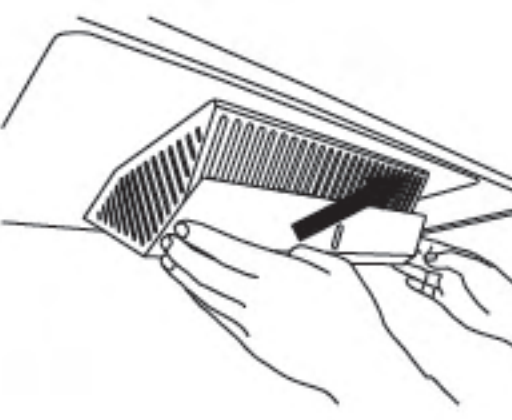
|                                                                                       |                                                                                                                                                                                                                                                                                                                                                             |
|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | The wall should be strong enough to support the range hood. As for hollow wall or hollow plate, the thickness of its solid part should be no less than 30mm. For drywalls, the range hood shall be fixed onto the wooden pillar at the back, mounting holes can be drilled directly into concrete walls. The range hood should be firmly fixed on the wall. |
|    | When drilling on the roof or ceiling, please make sure not damage the electric wires and any other hidden devices.                                                                                                                                                                                                                                          |
|    | The range hood is for family use only, and don't use it in special environment (e.g. outdoor), and it also can't be used to exhaust dangerous or explosive substance or gas. Fotile assumes no responsibility if you use it in special environment.                                                                                                         |
|    | There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).                                                                                                                                        |
|   | When the cooking pots catch fire, turn off the range hood immediately (It will stimulate the fire if the range hood is working). Effective fire extinguishing measures must be taken at once, such as covering the open flame with metal cover, turning off the general gas valve and keeping flammable substance away from the open flame, etc.            |
|  | Make sure the exhausting pipe can reach outdoors to avoid the fire and keep the fresh air in the room. Please don't make the waste gas stay indoor, loft, garage, etc. (This is only for ducted range hood)                                                                                                                                                 |
|  | The working temperature should not be more than 40℃.                                                                                                                                                                                                                                                                                                        |
|  | Please clean the range hood according to the user manual, otherwise, it may catch fire or cause other dangers.                                                                                                                                                                                                                                              |
|  | Please clean the oil cup timely to avoid overflowing when the oil reaches the very scale in the oil cup. Please don't use the waste oil.                                                                                                                                                                                                                    |
|  | Before install, clean or repair the range hood, please make sure cut off the power to avoid the electric shock. And wear protective gloves to avoid your hands being hurt by range hood metal panel.                                                                                                                                                        |
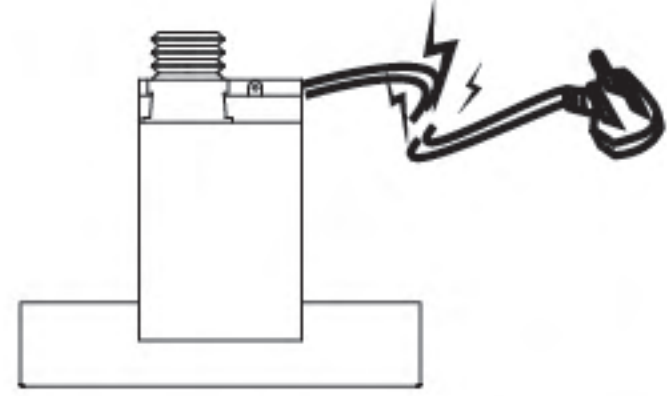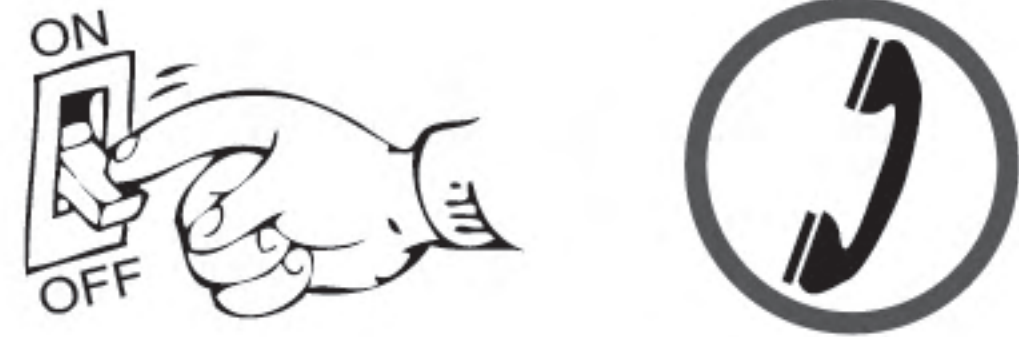
|                                                                                   |                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | The plug shall be accessible after the appliance has been installed.Cut off the power if you are not going to use range hood for a long time.                                                                                                             |
|  | If the supply cord is damaged, it must be replaced by the manufacturer,its service agent or similarly persons in order to avoid a hazard.                                                                                                                 |
|  | If there is abnormality, please turn off the range hood and cut off the main power supply, contact FOTILE service center to repair it. It will easily cause dangers like electric shock, fire, if the range hood still working under abnormal conditions. |
|  | Please don't let children use range hood by themselves and don't place it where infants can touch, otherwise, it will cause burning injury, electric shock or other accidents.                                                                            |
|  | Please keep the product plastic package away from the infants, to avoid suffocation, etc. Children should be supervised to ensure that they do not play with the appliance.                                                                               |

 **Forbidden**
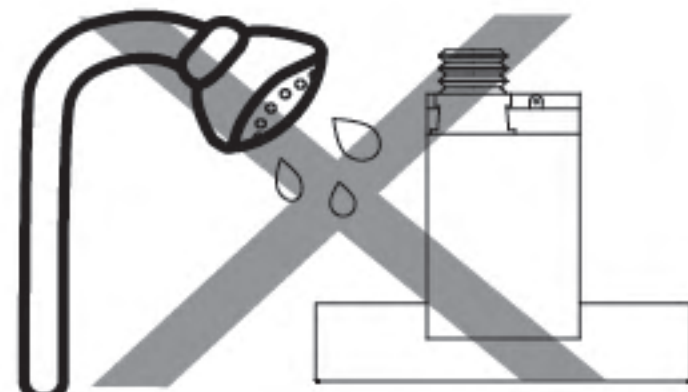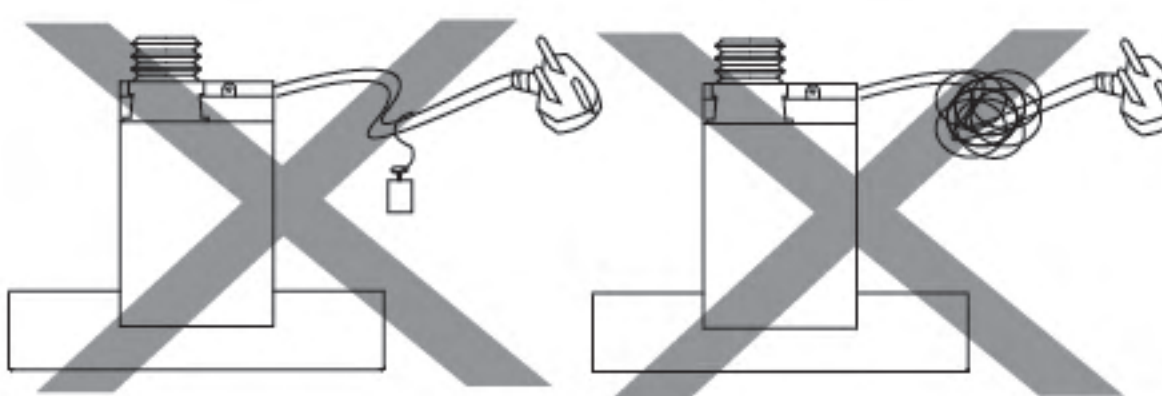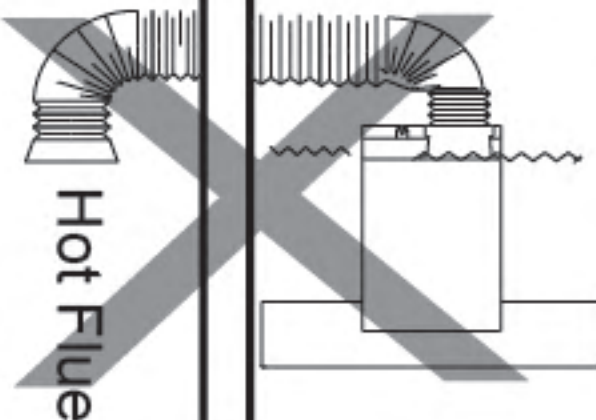
|                                                                                     |                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Please clean the range hood according to the user manual, otherwise, it may catch fire or cause other dangers.                                                                               |
|  | Don't transform, stretch, tie, ballast or extrude the power cord, or it may cause electric shock or fire.                                                                                    |
|  | Don't change the internal wiring by yourself, otherwise, it will cause possible abnormality and personal injury; and the improper repair leads to electric shock, fire or other dangers.     |
|  | The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.Regulations concerning on the discharge of air have to be fulfilled. |
|  | It is strictly forbidden to let the stove working without pot otherwise it will damage the above range hood.Do not flame under the range hood.                                               |









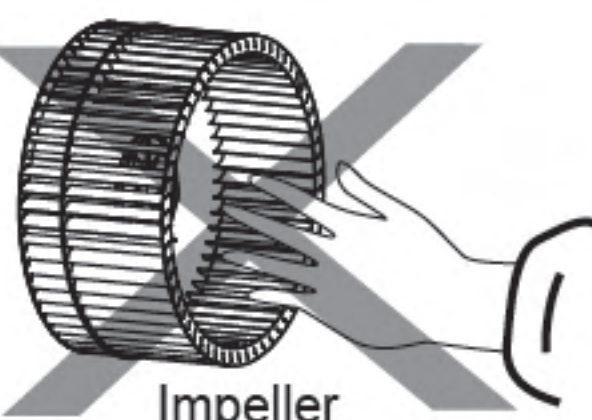
|                                                                                     |                                                                                                                                                                                                              |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Don't touch the bulb that is still working or finish working for a short while, to avoid scalding.                                                                                                           |
|  | Don't put your hands or other things into impeller when it is working to avoid hurting.                                                                                                                      |
|  | All electrical parts including motor, switch and connections, etc. should be away from water. Don't rinse range hood directly with water. Don't use the range hood when it is wet to prevent electric shock. |
|  | Never touch the power plug, power switch or other electric parts with wet hand, otherwise, it may cause electric shock.                                                                                      |



- a. Services guaranteed under warranty must be performed by Fotile certified service provider or personnel. The warranty is not effective for products removed for repair without authorization.
- b. Adhere to the voltage and frequency settings listed in this manual to avoid possible damages to the range hood.
- c. When the range hood and appliances supplied with enegy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa(4 x 10<sup>-5</sup> bar) (only for GERMANY).
- d. Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.
- e. Tempered glass is applied to the products of the company and the tempering treatment of the glass determines the extremely little possibility of spontaneous explosion.If the occurrence of spontaneous explosion is not due to improper use, our company promises free replacement of the accessories.The possibility of tempered glass breaking can be significantly increased in the following situations, which should be avoided: For instance, hitting the glass, especially the corners of the glass, with cooking utensils or other hard objects; The glass is impacted when you open a cabinet door around the Range Hood; Put the glass in an extremely hot or cold environment or an environment where heat and cold are excessively alternated.

Installation

Packing List
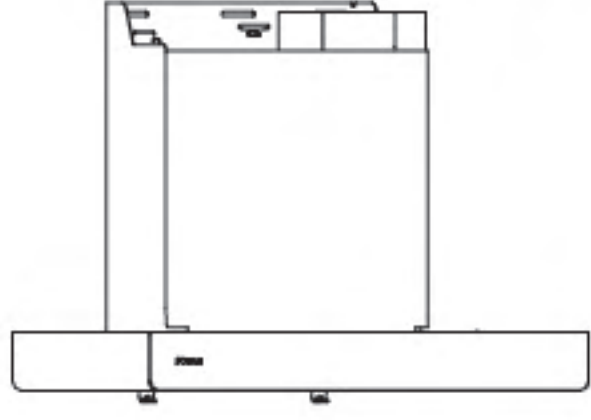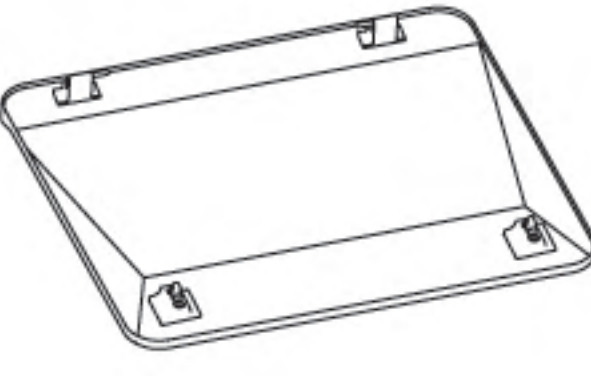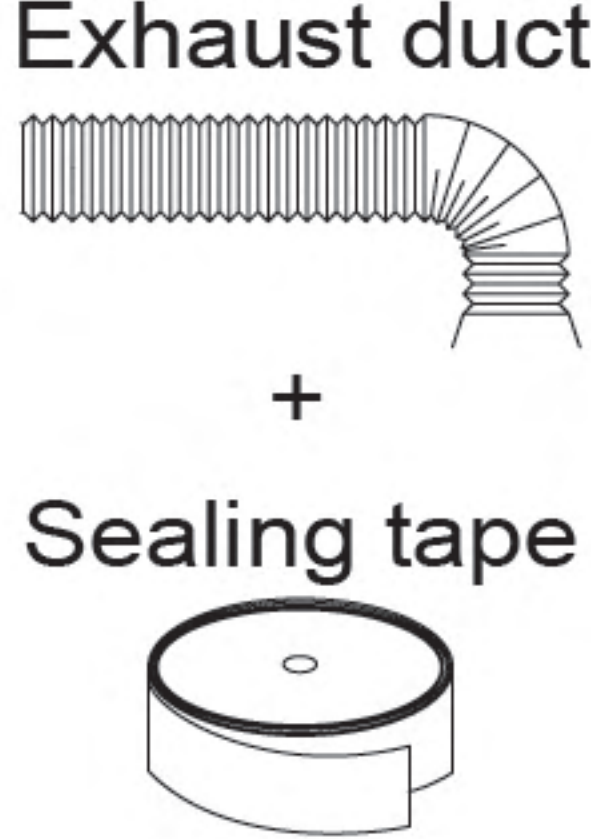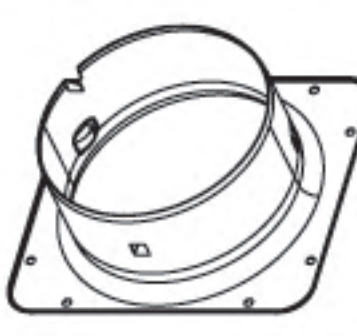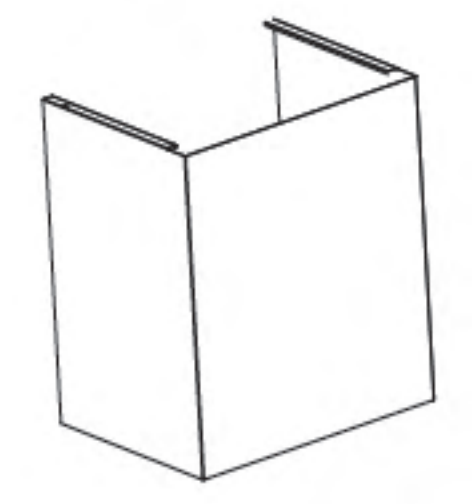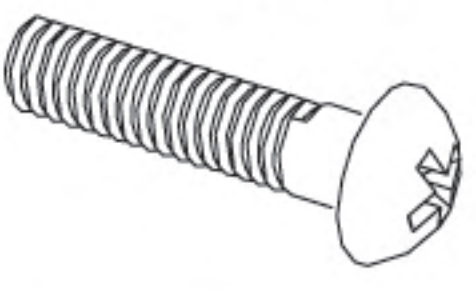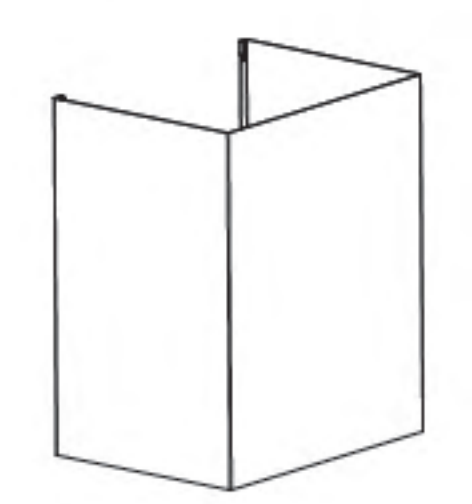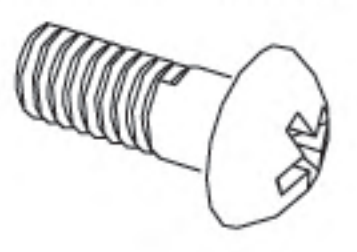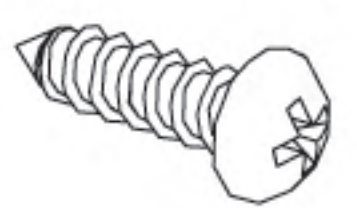
|                                                                                                                                                               |   |                                                                                                                              |   |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------|---|------------------------------------------------------------------------------------------------------------------------------|---|
| <div>Main body<br/>(axonometric drawing)</div>                               | 1 | <div>Wing plate</div>                      | 1 |
| <div>Exhaust duct<br/>+<br/>Sealing tape</div>                               | 1 | <div>Outlet housing</div>                  | 1 |
| <div>Hook</div>                                                              | 1 | <div>Upper gasket</div>                    | 1 |
| <div>Cross recessed<br/>countersunk head<br/>wood screw<br/>ST4.5×60</div>  | 6 | <div>Product instruction<br/>manual</div>  | 1 |
| <div>Expansion pipeφ<br/>10×60</div>                                       | 6 | <div>Decorative cover</div>               | 1 |
| <div>Screw for outlet housing<br/>M4×18mm</div>                            | 8 | <div>Fan cover</div>                     | 1 |
| <div>Screw for fan frame<br/>M4×6mm</div>                                  | 2 | <div>Decorative cover hook</div>         | 1 |
| <div>Screw for exhaust duct<br/>ST3.9×9.5mm</div>                          | 4 |                                                                                                                              |   |
| <div>Decorative cover screw<br/>ST2.9×19mm</div>                           | 2 |                                                                                                                              |   |

Installation Warning


| ⚠ Caution                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <br>Caution           | It is recommended to install a range hood after the kitchen decoration is completed.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| <br>Follow strictly   | Ensure that the wall on which the range hood is installed is flat and the range hood must be kept level.                                                                                                                                                                                                                                                                                                                                                                                                |
| <br>Follow strictly   | Packaging of new range hood: Please handle these packaging materials in an environmentally friendly manner to maintain a good environment. Do not allow children to play with plastic films and packing boxes, which may cause suffocation accidents. Therefore, please keep packaging materials away from children. Packaging materials are not toys!                                                                                                                                                  |
| <br>Follow strictly | Wear qualified protective gloves to avoid scratches and bruises caused by metal plates and orifices inside the range hood when installing, cleaning or repairing the range hood on account that it may have very sharp edges.                                                                                                                                                                                                                                                                           |
| <br>Follow strictly | The special power socket shall be applied and grounded reliably.                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| <br>Follow strictly | The exhaust duct must ensure gas discharge into outside. Exhaust the waste gas outside to avoid fire accidents and keep the air fresh. Do not exhaust the waste gas into the wall, attic or garage. (Only applicable to range hoods with exhaust ducts)<br>Exhaust gases from this appliance should not be discharged into flues that are used to discharge exhaust gases generated from appliances burning gas or other fuels (this section does not apply to appliances returning gases to the room). |
| <br>Follow strictly   | If the gas stove needs to be moved before installing the range hood, please close the gas valve before moving.                                                                                                                                                                                                                                                                                                                                                                                          |
| <br>Follow strictly   | After installing the range hood, please ensure that the machine can operate normally and carefully read and keep the Operation Instruction.                                                                                                                                                                                                                                                                                                                                                             |
| <br>Follow strictly   | To protect the environment, please dispose of old range hoods that cannot be used properly.                                                                                                                                                                                                                                                                                                                                                                                                             |
| <br>Follow strictly   | The range hood is heavy and the installation process is complex, so please contact professionals to install it according to the Instructions.                                                                                                                                                                                                                                                                                                                                                           |
| <br>Follow strictly | Pay attention not to damage wires and other hidden equipment when excavating or drilling holes in walls or ceilings. Please cut off the power supply of the range hood during installation.                                                                                                                                                                                                                                                                                                             |
| <br>Follow strictly | The wall where the range hood is installed should have sufficient support strength, otherwise the range hood may fall off and be damaged.                                                                                                                                                                                                                                                                                                                                                               |



Wall Preparation

The wall should be strong enough to support the range hood. As for hollow wall or hollow plate, the minimum thickness of the lumber should be 30mm. As for concrete wall, the installation can be directly operated. The range hood should be firmly fixed on the wall.

## Product Basic Conditions

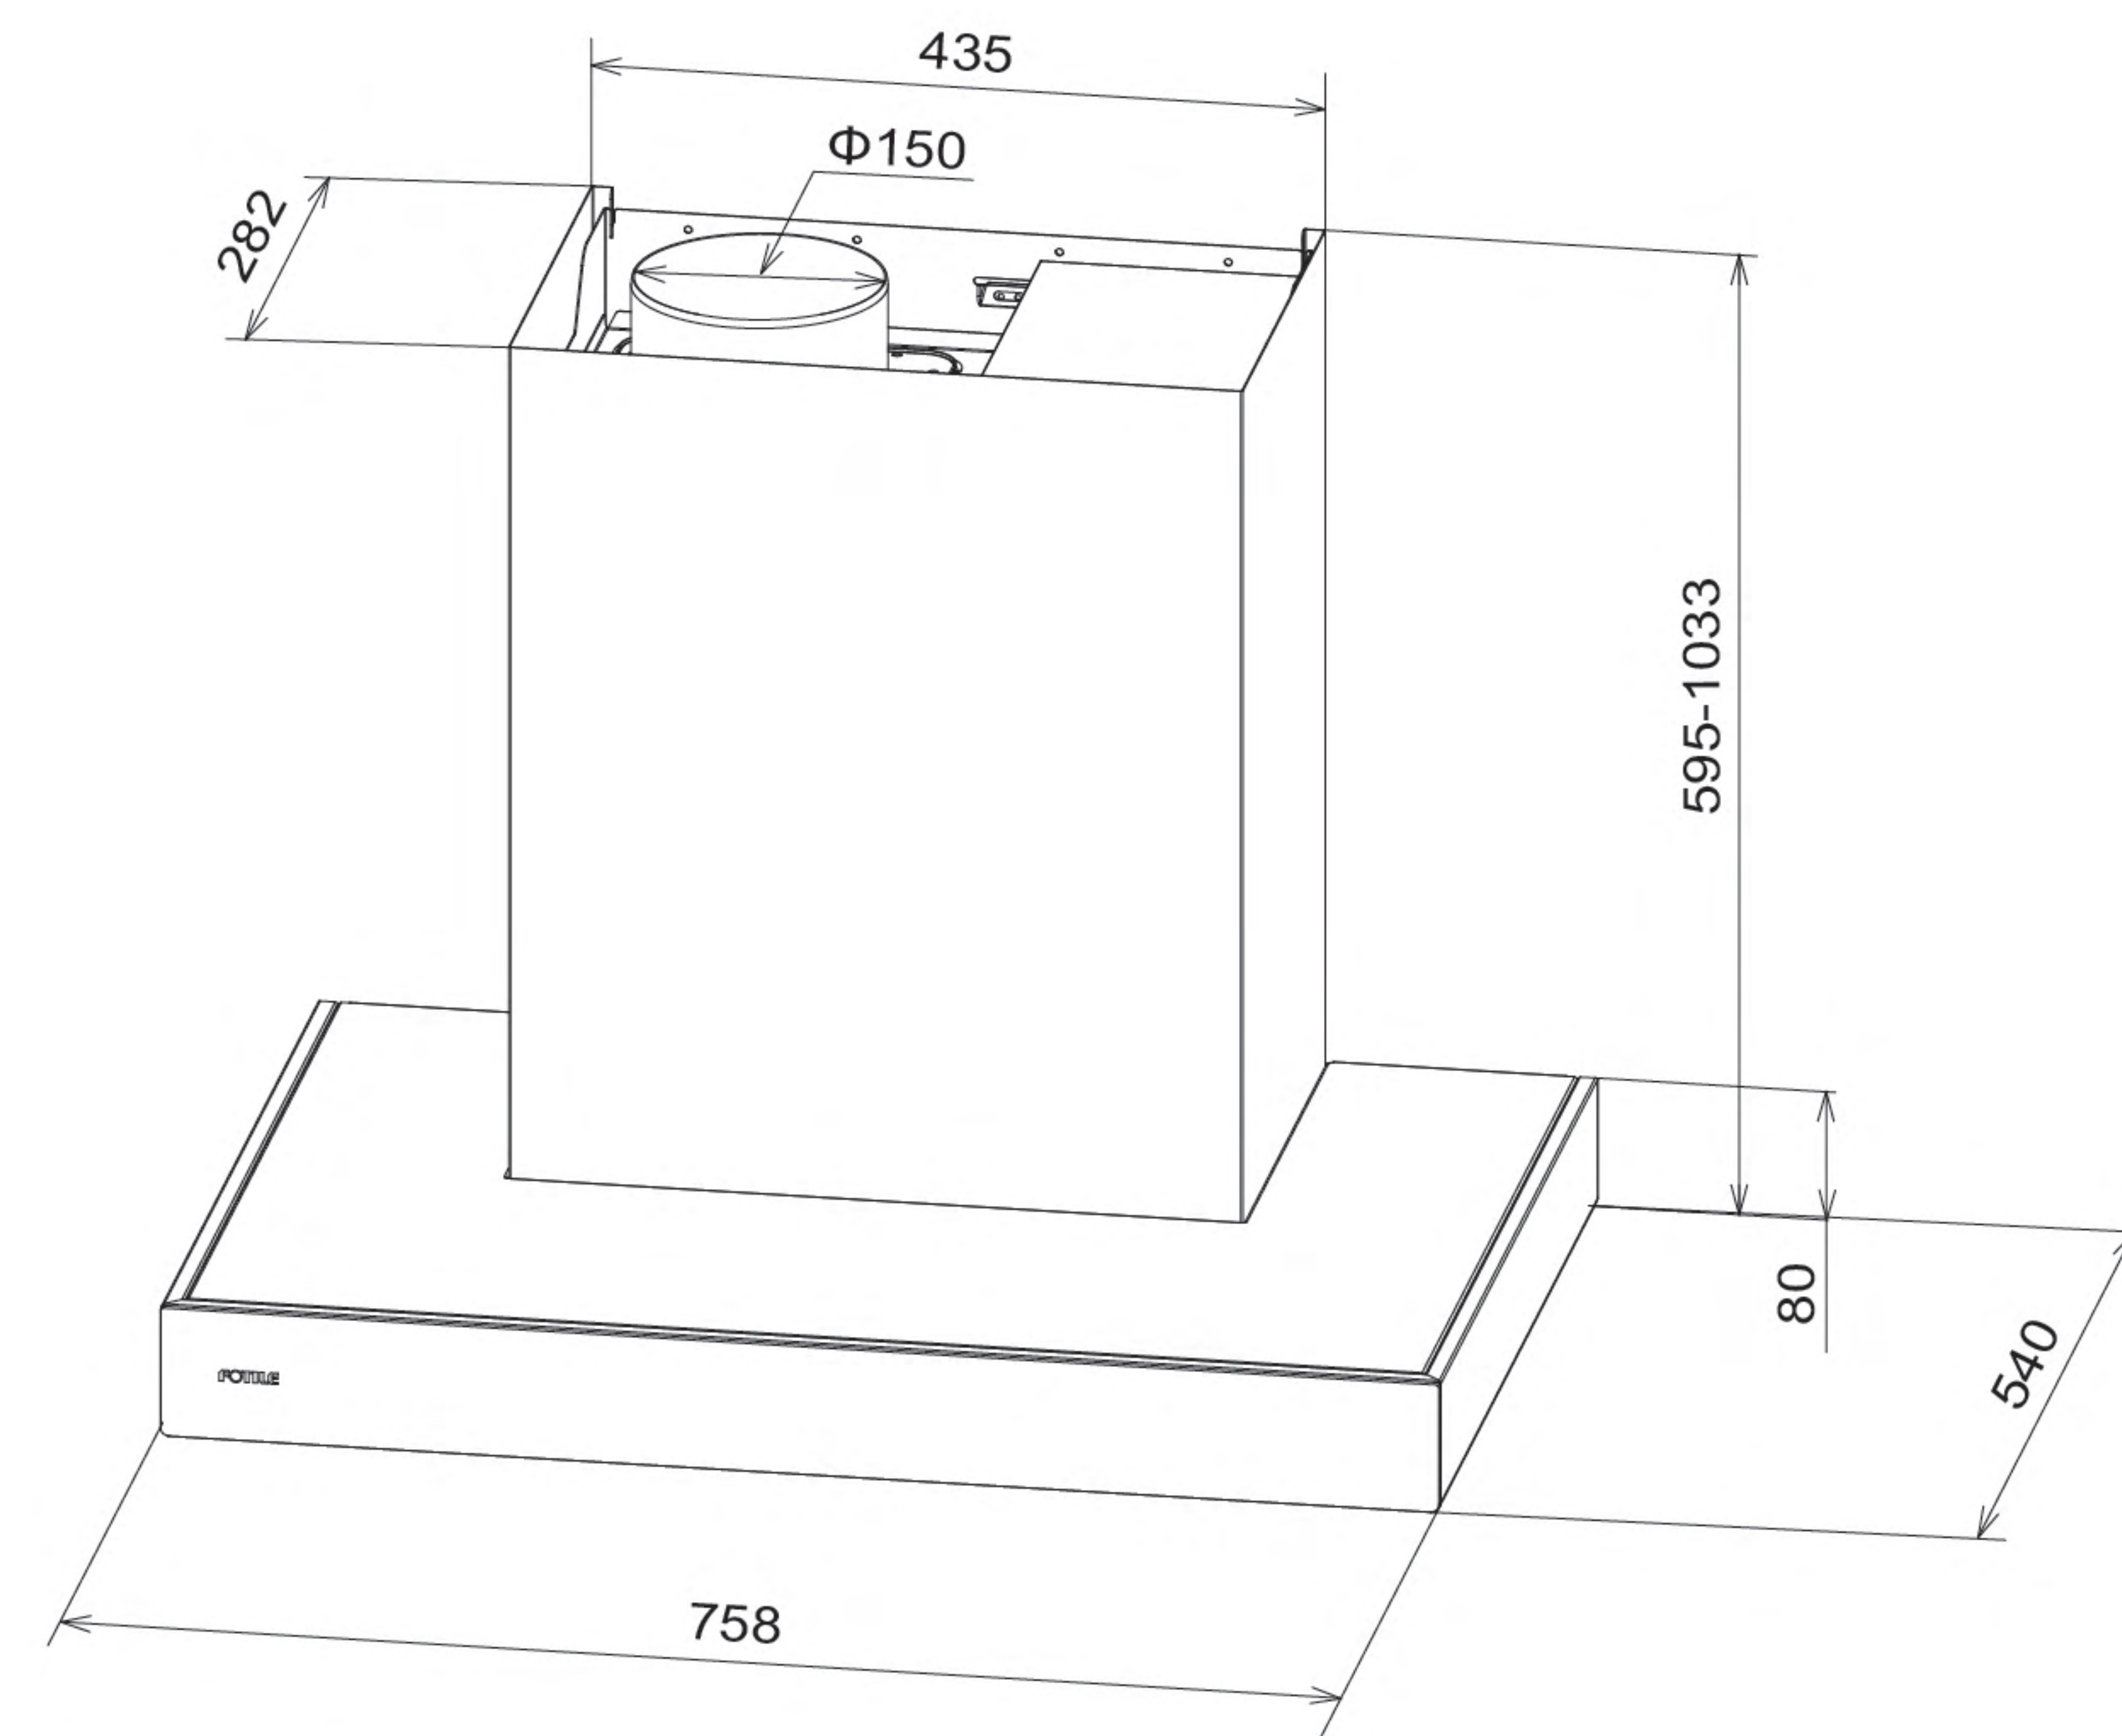


Product Basic Conditions(Unit:mm)

## Installation Suggestions

### Installation Position

- 1.The range hood is only for family use only; Please do not use the range hood under other conditions.
- 2.The range hood should be installed above the stove. Keep the appliance horizontal.
- 3.The temperature of the range hood should not be more than 40°C.
- 4.The wall should be none-flammable. Never install the range hood on the flammable wooden wall.

### Installation Diagram of Hoods and Cabinets. (Unit: mm)

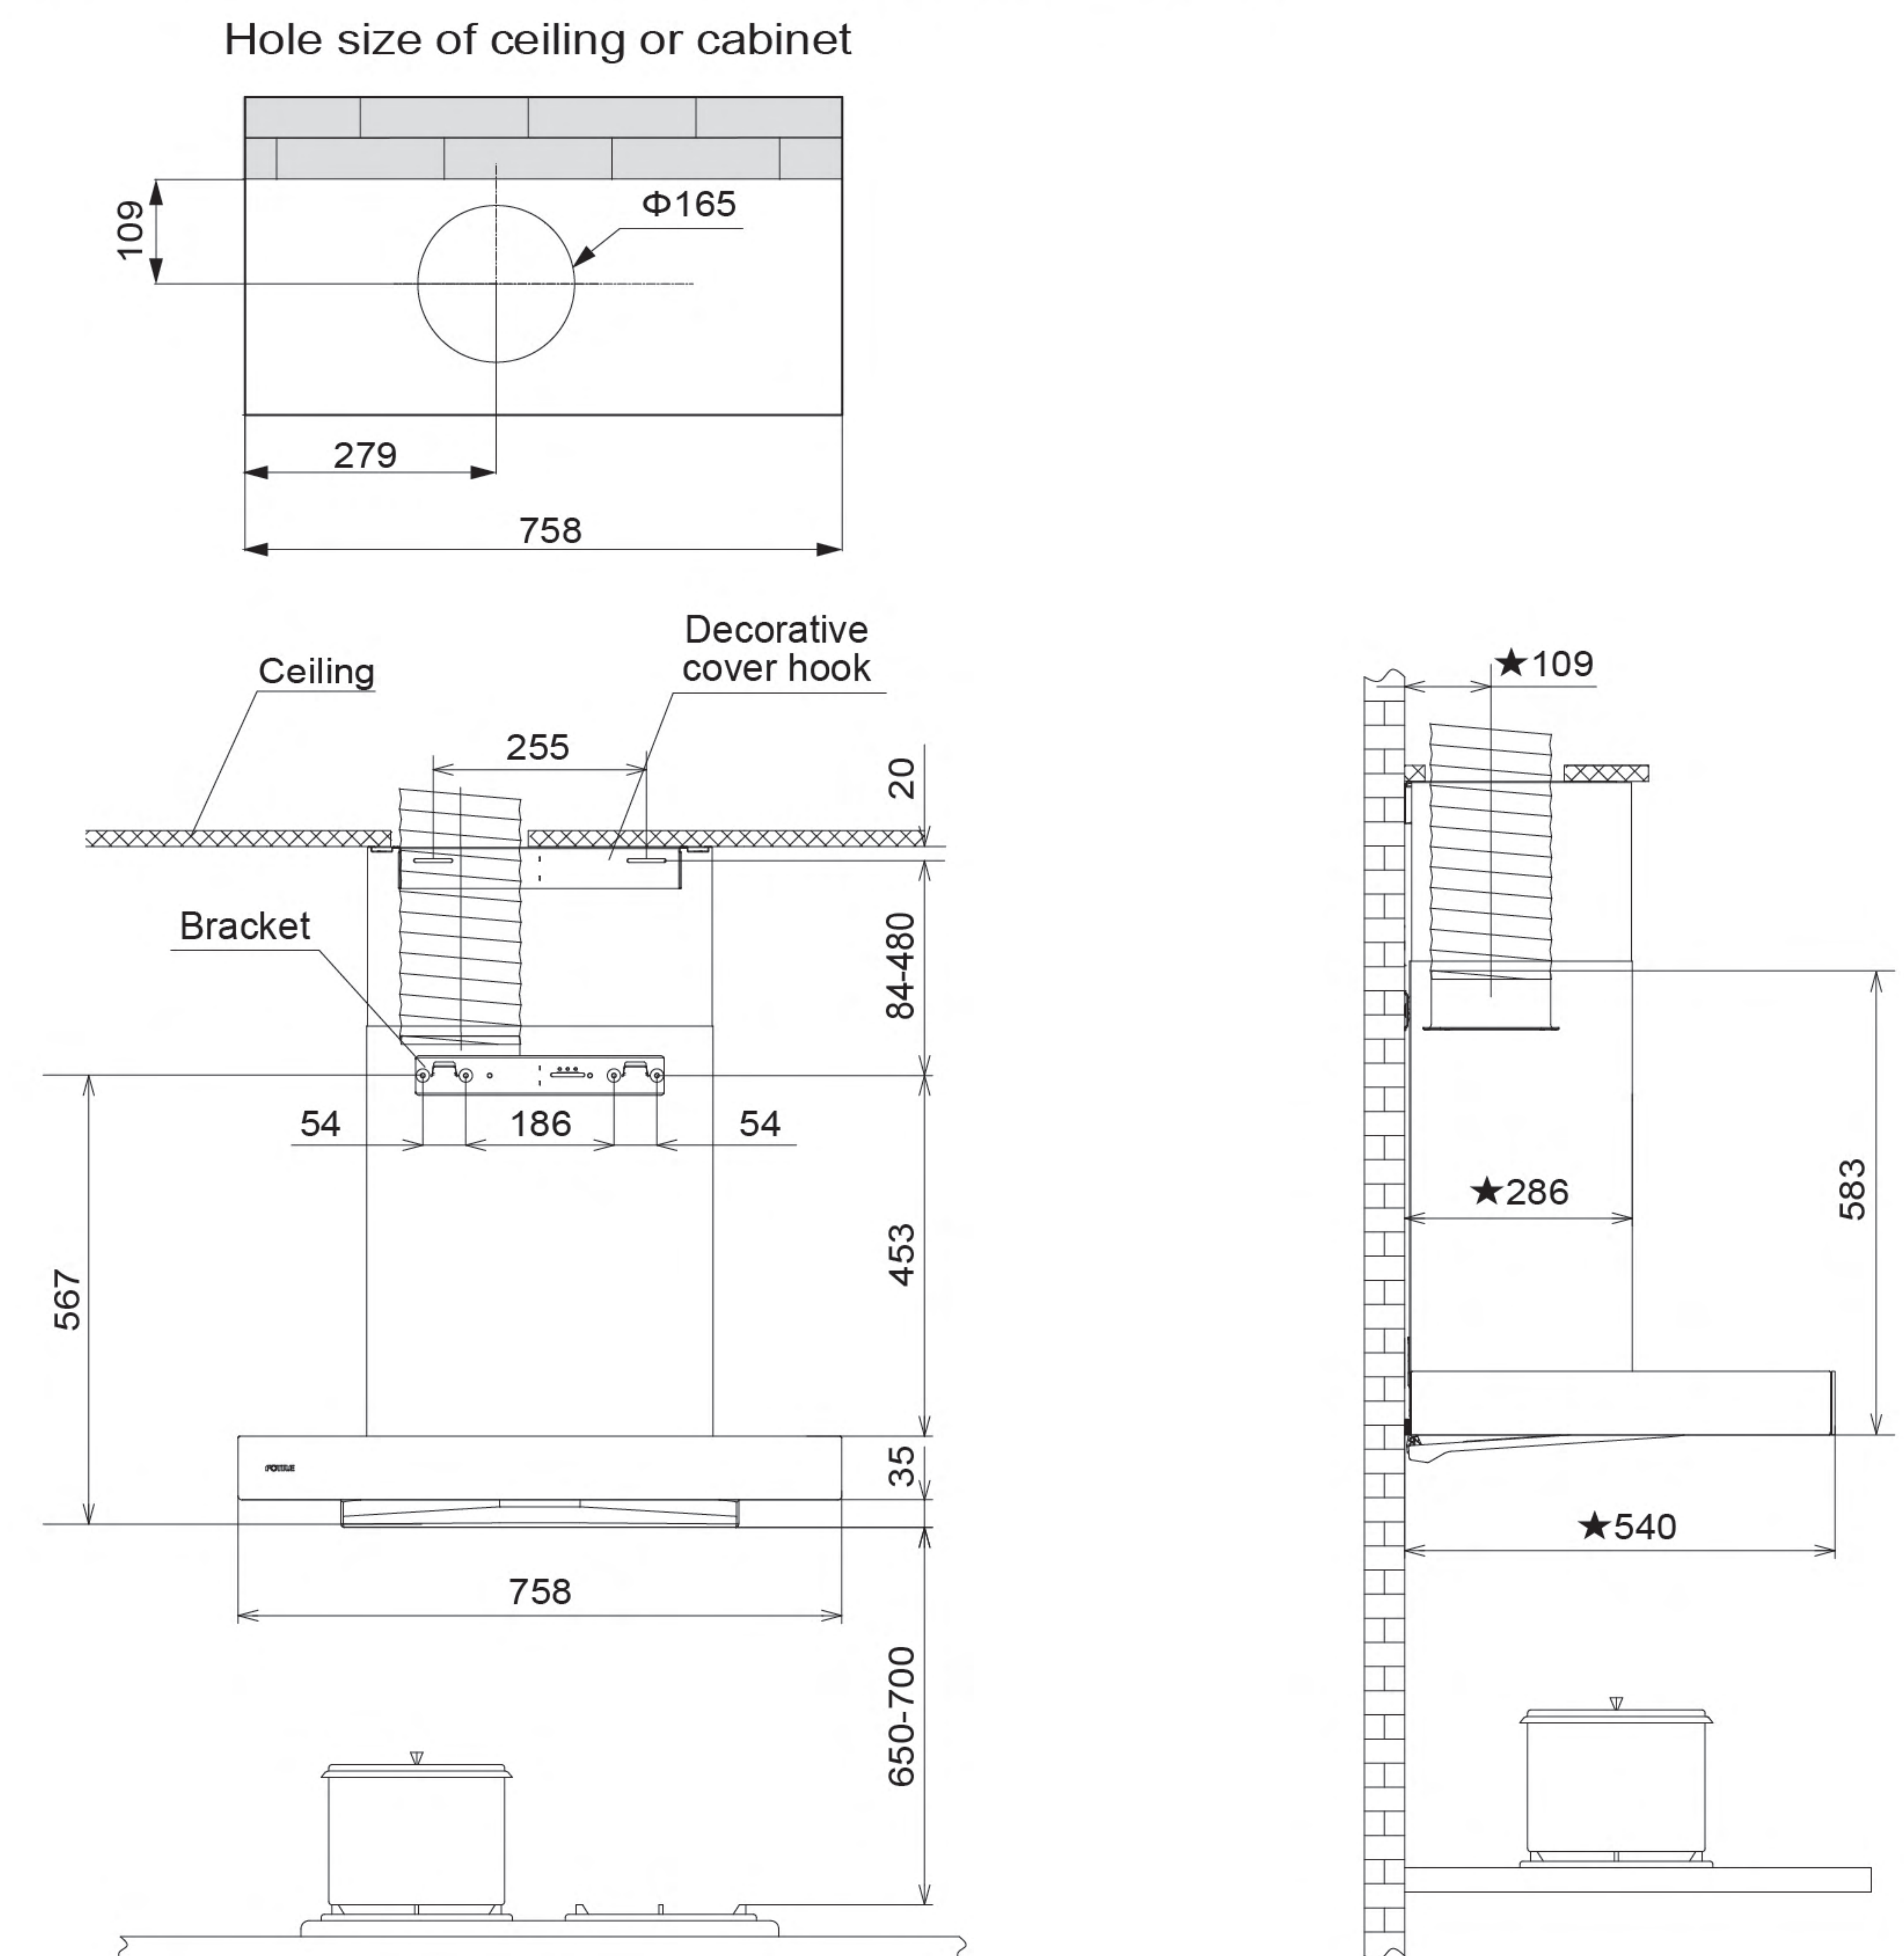

Installation diagram  
(★ is the distance from the wall)



#### Notes:

The height for installing the range hood (i.e. the distance between the bearing surface of cooking appliance on the stove and the lowest part of the range hood) must not be less than 650mm.

This should be considered when the installation instructions for gas stove specify a large installation distance. In order to ensure the effect of oil fume suction, please install the range hood within the recommended height for installation. If the actual height for installation exceeds the recommended height, the product's oil fume suction effect may be affected to a certain extent. If relevant local laws specify the height for installation of range hood, it is recommended to comply with the laws accordingly.

## ■ Preparation before installation

### 1. Warning:

- (1) Please don't make sundries into exhaust pipe to avoid damaging the range hood.  
Estimate the exhaust pipe position.
- (2) Estimate the location between the range hood and the outdoor exhaust duct. Refer to the Installation Diagram.
- (3) A straight and short exhaust pipe makes smoke extraction more smooth.
- (4) A curving and long ducting run should be avoided, as it will lower the performance of the range hood.
- (5) The joint between exhaust pipe and wall hole should be sealed with tape, and ensure firm connection between exhaust pipe and exhaust cover.
- (6) Too small wall hole will affect smoke extraction, therefore, please broaden the wall hole to fit exhaust pipe size under safety condition.




### 2. Tool preparation

Please prepare the following tools before range hood installation  
(include but not limited to the following tools).


- |                                                          |                       |
|----------------------------------------------------------|-----------------------|
| (1) Impact electric drill (with drillbit of $\Phi$ 10mm) | (2) Cross screwdriver |
| (3) Measuring tape                                       | (4) Gradiener         |

## Installation Steps


- 1.The electric impact drill shall be equipped with impact drill bit.
- 2.Lift the whole machine out of the packing case, unscrew the 2 screws used for fixing the fan cover on the back of the range hood, and remove the fan cover and decorative cover.
- 3.As shown in the installation diagram, drill  $\Phi$  10mm hole at the drilling mark with an electric drill, then embed the ceramic tile expansion tube, fix the hook with the hook screw, and use a spirit level to make sure the hook is level. For the cover hook, two cover hook screws (ST2.9  $\times$  19 mm) can be used to fix it to the ceiling.

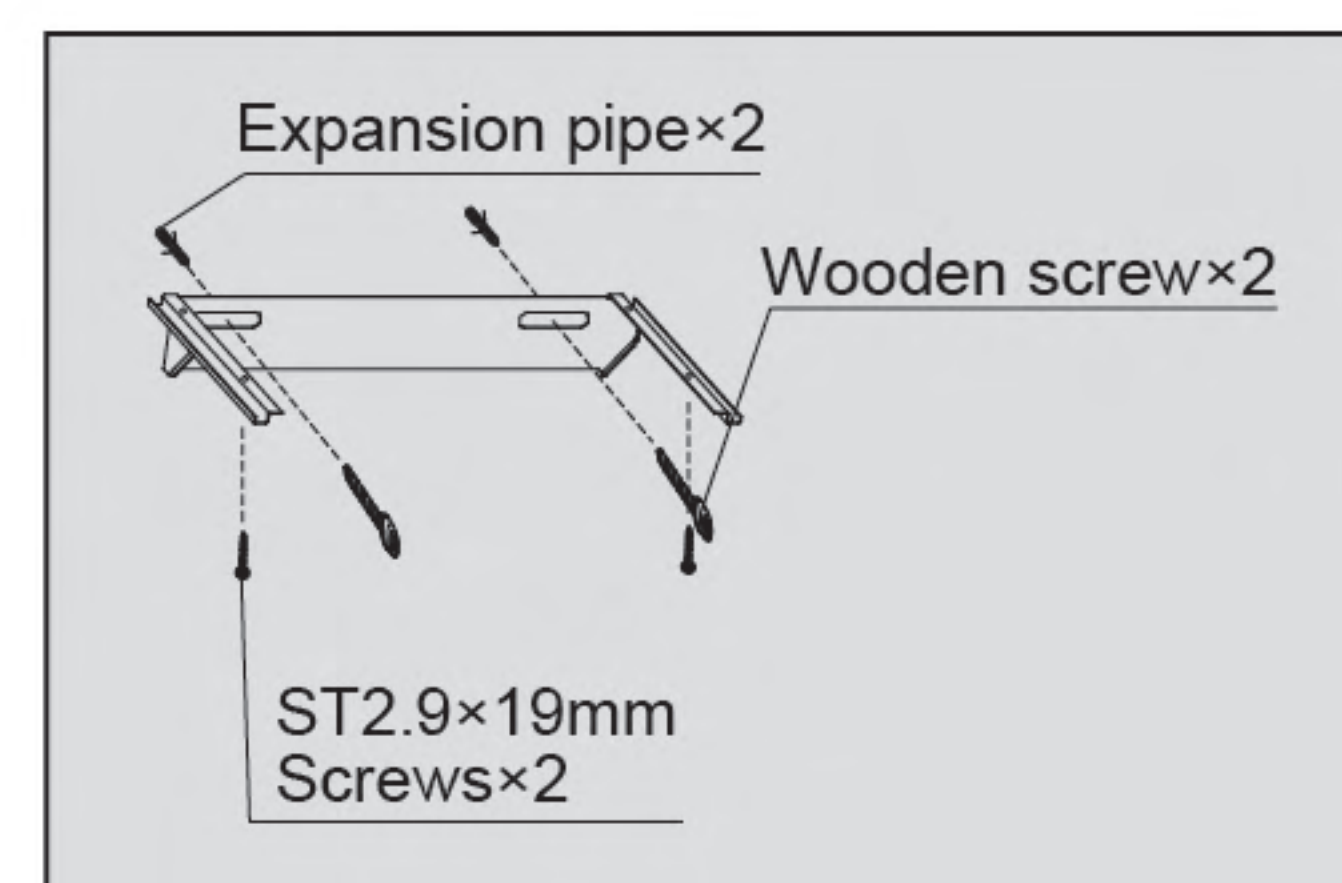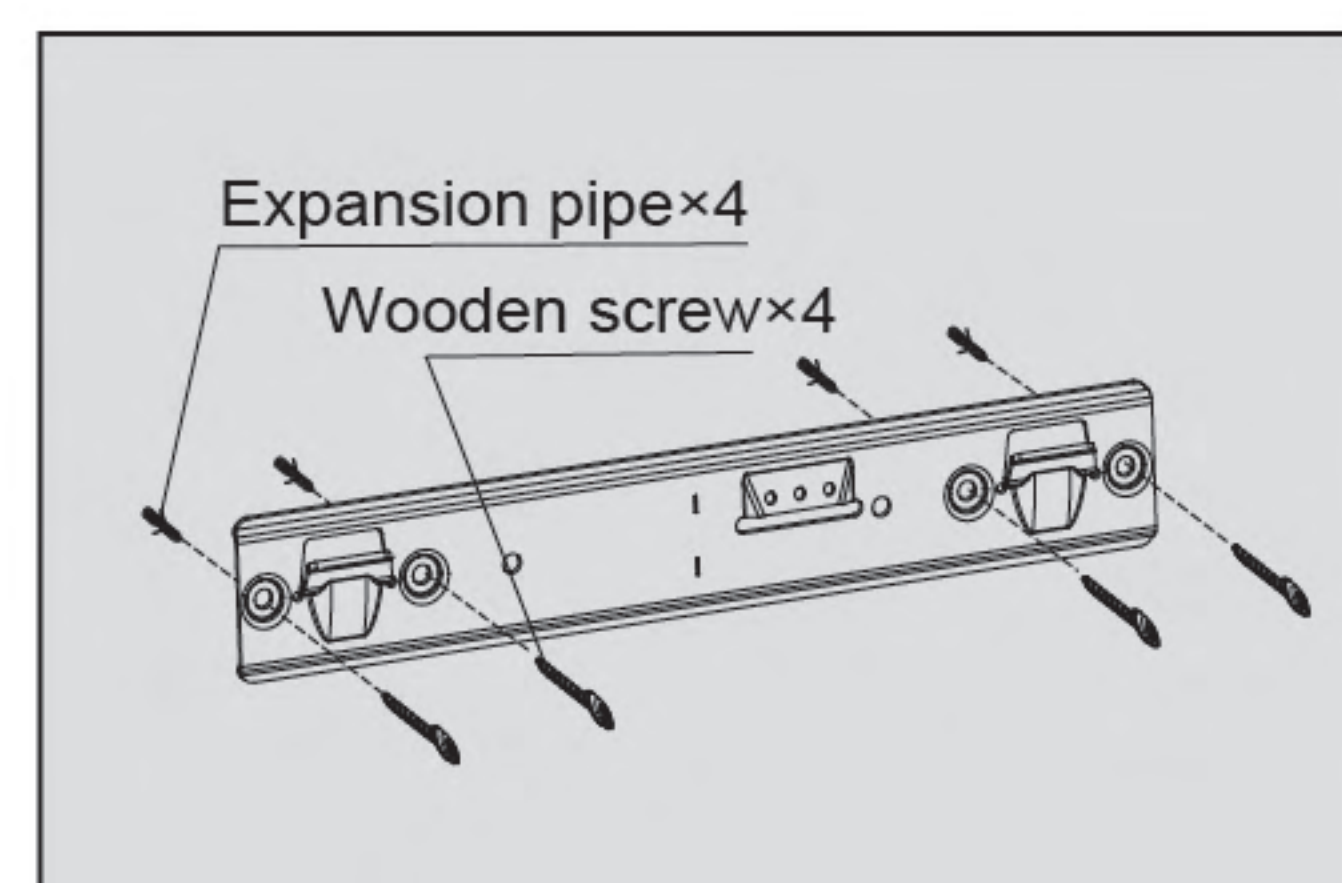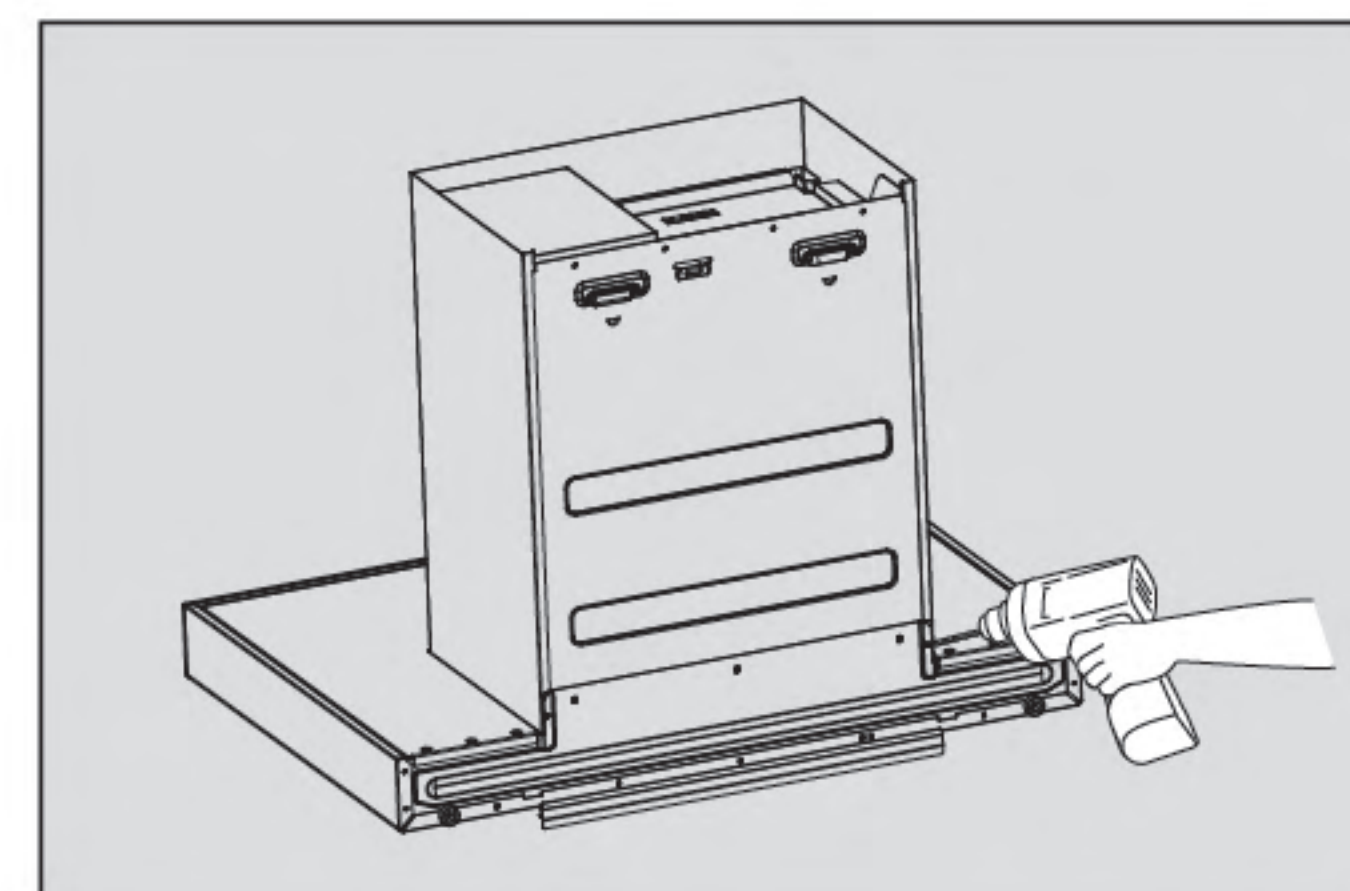


- 4.As shown in the figure below, use 8(M4 $\times$ 18mm) outlet housing screws to fix the outlet housing and sealing ring on the top of the main body.

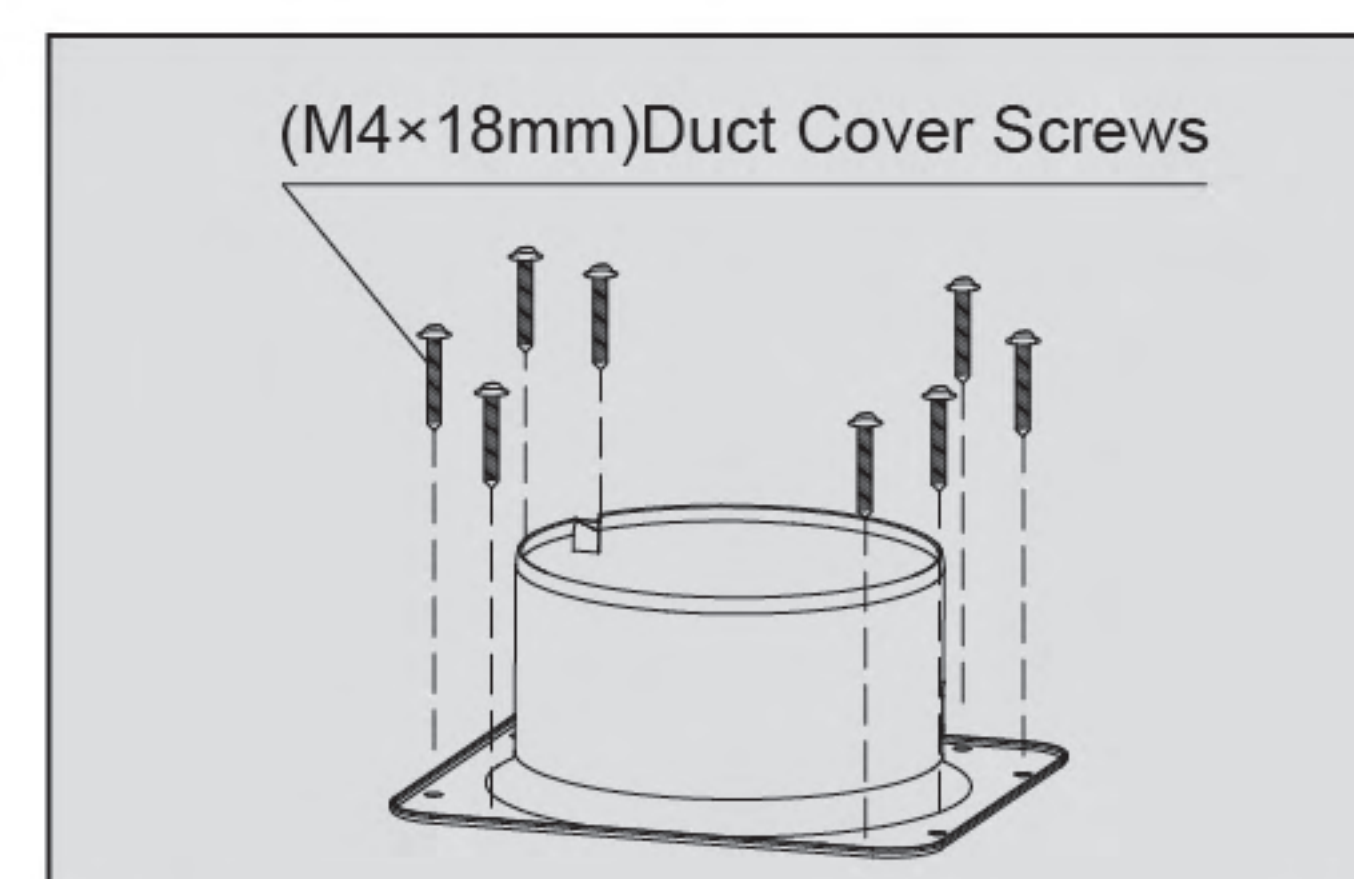


- 5.Arrange the exhaust duct: the aluminum foil exhaust duct and the reserved smoke tube or wall hole shall be sealed tightly to prevent smoke leakage, the smoke tube shall be free from extrusion, deformation and small-angle elbow, the number of elbows shall not exceed 2, and the smoke tube shall be straightened and fixed.

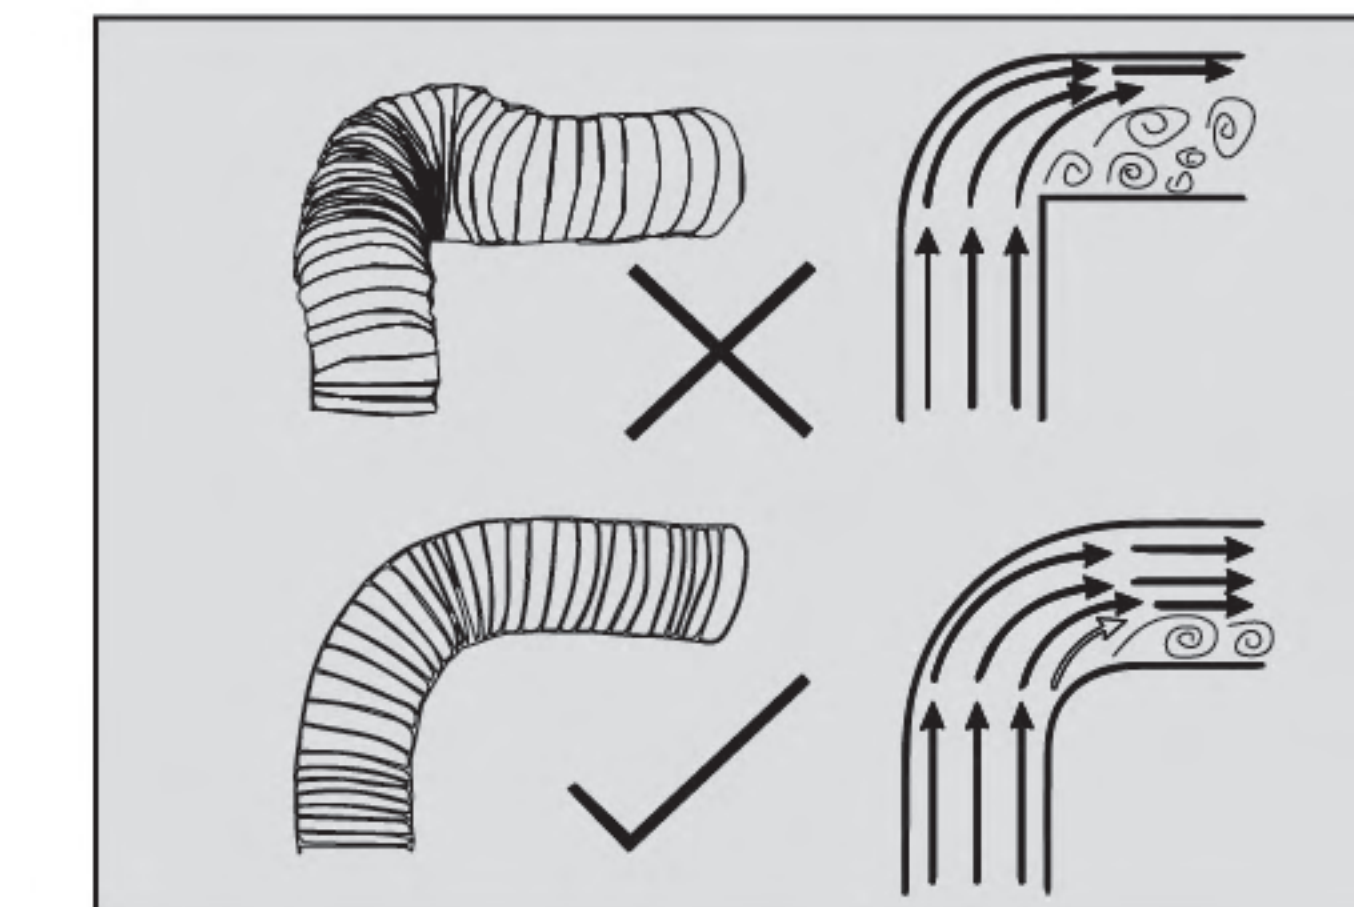

- 6.Lift the main body, hang the hook holes at the back into the hooks, use the level ruler to confirm that the main body is horizontal, and use the fan frame screws M4 $\times$ 6mm to fix the fan frame and the hooks.




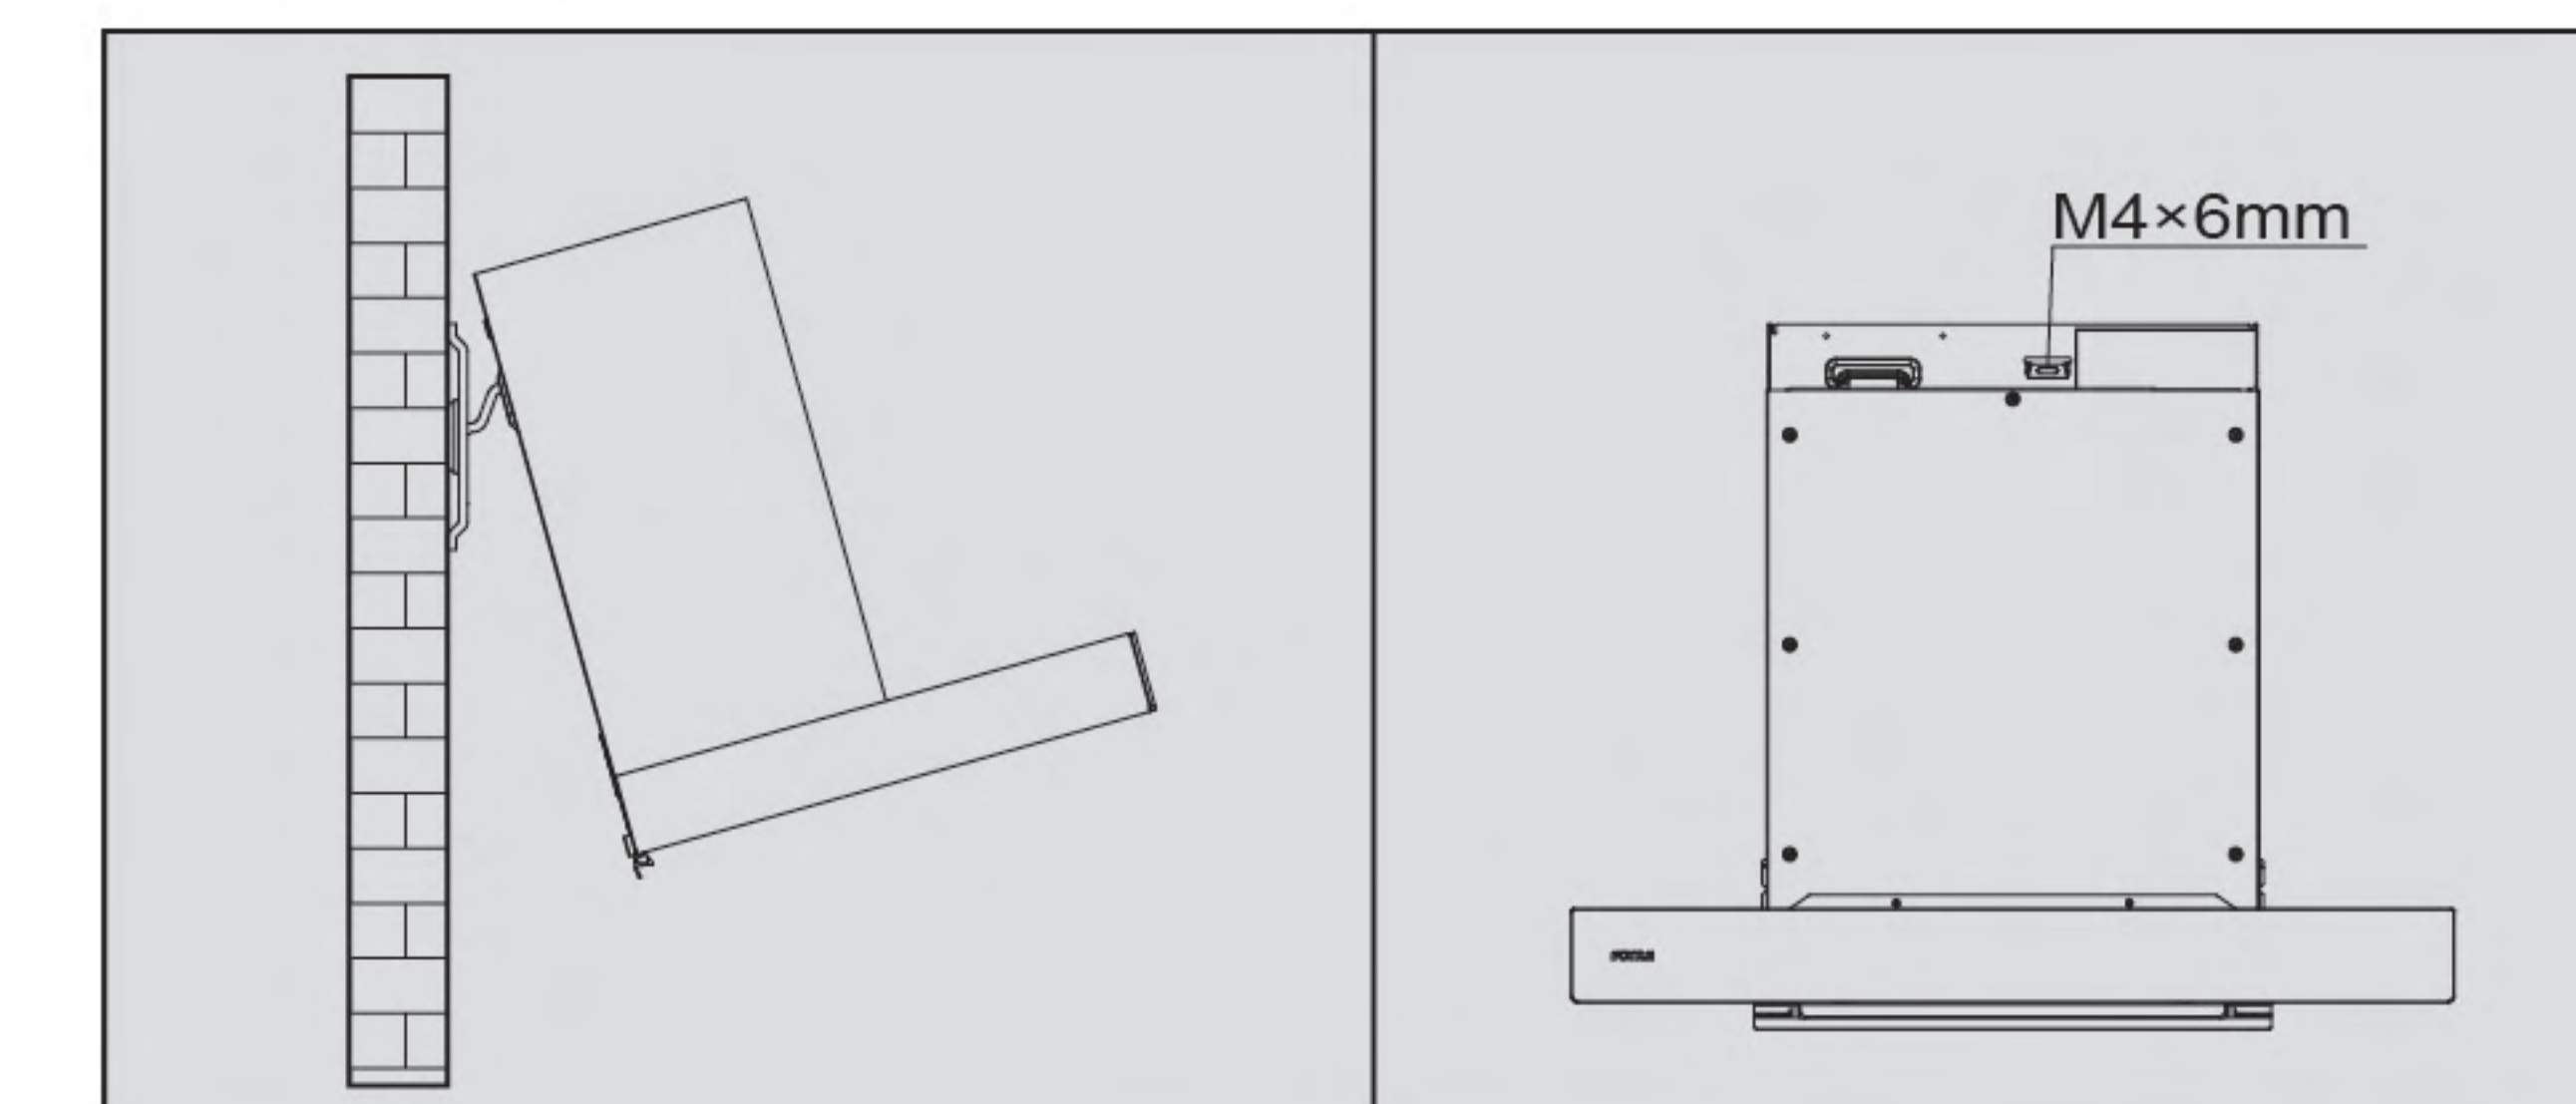


- 7.Connect the exhaust duct: cut off the redundant exhaust duct or connect the smoke tube according to the actual distance, put the smoke tube into the outlet housing connecting rings, then pre-fix the exhaust dust with two screws (ST3.9 $\times$ 9.5), and finally wrap it with Sealing tape for fixation and sealing; Plug the power cable of the range hood into the socket and turn on the fan to detect whether there is air leakage.

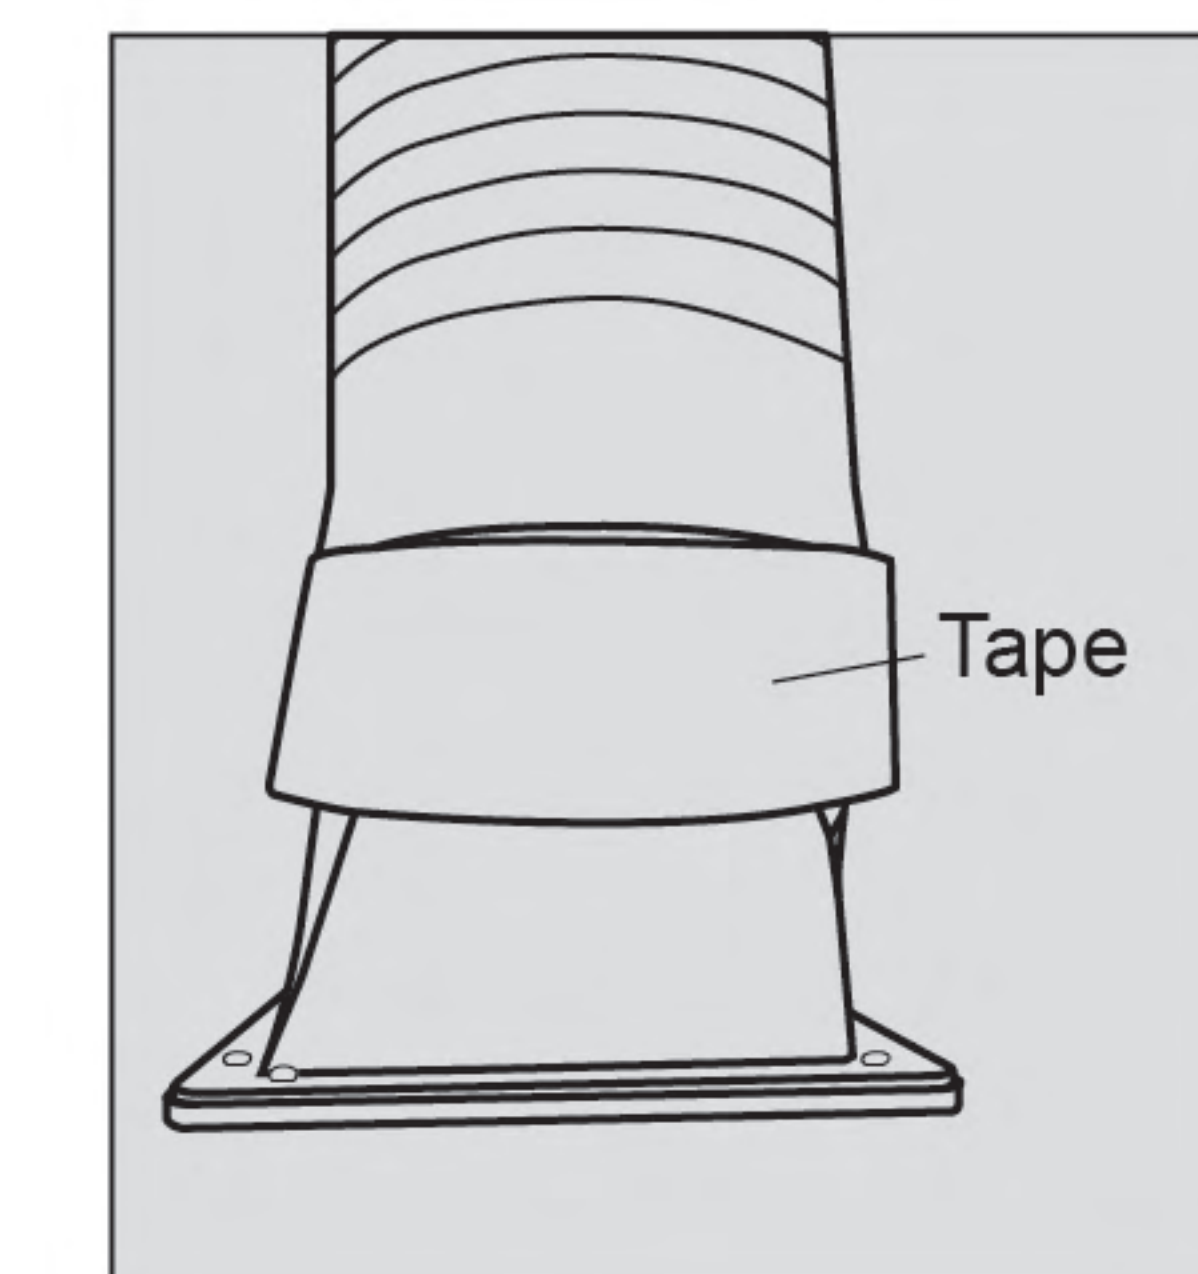




- 8.Installation of fan cover and decorative cover:

- (1) Tear off the protective films on the surfaces of the fan cover and decorative cover;
- (2) Place the decorative cover into the fan cover;
- (3) Pick up the fan cover and the decorative cover at the same time, first clip the decorative cover into the decorative cover hook, and then push the decorative cover and fan cover to the end along the decorative cover hook assembly at the same time.
- (4) After pushing the decorative cover and the fan cover to the end, the fan cover slowly slips down, clamp the fan cover locking tab into the fan frame, and then insert the fan cover into the gap between the top plate and the fan frame.

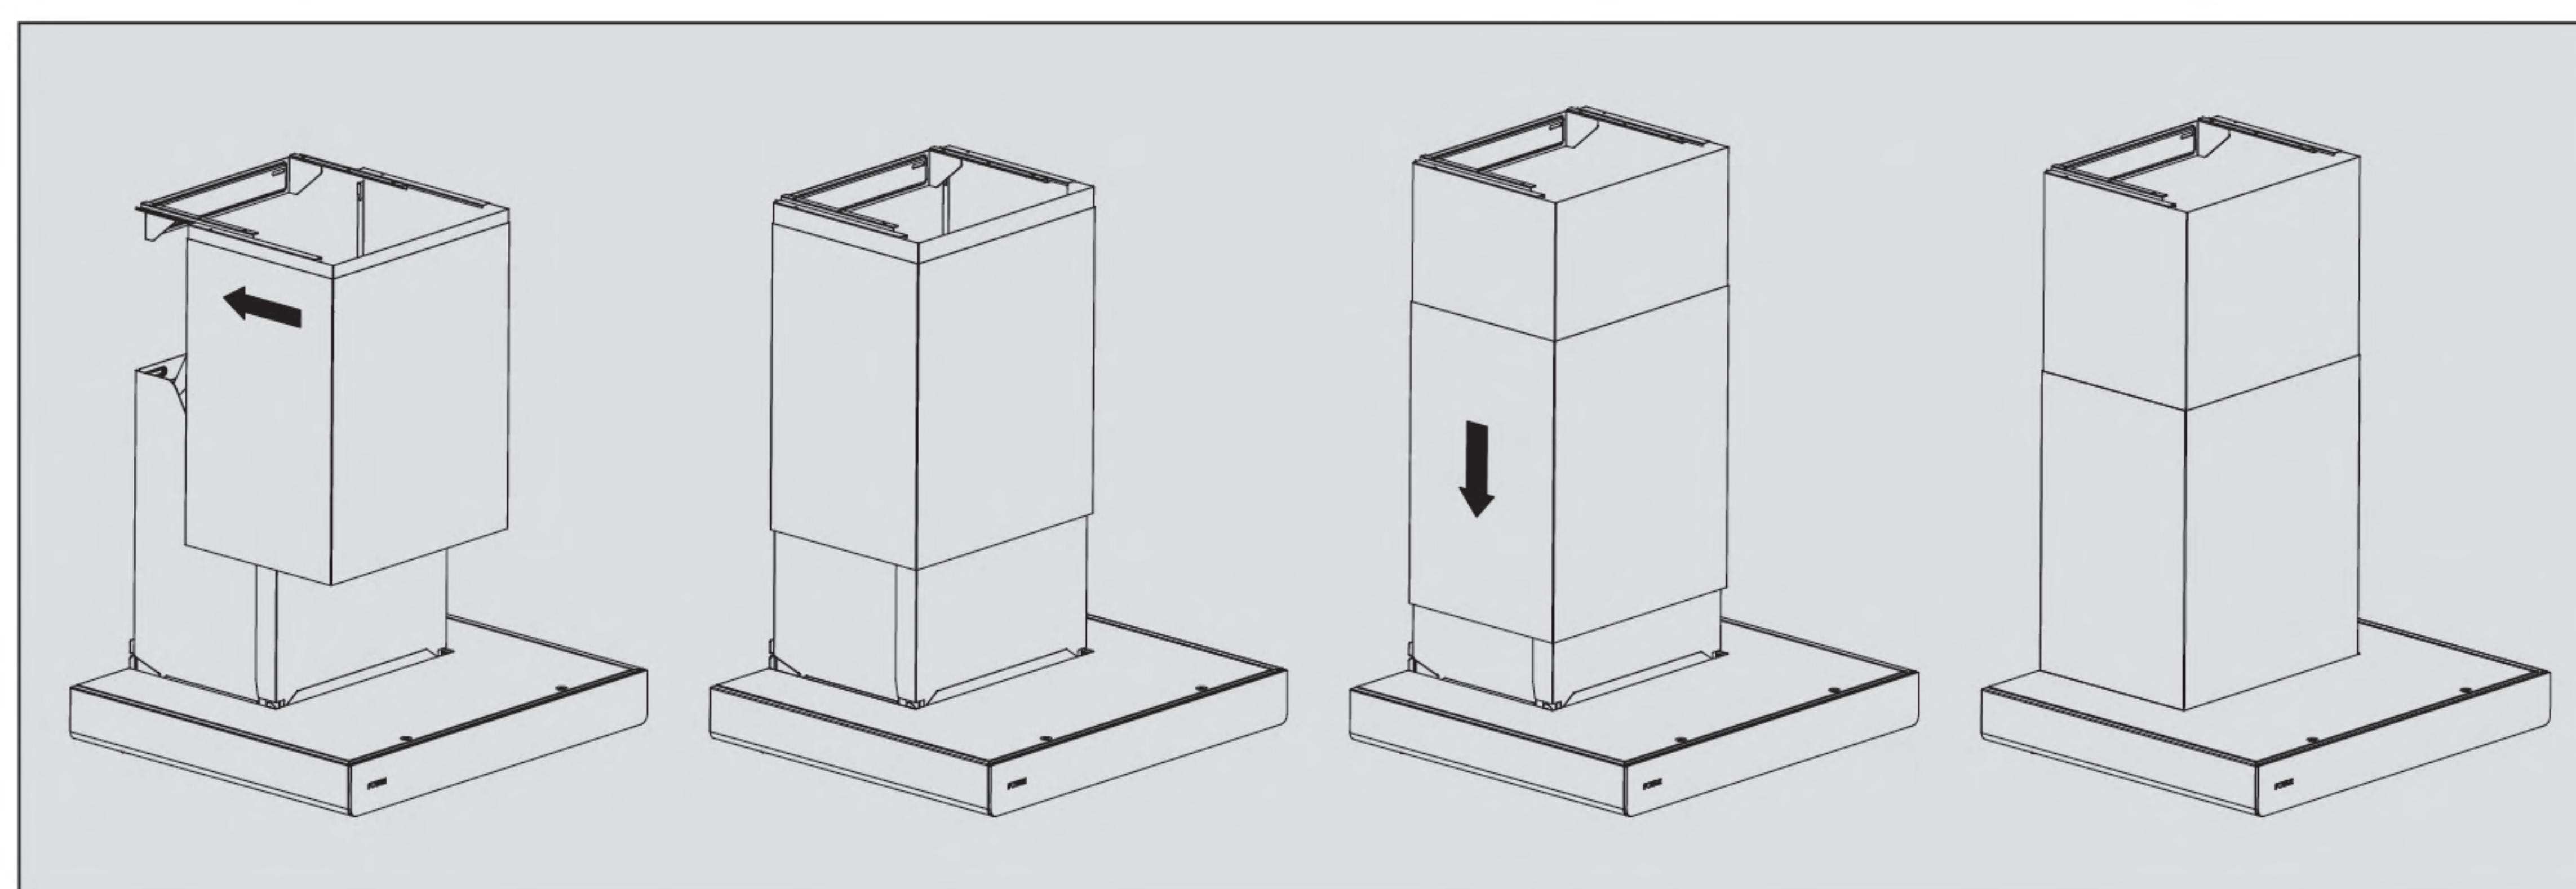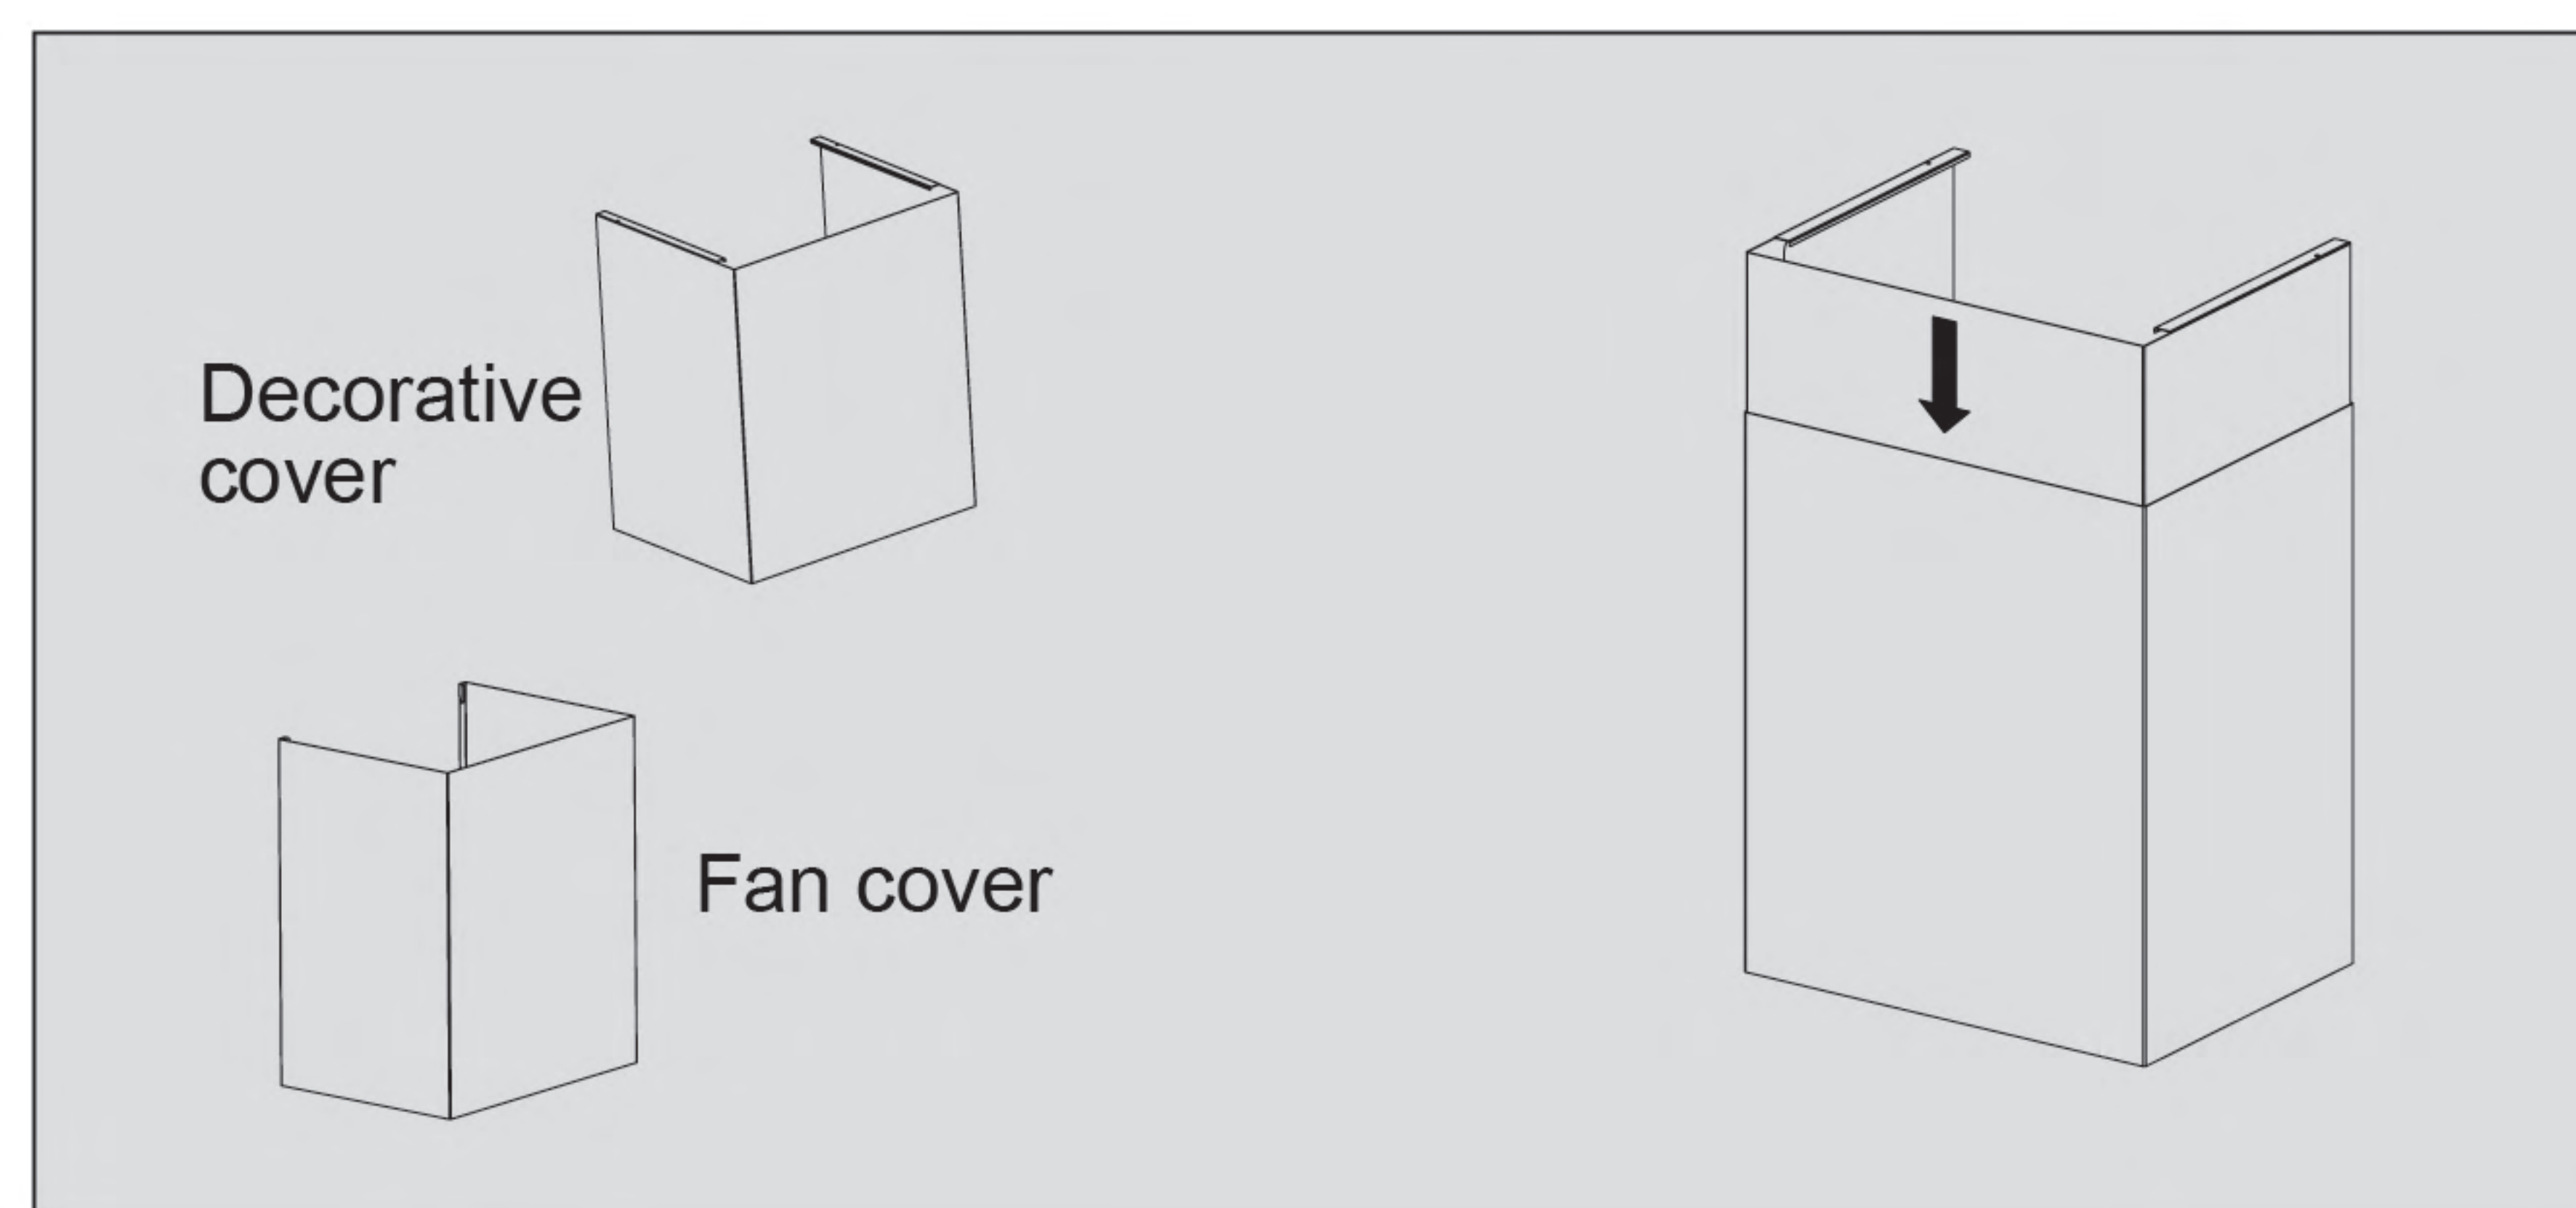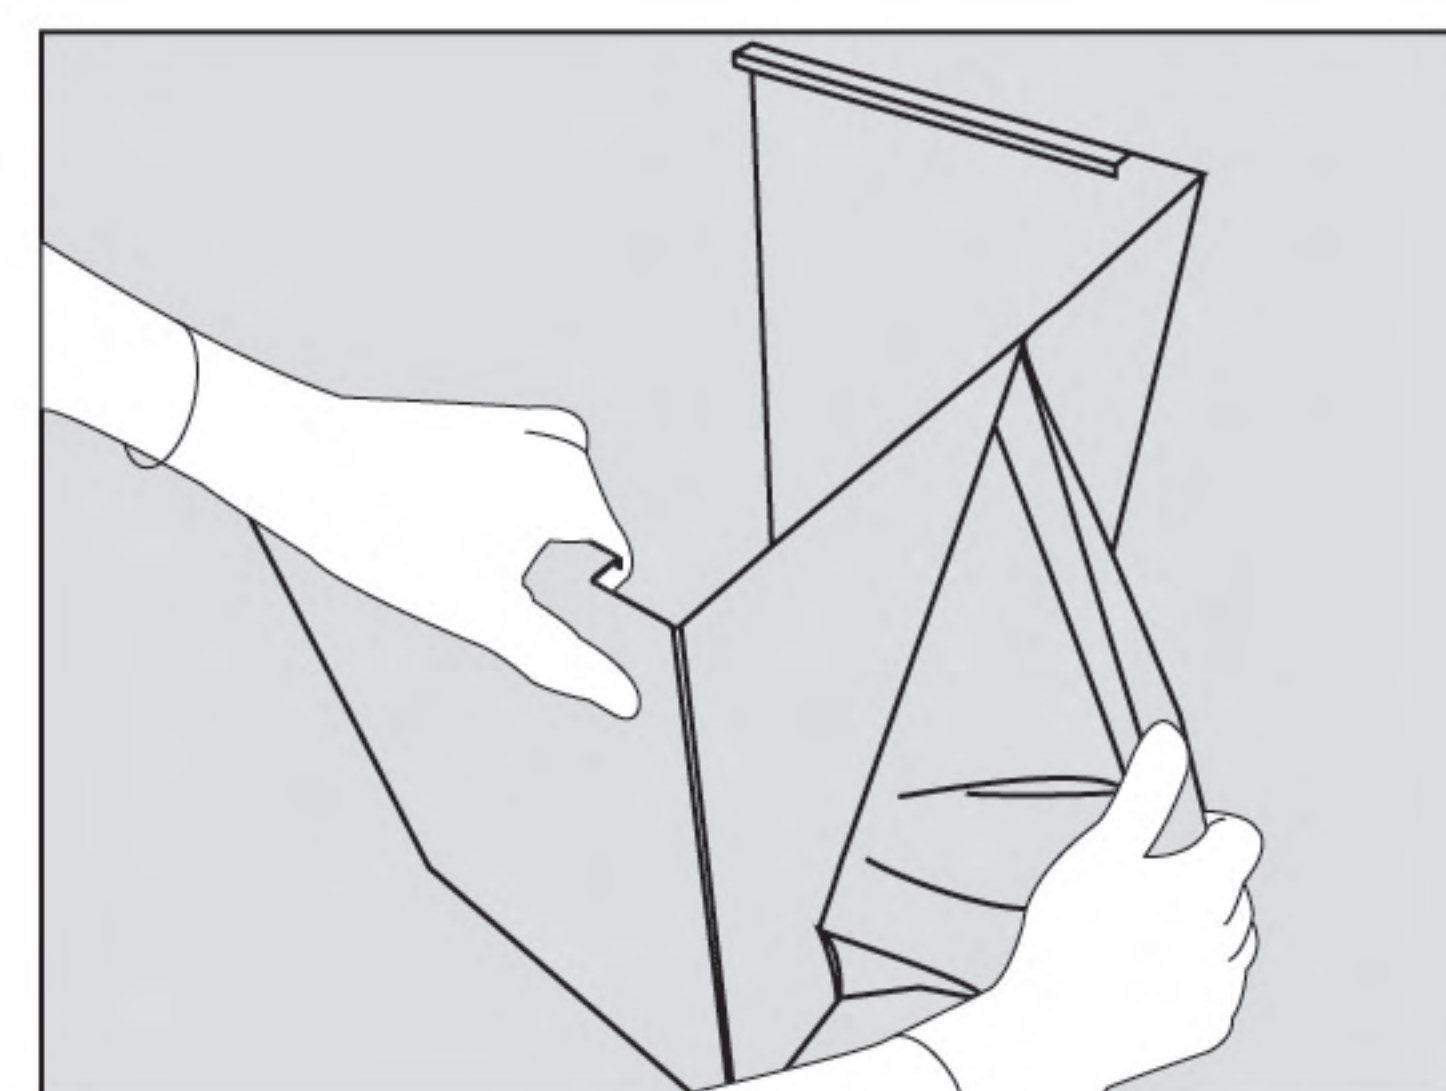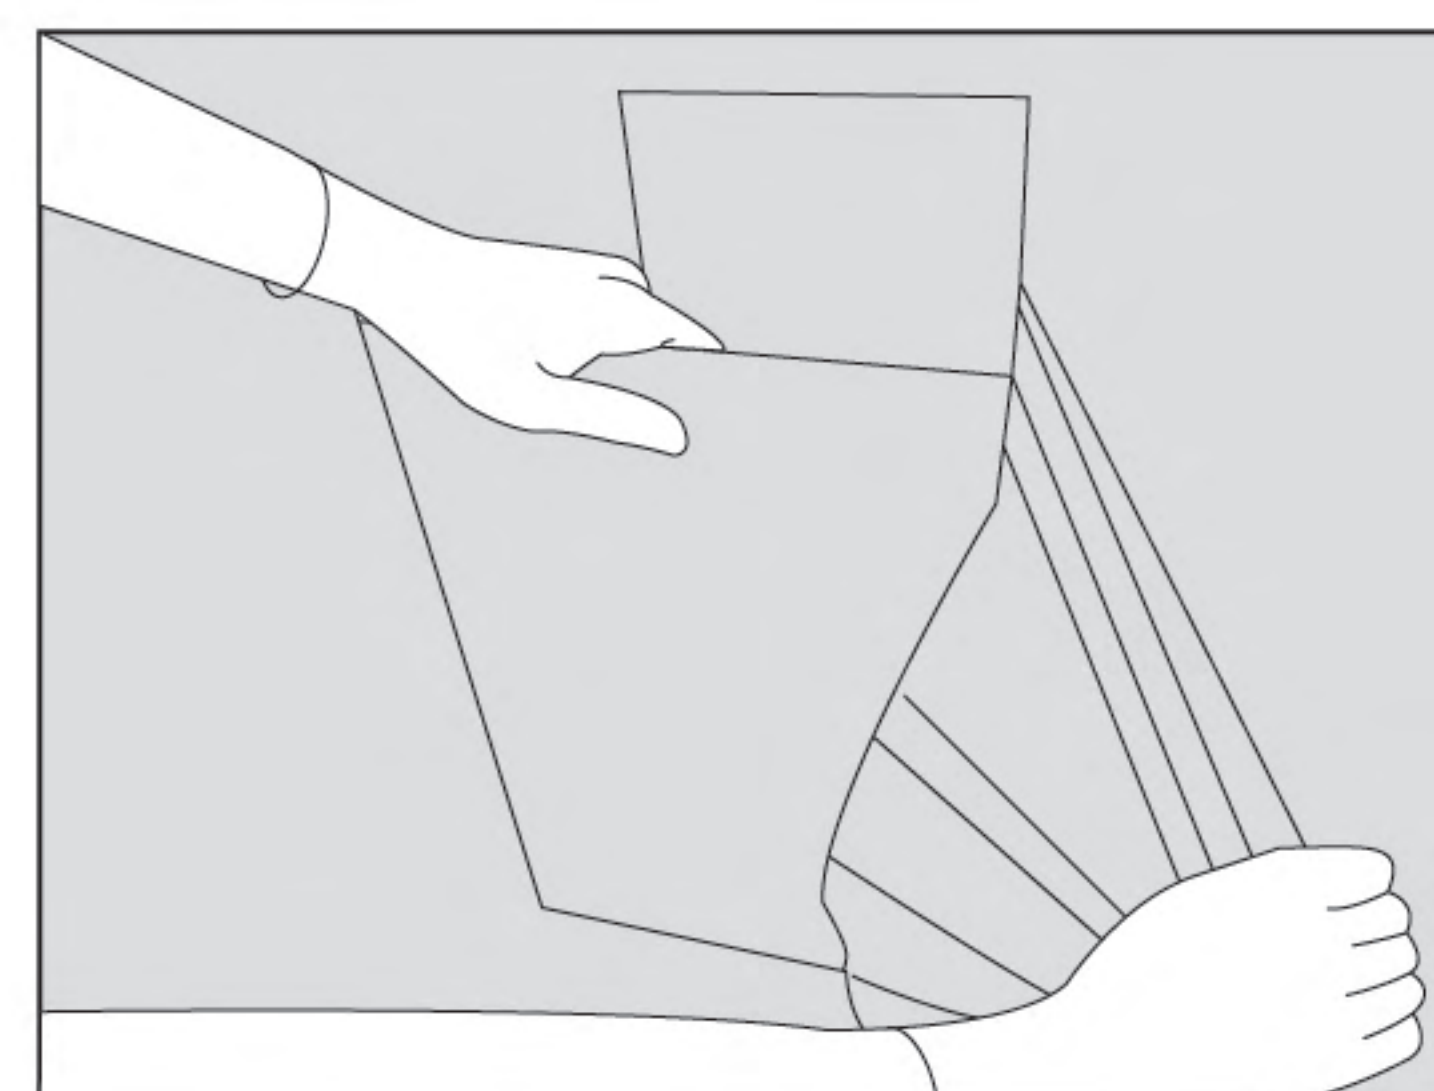


9. Install the wing plate:

- (1) Tear off the protective films on the surface of the wing plate;
- (2) Hold the front side of the wing plate tightly with both hands, and put the left and right hooks on the rear side of the wing plate into the hook frame at the bottom of the fume hood;
- (3) Hold the wing plate with both hands, rotate it upward, and then clamp the wing plate locking tab into the touch tab in the fume hood.

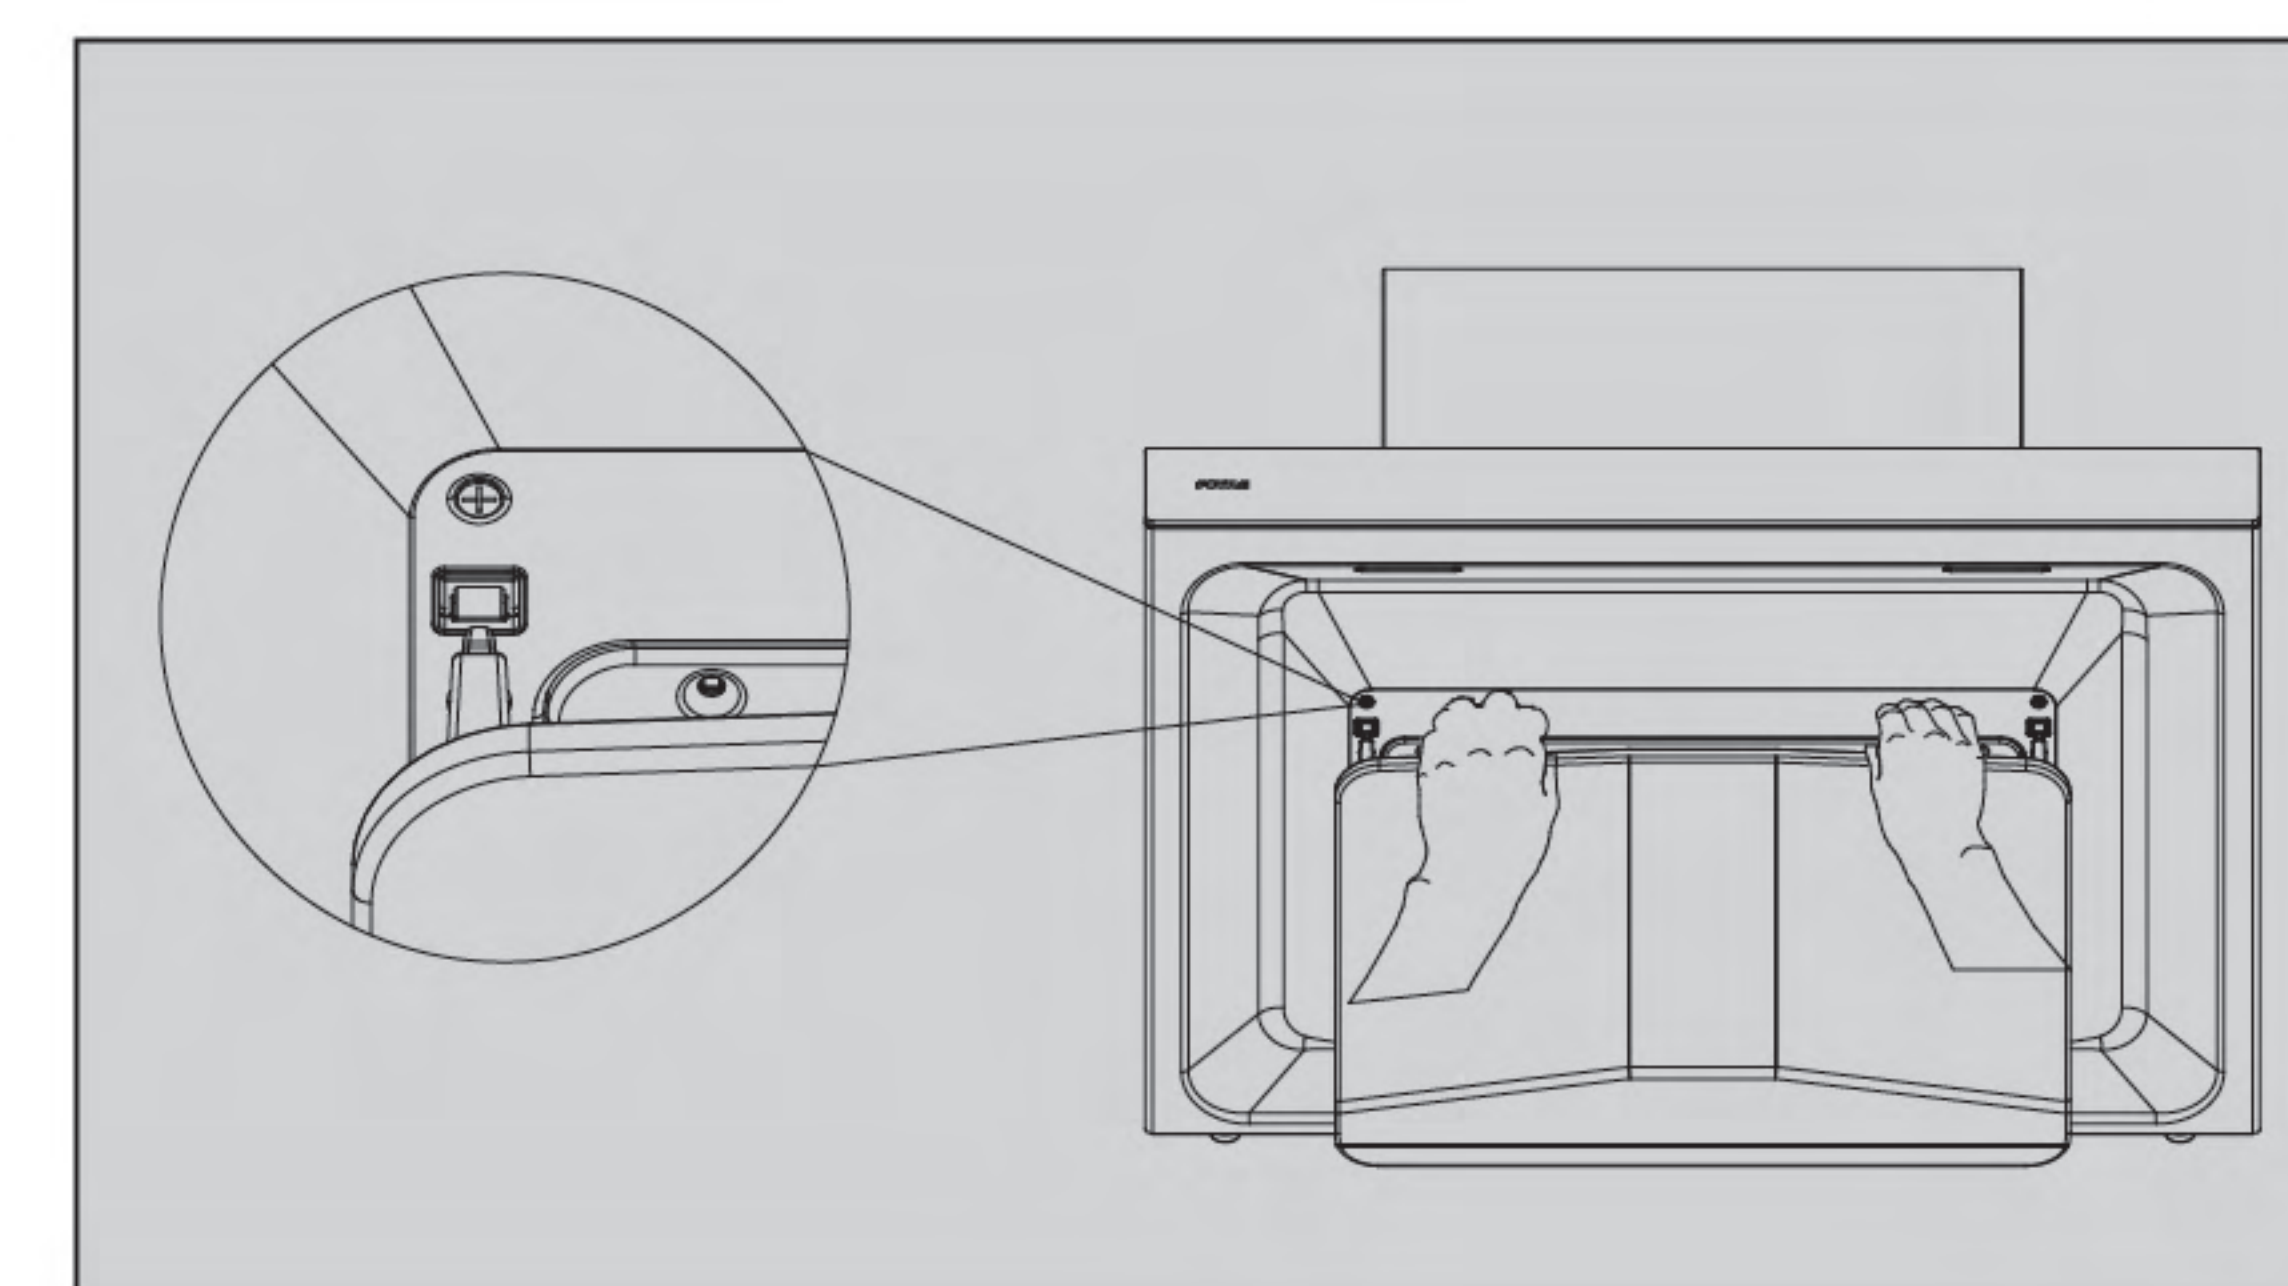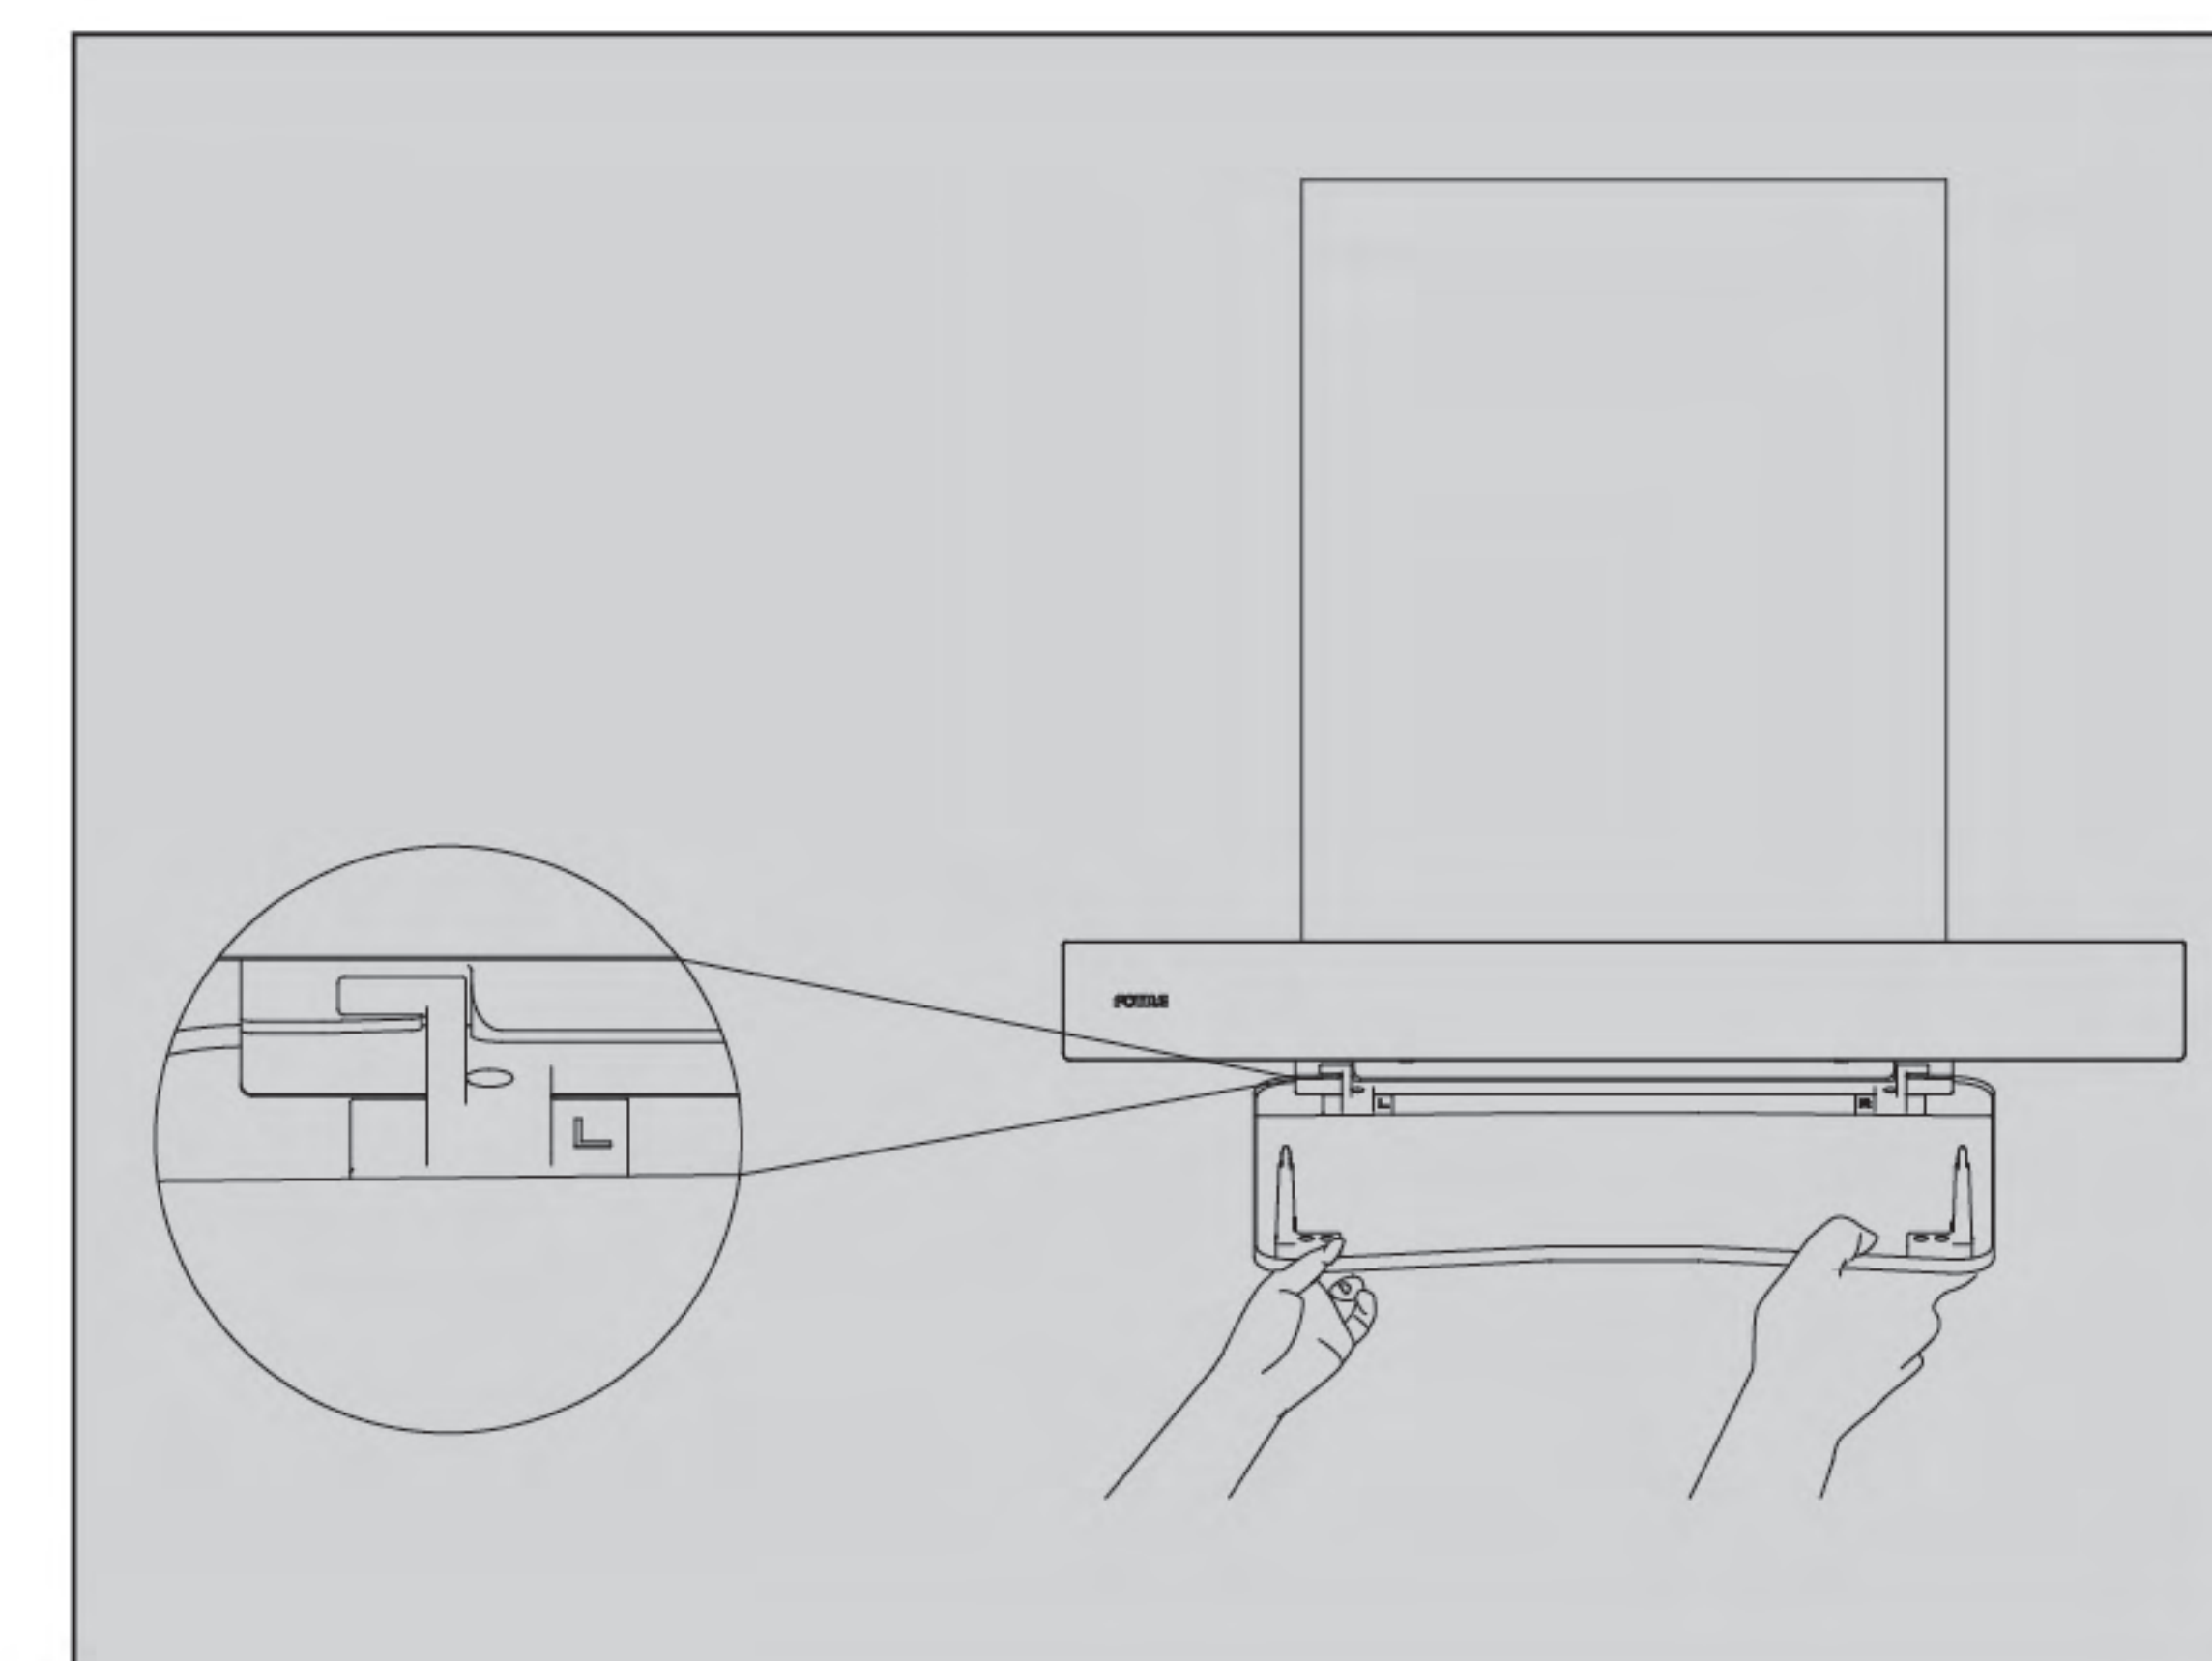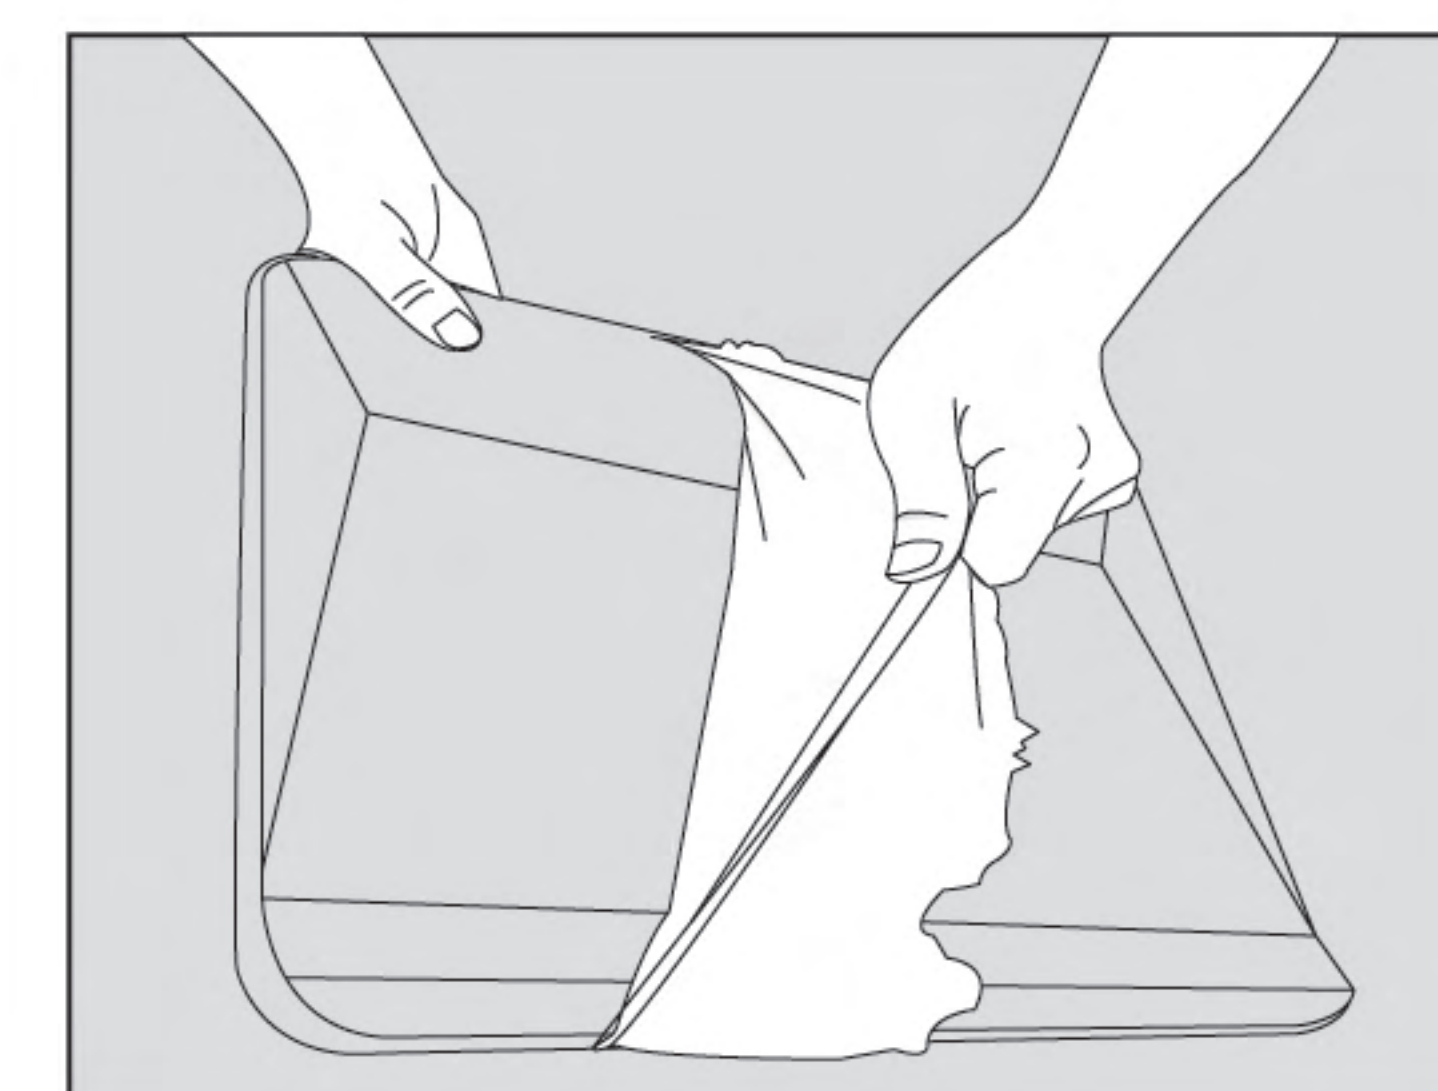

- a. First take down the fan cover prior to installation;
- b. Select the drill bit according to the specific conditions of the drilling place.

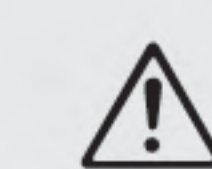

Warning

Don't exhaust the waste gas from the range hood to the hot flue for exhausting combustion gas or smoke of other fuels.

Debugging

- 1. Press ○ , check whether smoke baffle turns up. Press ☀ , check whether light works normally.
- 2. Press ⚙ or ⚙ , check whether motor turns normally. In the following cases, cut off power, stop turning and check whether it is reason of installation (if range hood breaks down, please contact our service center).
  - (1) Machine shakes violently
  - (2) Expansion pipe looses
  - (3) Impeller doesn't turn
  - (4) Impeller with obvious grating when turning
  - (5) Motor with abnormal noise
- 3. Check whether buttons are functioning normally according to the operation instructions. (If it is determined that the rangehood is faulty, please call the Fotile authorized service center)

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Cleaning and Maintenance

I. Precautions for cleaning and maintenance




For convenient use, please clean the surface of the range hood frequently, which is good for the normal use of range hood.

- 1. Clean with neutral soap or neutral detergent, and dry the surface of machine body with a soft cloth after cleaning.
- 2. Clean the stains on the surface of range hood with neutral detergent, and keep the detergent away from all buttons. Drop the detergent to the stains and keep it there for a moment (the detergent should not be kept on the machine body for a long time, otherwise it will damage the machine), and wipe the stains with soft cleaning cloth; remove the detergent with a damp towel, and then wipe the machine body with a soft dry towel.
- 3. Do not allow stains to remain on the surface of the range hood for too long.
- 4. If the stainless steel panel is stained with salty liquor, disinfectant, bleaching powder and other cleanser, please wipe it by wet cloth at once and dry it by dry cloth.




- a. There is a fire risk if cleaning is not carried out in accordance with the instructions.
- b. Please cut off the power first before cleaning and replacing components so as not to get an electric shock.
- c. Prevent the electrical parts such as motor and all control buttons from water while cleaning.
- d. Do not put your hand into the impeller operating area during operation of the impeller.
- e. Please don't clean with gasoline, acidic substance, benzene, solvent and other chemical agents.
- f. Please don't clean the surface with rough material like steel wire ball, brush or coarse cloth, etc. It will greatly scratch the surface.

II. Routine Cleaning

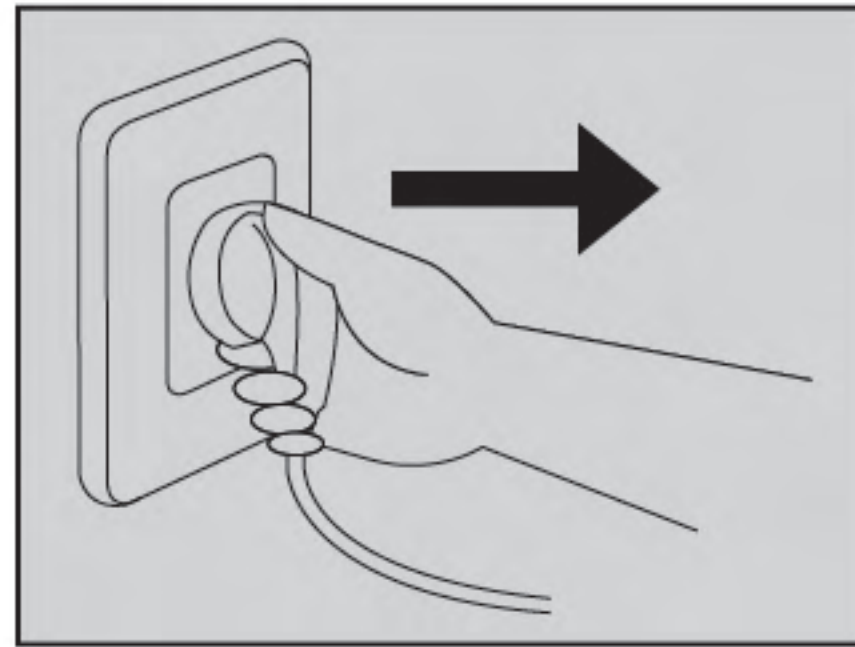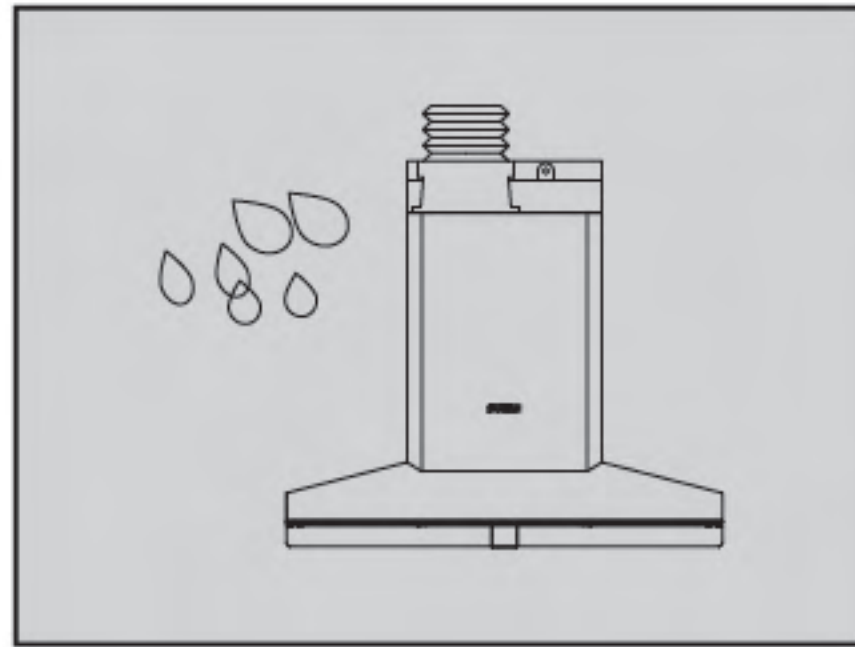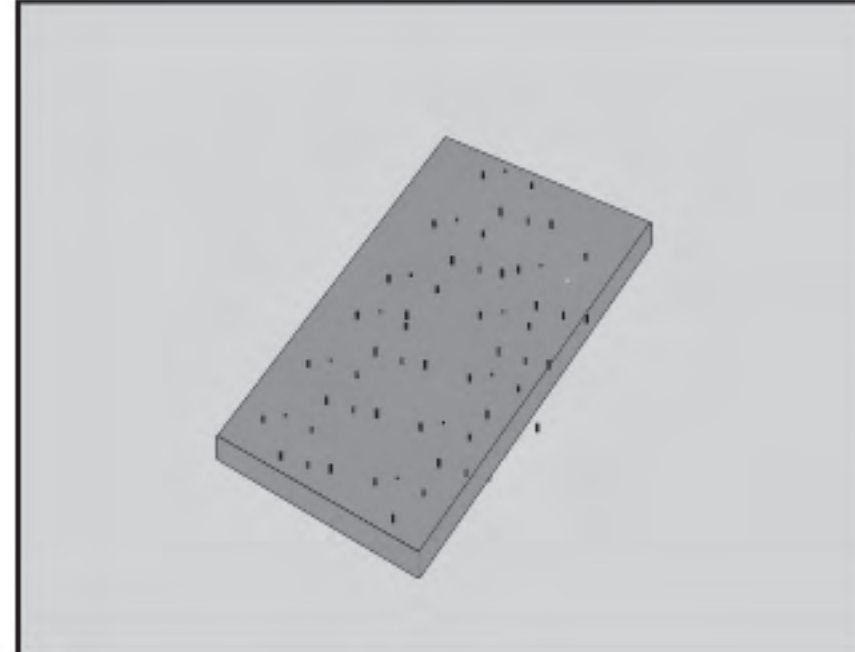
|                                                                                       |                                                                                                                                              |                                                                                       |                                                                                                                                                                                                                        |
|---------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | 1. Cut off the power before cleaning.                                                                                                        |  | 2. All electric parts, include motor, switch, etc. should be away from water.                                                                                                                                          |
|  | 3. Please don't clean the surface with rough material like steel wire ball, brush or coarse cloth, etc. It will greatly scratch the surface. |  | 4. Please don't clean with gasoline, acidic substance, benzene, solvent and other chemical agents. If you need to clean, please use neutral cleanser, and wipe dry the appliance surface by soft cloth after cleaning. |



5. If the stainless steel panel is stained with salty liquor, disinfectant, bleaching powder and other cleanser, please wipe it by wet cloth at once and dry it by dry cloth.

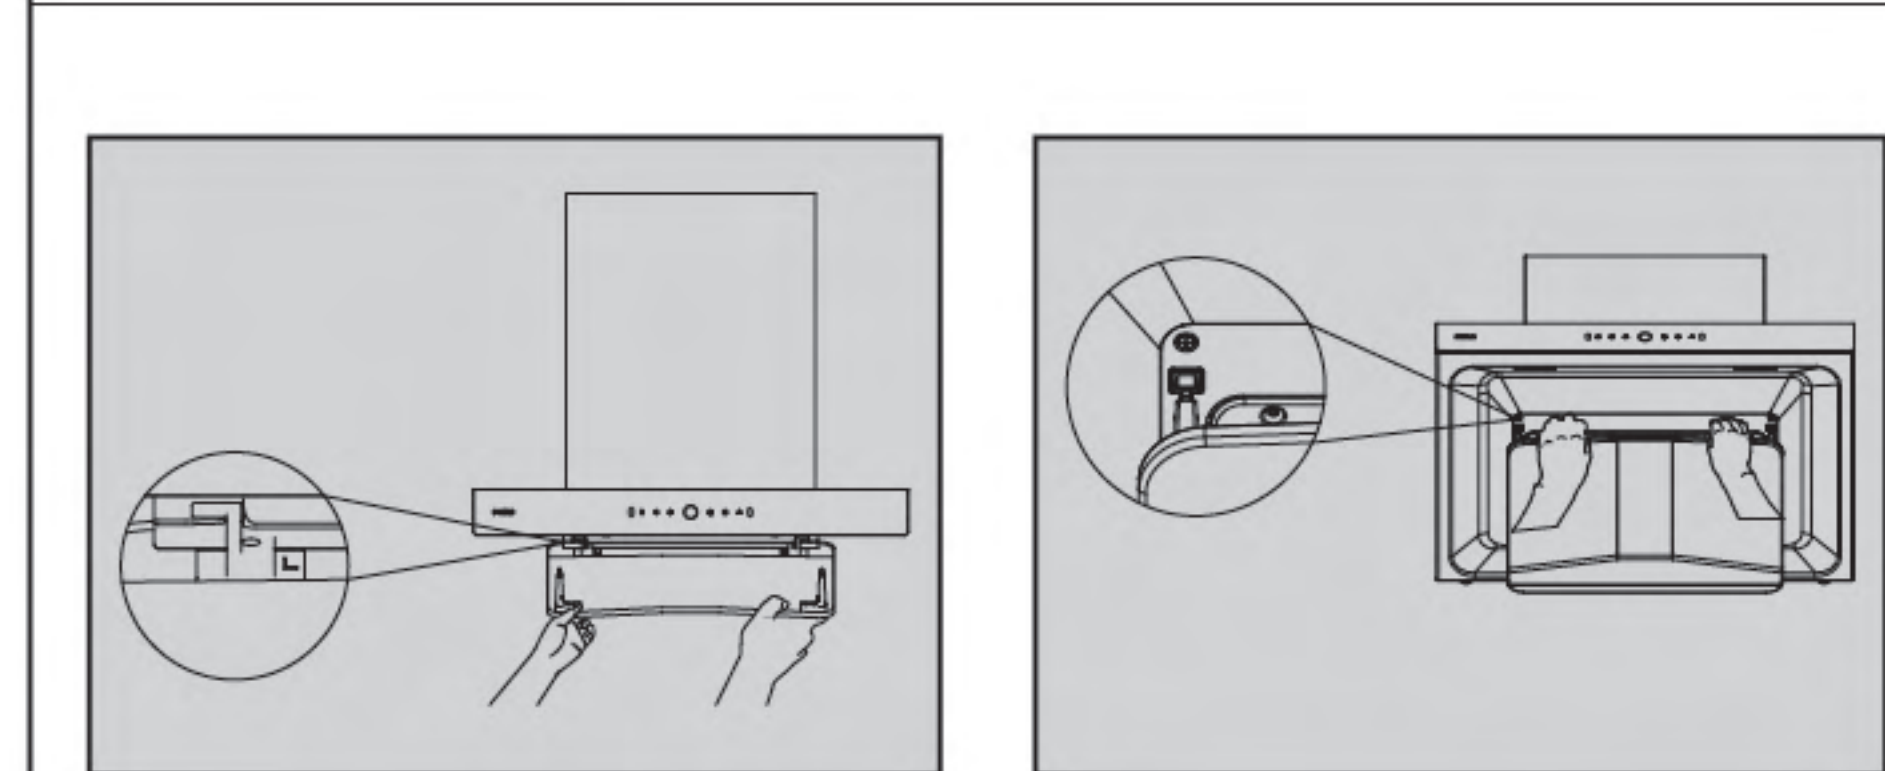

6. First, grasp the front edge of the wing plate with both hands, flip it downward to make the wing plate claw detach, then flip it downward by a certain angle, and finally take out the wing plate with both hands holding it smoothly.

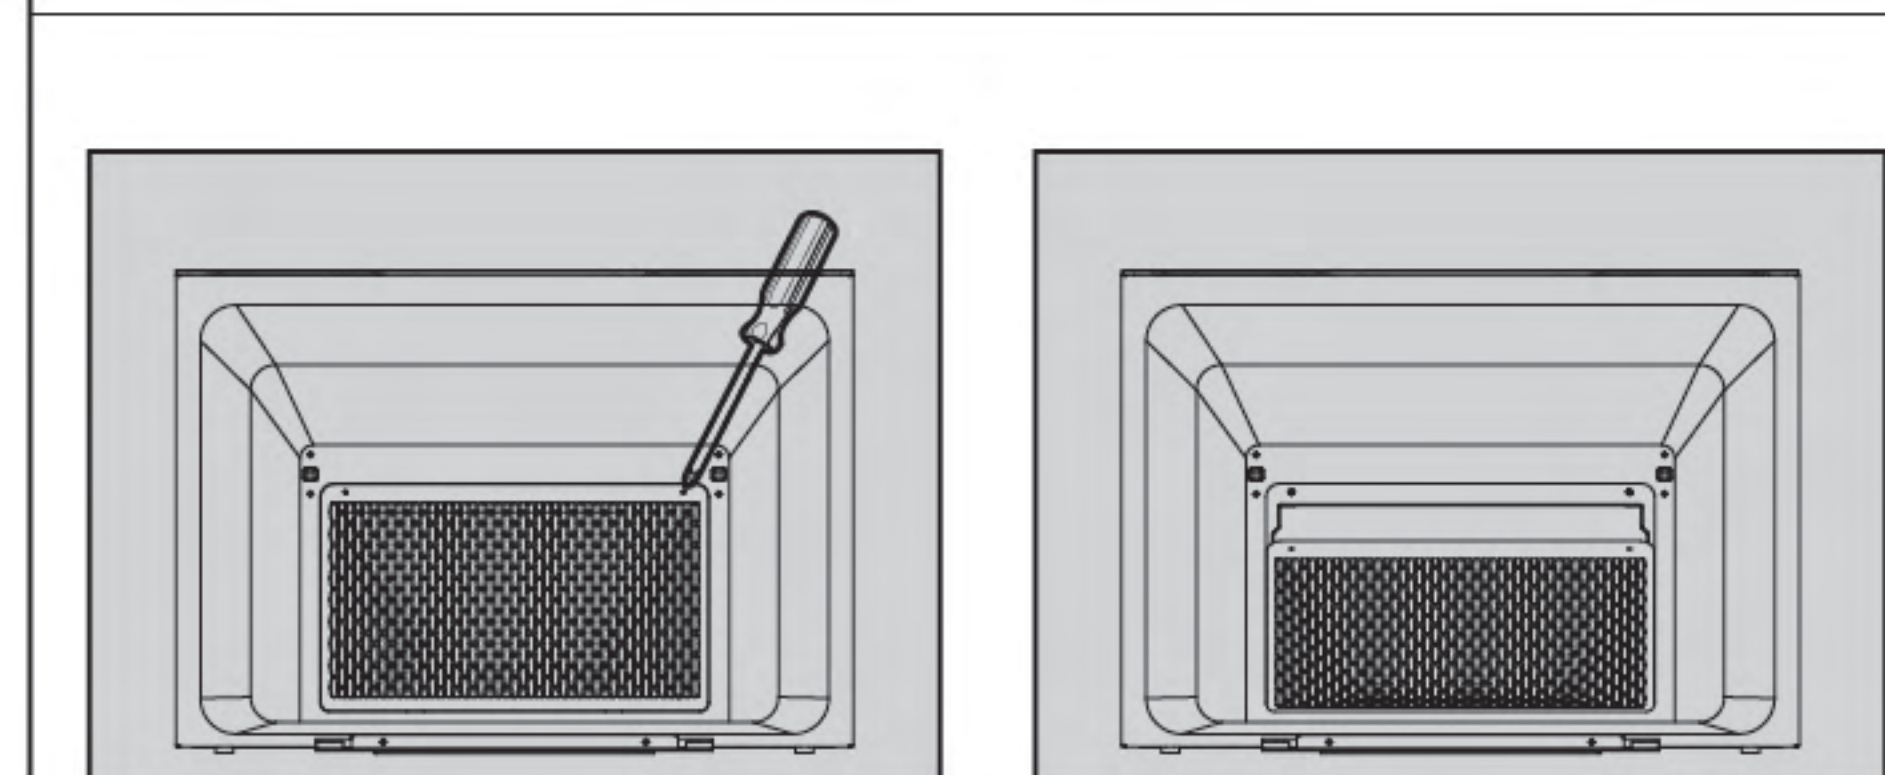

7. Drag the oil screen with the left hand and loosen the two screws that secure the oil screen with a Phillips screwdriver in the right hand to remove the oil screen.

- 
- a.After cleaning, restore the smoke baffle shield before powering off.

b.Please wipe surface of range hood and surface of air inlet net then close smoke baffle shield after using range hood every time.

c.Use type lamp is self-ballasted flourescent reflector lamp-Interral induction type ballast.

1.Max wattage:3W

2.Voltage range:12V

3.Dimensions:width 72mm/depth 19mm/height 21mm

Usage

Main Technical Specifications

Electrical parameter

| Model   | Voltage/Frequency | Input Power | Motor Power | LED Light Power |
|---------|-------------------|-------------|-------------|-----------------|
| EMG7509 | 220~240V/50Hz     | 290W        | 284W        | 3W×2            |


Exhaust model (exhaust pipe)

| Model                   | EMG7509 | Product size | 758mm(L)×540mm(W)×595mm(H) |             |          |  |
|-------------------------|---------|--------------|----------------------------|-------------|----------|--|
| Max static pressure(Pa) |         | 1000         |                            |             |          |  |
| Gear                    |         | Turbo mode   | High mode                  | Middle mode | Low mode |  |
| Air flow(m³/h)          |         | 1090         | 900                        | 710         | 470      |  |
| Noise(dB(A))            |         | 57           | 52                         | 46          | 37       |  |

- 
- a. Noise shown in table is sound pressure level. The corresponding sound power level is: 49 dB(A) for low,58 dB(A) for high,64 dB(A) for middle and 69 dB(A) for turbo.

b. The air flow in the table are tested in accordance with IEC 61591 standard. The noise in the table are tested in accordance with 60704 standard.


Operation Instruction

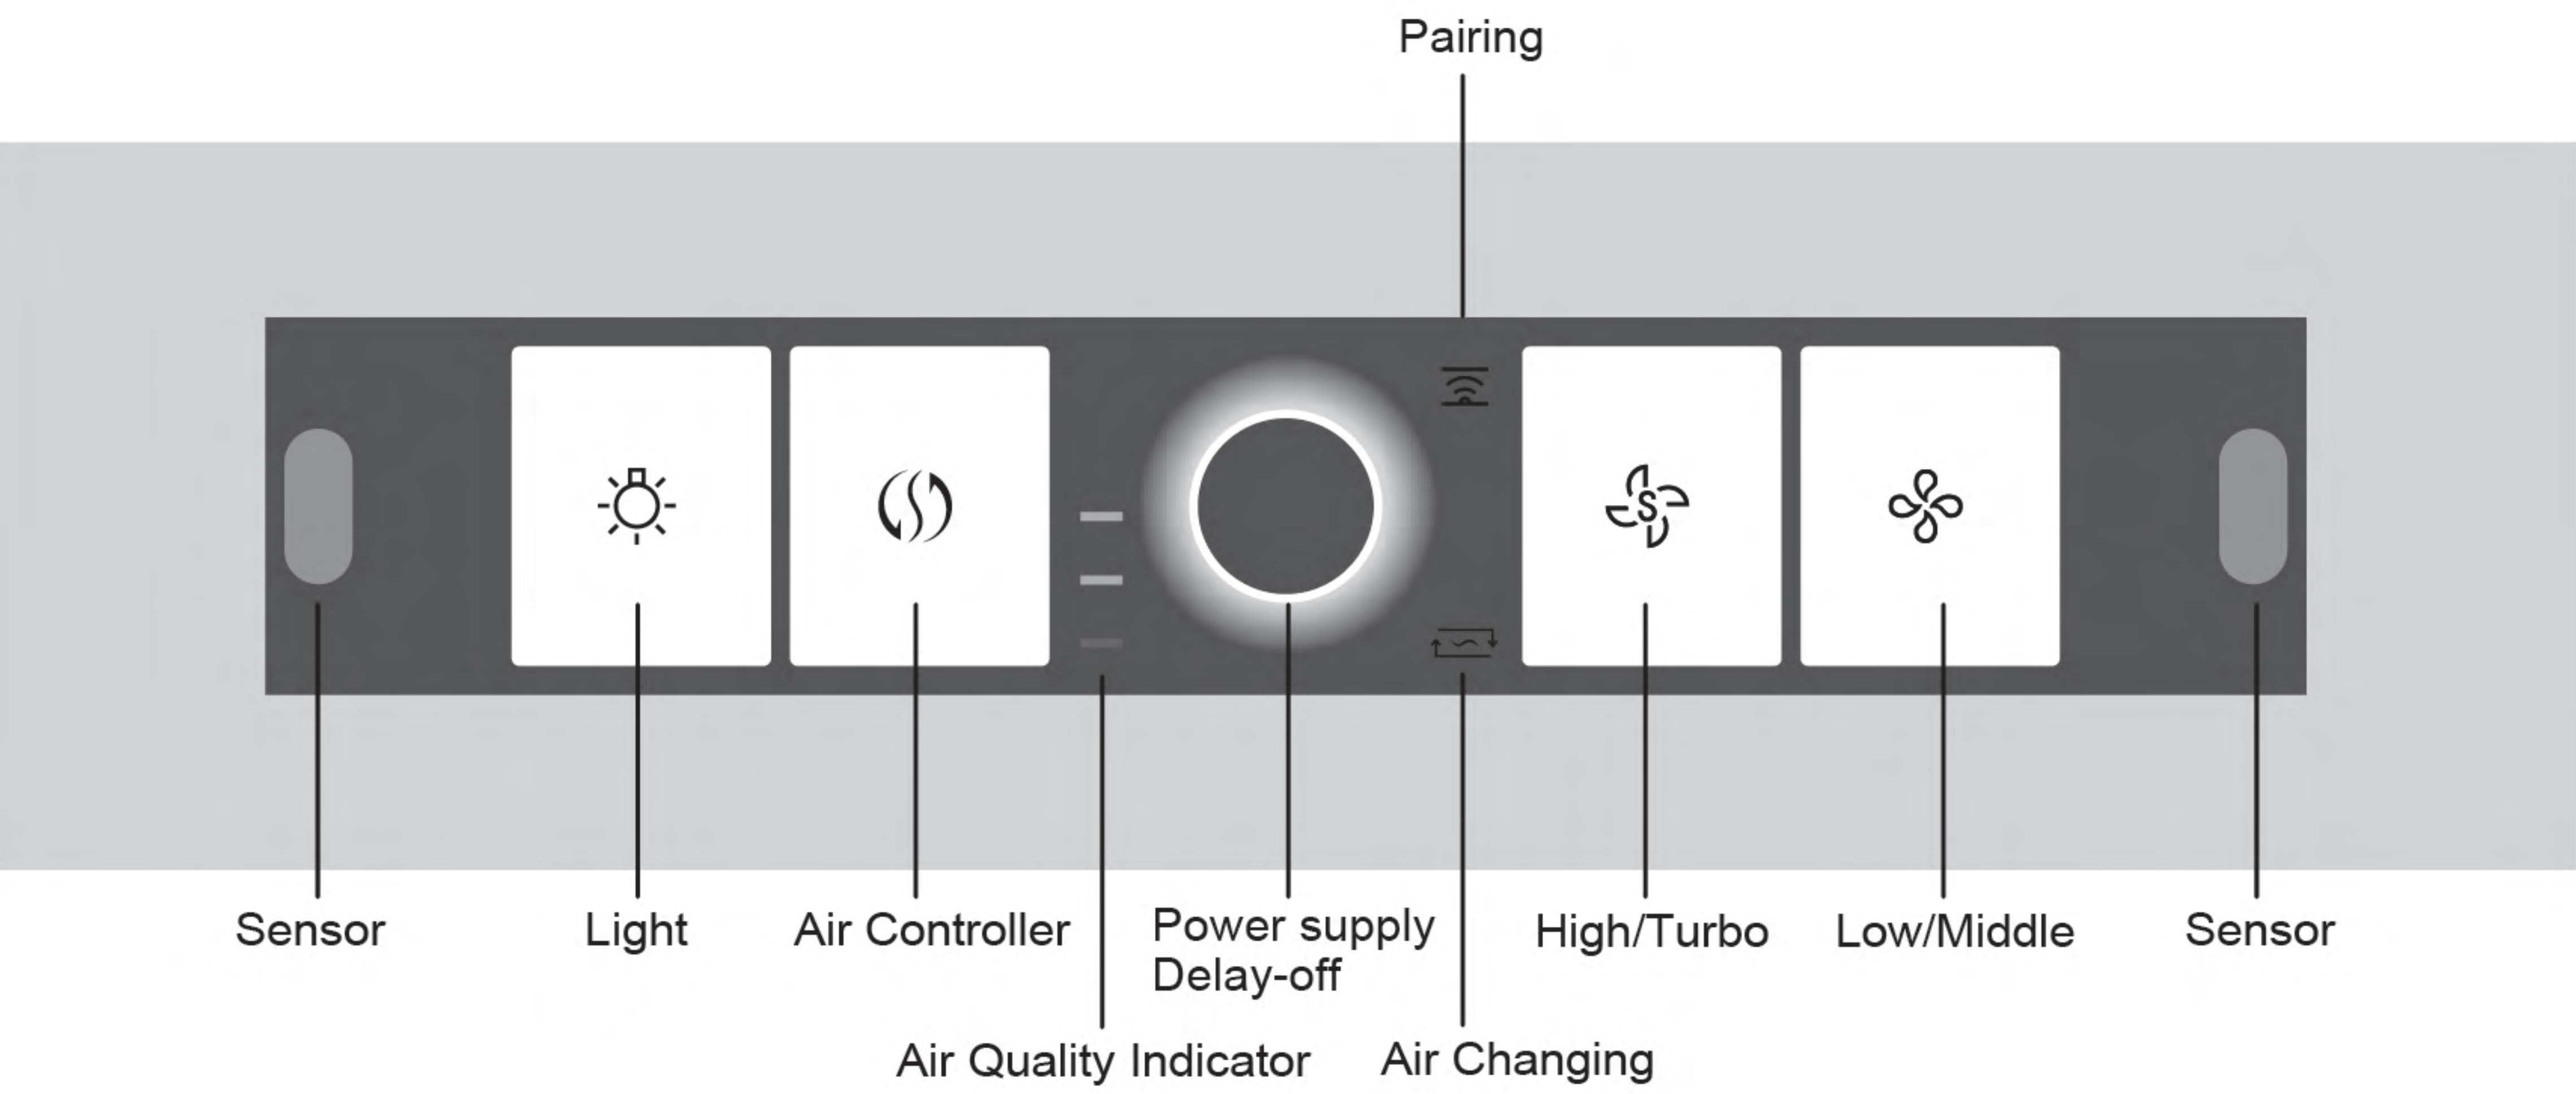

### ■ Gesture Function

In Off state, wave your hand and quickly pass by the induction windows on both ends of the operation panel. The range hood will start its high-speed operation and the LED lamp will be switched on. Wave your hand again and quickly pass by the induction windows on both ends of the operation panel, the power/delay  indicator will flash and the range hood will be in the shutdown delay status. The LED lamp remains in its original state, and the light can be turned off by gently touching the lamp button. After operating for 1 minute in its current state, the fan will switch to low-speed operation and operate for 4 minutes before shutting down.

In Off state, press the lighting button  and low-speed/middle-speed button  simultaneously for 5 seconds, all the buttons on the control panel will be lit for 1 second and then go out, the gesture induction function is enabled/disabled.

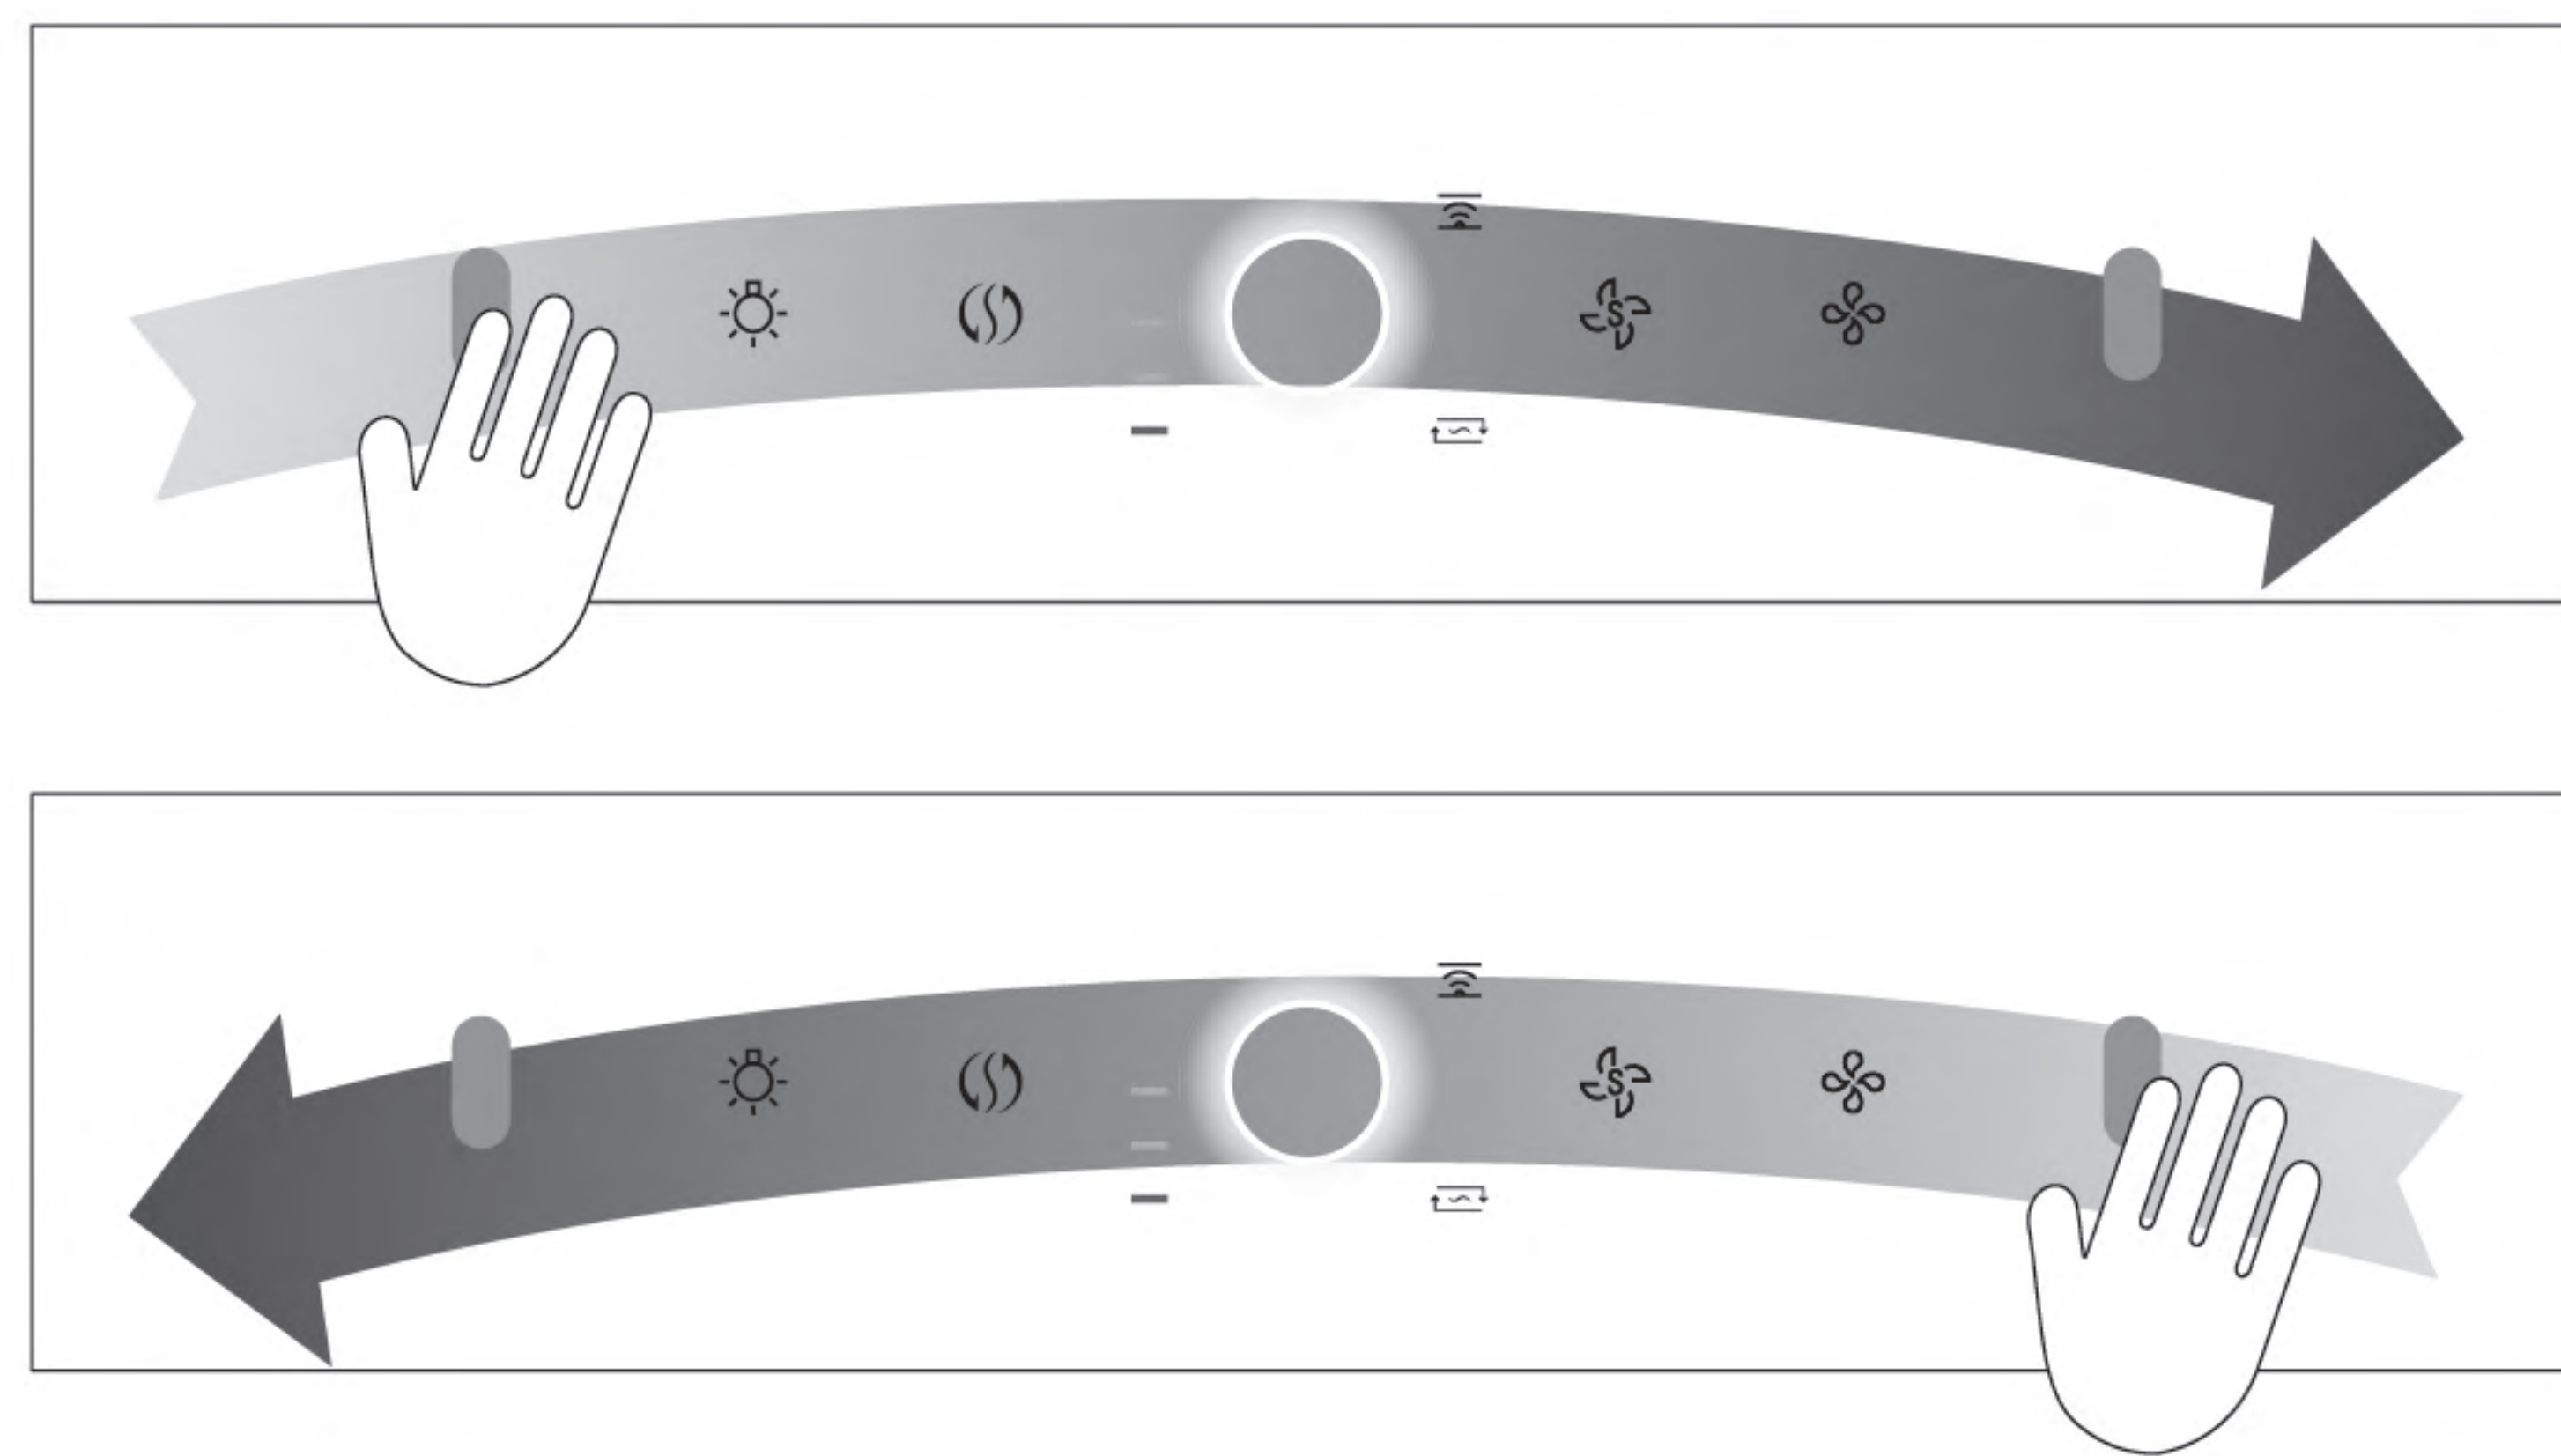

### ■ Power/Delay button

In Off state, gently touch the power/delay button once, the range hood will be in the standby state, the power/delay button indicator will be fully lit, and other button indicators will be slightly lit; in the operating state, gently touch the power/delay button, the power/delay button indicator will flash and the range hood will be in the shutdown delay state. The LED lamp remains in the original state, and the light can be turned off by gently touching the lamp button. After operating for 1 minute in the current state, the fan will switch to low-speed operation for 4 minutes before shutting down.

When in standby or delayed shutdown state, gently touch the power/delay button to keep it dim, and all other button lights will go out, and the range hood should be turned off.

All the following button commands will be carried out in standby mode:

### ■ High mode/Turbo mode

Gently touch the high mode/turbo mode. The high mode/turbo mode indicator will be half lit, and range hood will operate in high mode; gently touch the high mode/turbo mode again, the high mode/turbo mode indicator will be fully lit and flash, and the range hood will operate in turbo mode state. After 100 seconds, the range hood will return to high mode operation, and the high mode/turbo mode indicator will be half lit.

When the range hood is operating in turbo mode state, gently touch the high mode/turbo mode again, the high mode/turbo mode indicator will be lit slightly, and the range hood will stop operating.

### ■ Low mode/Middle mode button

Gently touch the low mode/middle mode button, the low mode/middle mode indicator will be half lit, and the range hood will operate in low mode state; gently touch the low mode/middle mode button again, the low mode/middle mode indicator will be fully lit, and the range hood will operate in middle mode state; gently touch the low mode/middle mode button again, the low mode/middle mode indicator will be lit slightly, and the range hood will stop operating.

### ■ Lighting button

Then press the light button slightly, and the light will turn fully on.

Note: When the light is fully on, touch the light button again, and the lighting will switch in full-on, half-on, night light and off states in turn.

### ■ Air Controller

Gently touch the button of "Air Controller", and then the button will flash, and the range hood will enter the state of intelligent air quality detection. When the air quality is detected to be good, the air quality indicator will turn green. and the fan will not work; when medium air quality is detected, the air quality indicator will turn yellow and the "Air Changing" indicator will be on, and the fan will run in low gear; when poor air quality is detected, the air quality indicator will become red and the "Air Changing" indicator will be on, and the fan will run in high gear.

When the fan is not working and the air controller is turned off, press and hold the "Air Controller" button for 3 s. At this time, the button will appear half bright or half-on. One can enter the screen lock state, and all the key, button and gesture functions will be locked, so that the touch will be invalid. If pressing the "Air Controller" button for another 3 s, one can exit the screen lock state then.

Introduction to Hood-hob Linkage Function



If you have purchased FOTILE Range hood, and Gas Hob which have linkage function at the same time, you can enjoy their linkage function!

How to use:

- 1. Code-matching connection (code-matching between the range hood and the hob is required before their connection)
  - (1) Install the range hood and the gas hob properly and power them on; meanwhile, ensure that all knobs of the hob are in the off state.
  - (2) Gently touch to start the range hood, making it in the standby or operating state; press and hold the LED Lamp button for 5 seconds until the range hood beeps once, and meanwhile, the hob-to-hood connection icon flashes to enter the code-matching state. In this state, turn on the hob knob and wait for a moment until the range hood beeps once; meanwhile, is normally on, indicating that code-matching is completed.

**⚠ Caution:** If the electrical control panel of your range hood or hob is repaired or replaced, please conduct code matching again according to the above-mentioned operating steps.

- 2. After code matching is successful, the connection function of the range hood and the gas hob can be realized.

After the gas hob is ignited, the range hood will automatically be turned on and the fan will operate in high gear; meanwhile, the LED Lamp will be turned on;

After the gas hob is turned off, the range hood will enter the delay state.

- 3. Unmatching the hob-to-hood connection
  - (1) Power on the range hood and the hob and ensure that all knobs of the hob are in the off state;
  - (2) Gently touch to start the range hood, making it in the standby or operating state; press and hold the LED Lamp button for 5 seconds until the range hood beeps once, and meanwhile, the hob-to-hood connection icon flashes to enter the unmatching state. In this state, turn on the hob knob and wait for a moment until the range hood beeps twice; meanwhile, is off, indicating that unmatching is completed.

⚠ Hints:

- 1.The range hood will be turned off automatically if it is not operated for 2 minutes in the standby state;
- 2.It’s suggested that the range hood be turned on during steaming to keep the kitchen air fresh, otherwise, too much steam passing by the Sensor Window may trigger the GESTURE function.

Normal Malfunction and Trouble Shooting

| Malfunctions                               | Possible reasons                                                    | How to check                                                           |
|--------------------------------------------|---------------------------------------------------------------------|------------------------------------------------------------------------|
| Range hood can’t work, light can’t lighten | Haven’t connected with power supply                                 | Check whether the plug is well inserted or not                         |
|                                            |                                                                     | Check whether there is electricity or not in the plug                  |
| Motor can working, but light can’t lighten | LED light is damaged                                                | Replace LED light (done by professional people)                        |
| There is machinery shaking noise           | Screw is loosed                                                     | check whether the surface screws are tightened or not                  |
| Suction power is weak                      | Too long distance between range hood and stove                      | Lower the range hood installation height (done by professional people) |
|                                            | Too much ventilation near the range hood leads to strong convection | Close some doors and windows                                           |
| Noisy                                      | Exhaust pipe surface is distorted                                   | Reinstall exhaust pipe (done by professional people)                   |



- a.Change the LED light: please contact FOTILE after-sale service center.
- b.If the range hood still can't work after getting rid of the above malfunctions,please contact FOTILE service center.
- c.The following information is required for the warranty period:
  - 1.Date of purchase      2.Product model
  - 3.Serial number      4.Relevant vouchers for purchase
- d.The ventilator shall be not allowed to be repaired by any party other than Fotile’s appointed technicians.Otherwise it may cause serious consequences and exempt the product from warranty.
- e.The following circumstances do not fall into the scope of free warranty, and a fee will be charged for repair.
  - 1.Damage resulting from improper handling, installation, use, maintenance and safekeeping conducted by customer.
  - 2.Failure and damage caused by using the product beyond the normal operating conditions(damage caused in the case that the voltage is higher than 264V or lower than 189V).
  - 3.The product installed, dismantled or repaired by customer or any party other than Fotile’s appointed service staff or agency.
  - 4.Discrepancy between the information on the purchase voucher and the warranty card and the product.
  - 5.Product damage caused by force majeure (such as natural disaster and war, etc.).
  - 6.Product failure or damage arising from use not in conformity with the “instructions”.

