

FOTILE



SD2F-P6, SD2F-P6L
User Manual 產品使用說明書
En: page 1-21
中文: 第22頁至40頁

THANK YOU FOR MAKING FOTILE A PART OF YOUR HOME

Dear Customer,

Thank you for choosing the FOTILE SD2F-P6 3-N-1 In-Sink Dishwasher manufactured by FOTILE. Please read the User Manual carefully before using your new Sink Dishwasher. Please also retain this manual for further reference.

If you have any questions during your initial use, please call the FOTILE Service hotline.

FOTILE
Happiness Starts In Your Kitchen!

Table of Contents

Safety Instructions	2
Main Technical Specifications	8
Control panel	9
Placement of Tableware	12
Daily cleaning	13
Suggestions on Cleaning and Maintenance	15
Identification and treatment of common faults	16
Exploded View	17
Abnormal condition and fault codes	19
Customer Service	21

Safety Instructions

To avoid injury and property damage to users and others, we have categorized the safety instructions and assigned symbols as shown in the table below. Please review all the instructions carefully, and strictly observe each one of them. Failure to do so can result in personal injury or product damage. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. The door should not be left in the open position since this could present a tripping hazard; Before loading the dishwasher, please read the instructions carefully and refer to the section of Placement of Tableware for details.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Please call FOTILE Customer Service to schedule a Service Visit.

■ Categories by Degree of Damage or Injury

 DANGER	Ignoring this symbol and operating incorrectly can cause danger, serious injuries or fire.
 WARNING	Ignoring this symbol and operating incorrectly can cause danger, serious injuries or fire.
 CAUTION	Ignoring this symbol and operating incorrectly can cause injuries or property damage.

■ Icons for Caution and Prohibition



! CAUTION: The tempered glass on FOTILE product has a minimal probability of spontaneous glass breakage due to its reinforcing mechanism.

If there are any conflicts between terms in this operation manual and national laws and regulations, the national laws and regulations shall govern.

* Special notes: Please use this product by strictly following the instructions in this operation manual. The company is not responsible for any property damage or bodily injuries caused by improper usage of this product.

 DANGER	
 Prohibition	Do not get the power cord, or any electric parts wet as this may cause electric shock or other accidental damages.
 Prohibition	Do not leave children unattended when using this product as this could cause electric shock or other accidental damages.
 Risk of Electric Shock	Before installation and Maintenance, please disconnect the power cord to avoid electric shock.
 Mandatory Action	When moving the unit, please pay attention to the edges and corners of the sink to avoid scratches or injury.
 Grounding	The electrical socket used with this appliance, must have reliable grounding to ensure safety. The grounding wire shall not be connected to a gas pipe, water pipe, lightning rod, or telephone line. Poor grounding may cause electric shock, personal injury, or property damage.

 WARNING	
 Prohibition	Do not use power sockets with loose or poor contact, this may cause electric shock, short circuit and or fire. Ensure secure connection of the power cord, or it may cause electric shock.
 Prohibition	Do not forcibly close the functional sink door when it is automatically opened; otherwise the door may be damaged.

⚠ WARNING

 Do not touch heating units when in use, as it may cause scalds.
Risk of Scalds

 Disassembly of the product for repair or changing parts should only be performed by a certified FOTILE Service Technician.

 Knives and other utensils with sharp points must be loaded in the basket with their points down or placed in a horizontal position.

 When you open the door after operation, hot steam may escape. Please stand away from the door to avoid scalds.

 Please use new hoses to connect appliances to the water source. Do not reuse old hoses.

 Some dishwasher detergents are strongly alkaline. They can be extremely dangerous if swallowed. Avoid contact with the skin and eyes and keep children away from the dishwasher when the door is open. Check that the detergent receptacle is empty after completion of the wash cycle.

 If water leaks during operation, please stop using and contact FOTILE after-sales service center.

 In the process of washing dishes and produce in the functional sink (dishwasher cavity), use light liquid dish soap for tableware only, and do not use any foaming detergents.

 Keep the plastic film and packing cases away from children to avoid suffocation accidents.

 For any operational errors, please stop using the product, unplug the power cord from the electrical outlet, and take the appropriate actions according to the "Troubleshooting" section in the User Manual. If the problem still persists, please call FOTILE Customer Service.

⚠ Caution

 Do not put objects with a lot of silt into the dishwasher, or it may disturb the normal operation of the product.

 Do not clean the glass with coarse cleaning agents, a metal pot scourer, a scouring pad with a rough surface, or sharp metal scrapers. These materials may scratch the glass surface and cause damage.

 The product may get hot during use. Please do not touch the heating elements of the product and their surrounding areas.

 Do not put heavy objects on the glass door of the product.

 Do not clean meat in the functional sink.

 Do not forcibly open the cover of the Secondary Sink door during power outage.

 During the operation of the product, do not pour water directly into the Secondary Sink, or it may cause abnormal operation of the product.

 Do not use elongated materials such as chopsticks to poke the door lock hole, or the machine will not function properly.

 When washing fruits and vegetables, do not put the fruits and vegetables with conflicting nutrients together, so as to avoid the loss of nutrients in fruits and vegetables.

 Do not put jewelry, gold and other valuables into the sink for cleaning to avoid causing damage to the product and cleaned articles.

 The countertop the sink dishwasher will be installed into must have sufficient strength and height to support the product, and the dishwasher must be firmly installed in the countertop

 In case the power cord is damaged, it must be replaced by a professional from the manufacturer's service department or similar department to avoid danger.

 Do not press the Start/Pause key frequently.

 Do not use multi-functional sockets with many plugs.

 Keep the complete machine away from heat sources and flammable materials such as gas and alcohol.

 After each cleaning, please clean out food debris in the debris basket before using it again in time.

 Please ensure the sewer pipe is not blocked. Blockage may cause abnormal operation of the product.

 The installation must be carried out by an Australian certified plumber or a technician appointed by FOTILE.


Recommendations

- Try not to leave large pieces of residue (such as bones) in the tableware to be cleaned, so as not to interfere with the rotation of the spray arm and affect the normal use of the machine and the cleaning effect.
- After installing the spray arm, please check if it is properly installed to prevent the spray arm from falling off and damaging the machine.
- When closing the door, it is necessary to press the door to ensure that the functional groove body is sealed.
- Before washing tableware, it is recommended to add special dishwashing powder.
- If there are stains that are difficult to clean by hand or even steel wool on the tableware, they cannot be cleaned if the tableware is put into the dishwasher directly. It is recommended to pretreat the stains on the tableware and then put the tableware into the dishwasher for cleaning.
- If a small amount of water is found in the groove after opening the package, it is caused by the factory qualification test, instead of the fault of the machine itself.
- This product is not provided with faucet which needs to be equipped by the user.
- When placing tableware, avoid fragile objects such as goblets to touch other tableware.
- It is recommended to open the door after washing to keep the groove dry.
- Before running the fruit and vegetable program, please clean the residue at the bottom of the groove.
- You can also check whether the cleaned tableware is suitable against the following table:


Tableware and materials	Washable or not	Tableware and materials	Washable or not
Aluminum	No	Stainless steel	Yes
Bottles and cans	No The label has glue, which will block the spray arm and is not conducive to washing	Fine silver	Yes
Cast iron	No Easy to rust	Tin	No Easy to corrode and rust
Ceramic	Yes Except for bone china and utensils with surface pattern easy to fall off	Wood ivory	No Untreated wood can be twisted and cracked
Crystal	Yes	Hollow handle cutter	No The adhesive in the cutter will loosen under the action of hot water
Gold	No Color will change	Copper, bronze	No It will deform and discolor under the action of hot water and detergent
Glass	Yes		
Disposable plastic	No It cannot withstand hot water and detergent		
Plastic	Yes		

Notes: 1. Please ensure that the tableware to be cleaned can withstand the temperature difference within the specified temperature range of the washing program;
 2. For other special materials, please consult the after-sale service center.

Main view

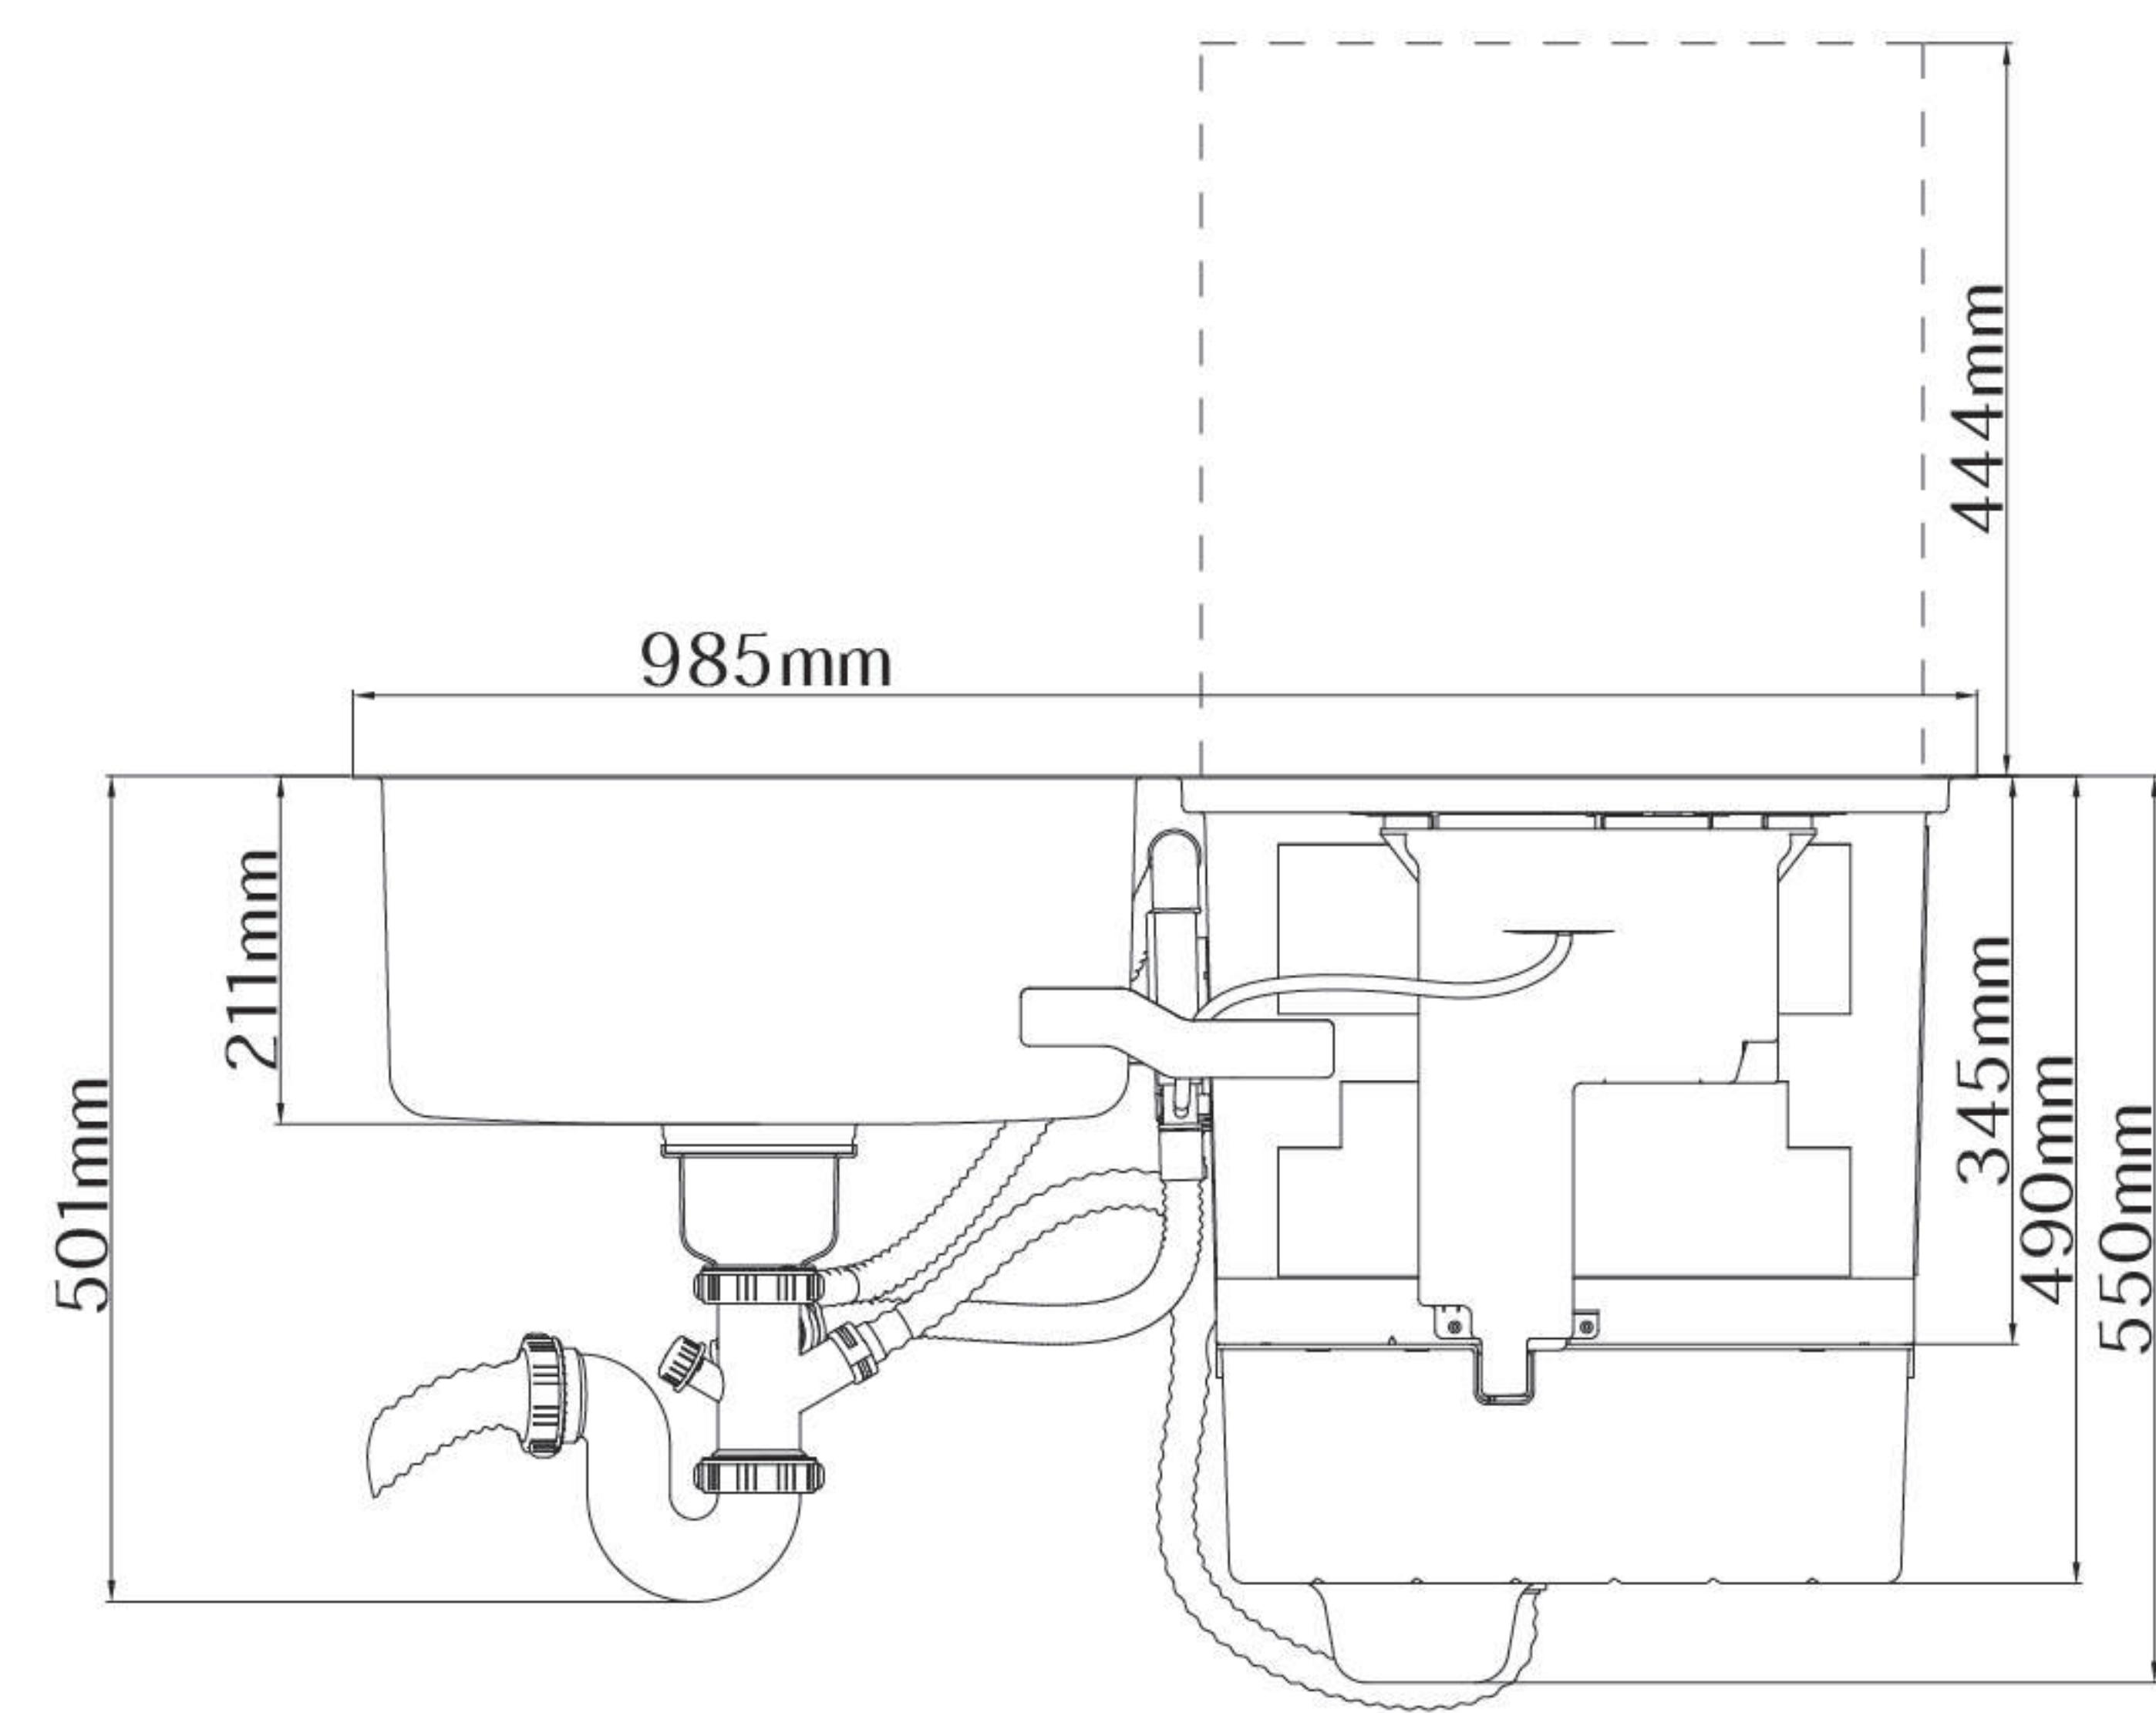

Installation drawing of drainage pipe

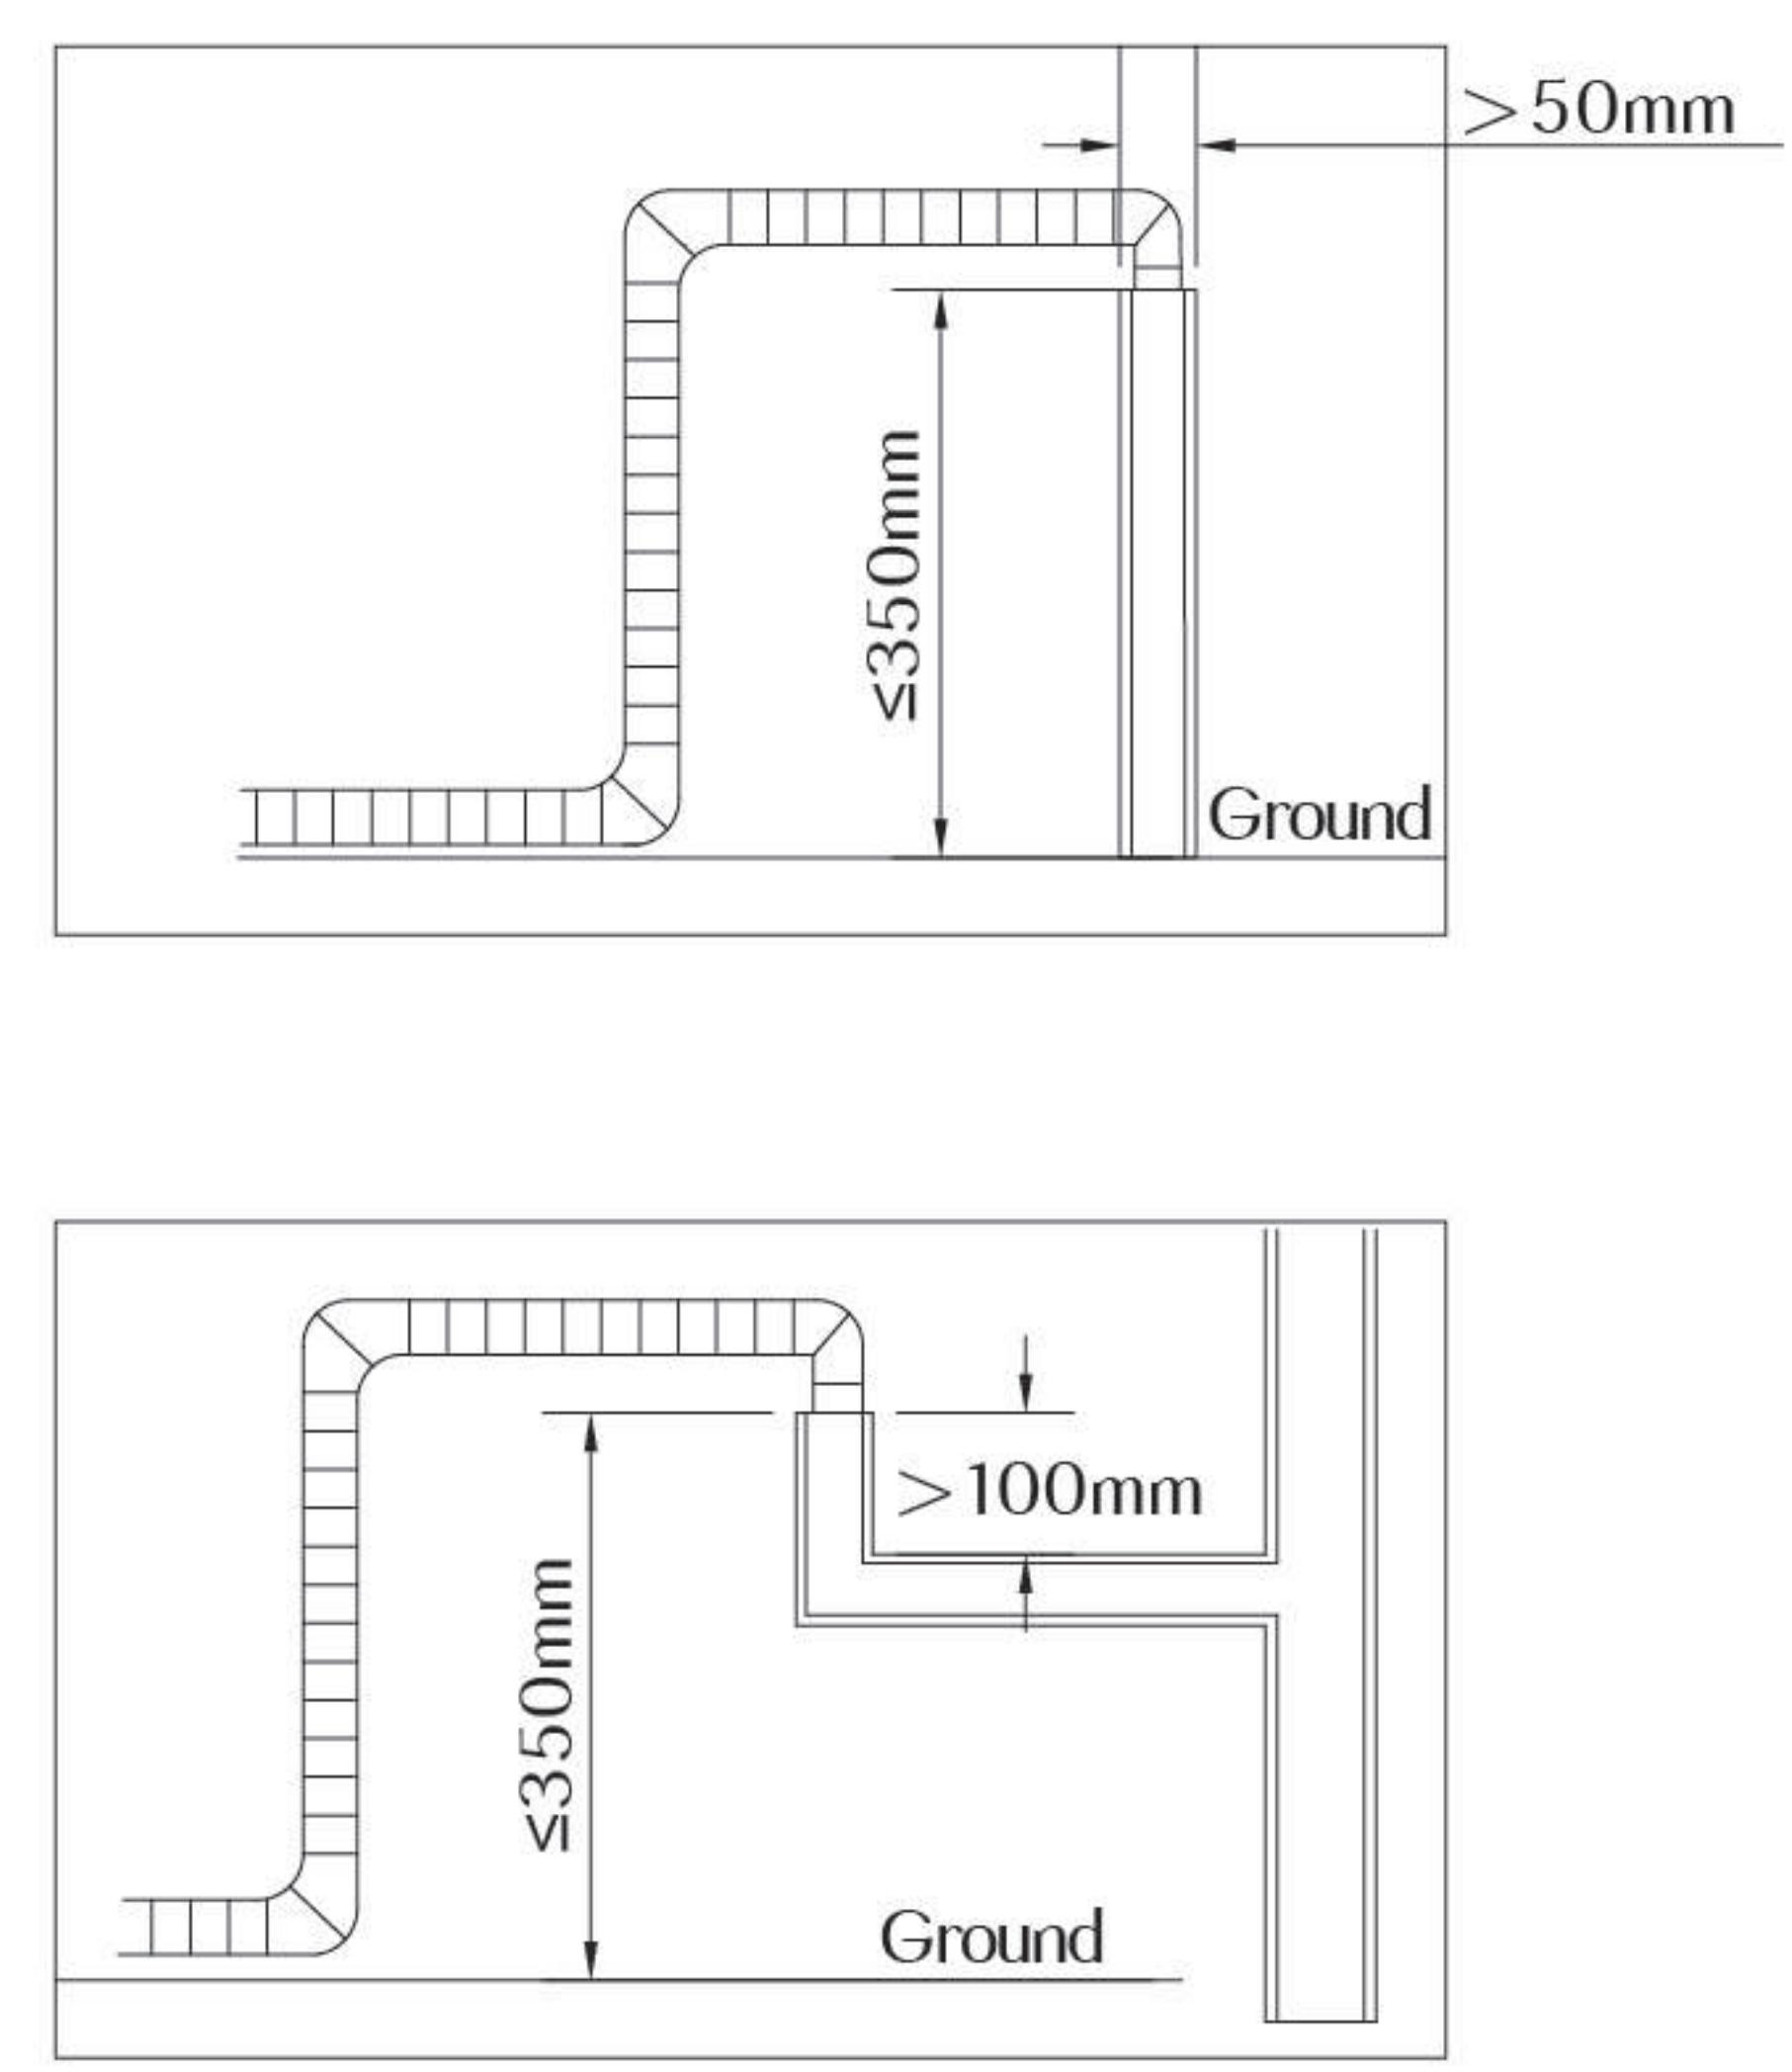


Note: The diagram shows SD2F-P6 (right) and SD2F-P6L (left)
 The positions of functional groove and sink are interchangeable.

Main Technical Specifications

Model		3-In-1 In-Sink Dishwasher										
Overall Dimensions		SD2F-P6/SD2F-P6L										
L x W x H		985mm X 505mm X 550mm										
Height of Fully Opened Door (inch)		444mm										
Counter Cutout Size		960mm X 480mm X ≥550mm										
Basic Parameters	Power	1950W										
	Current	9A										
	Voltage	220-240V										
	Frequency	50Hz										
	Water Pressure	0.14MPa-1MPa										
	Max Noise Level	55.6dB										
	Gross Weight	32kg										
	Net Weight	24.2kg										
	Power Consumption	190 kWh/year										
	Rinse Mode	For Dishes			For Produce							
Function/Performance	Quick 15 min	Quick 45 min	Intensive	ECO	Small	Medium	Large					
	60°C	70°C	75°C	52°C	Room Temperature							
	15 minutes	45 minutes	80 minutes	180 minutes	7minutes	12minutes	15minutes					
	Total Water Consumption	8L	10L	12L	6.2L	Low Water Level: 15L	Low Water Level: 18L	Low Water Level: 20.5L				
						Medium Water Level: 16L	Medium Water Level: 19.5L	Medium Water Level: 22L				
						High Water Level: 17L	High Water Level: 21L	High Water Level: 23.5L				
	Number of Water Cycle in the Full Process	3	5	5	1	2	3					
	Maximum Washable Dinnerware Diameter	260mm			/							
	Variable Dish Rack	Yes			/							
	3D Fan Drying	Yes			/							
	Hidden Heating Plate	Yes			/							
	Inlet Level	/			3							
	Standard Capacity (IEC Test load)	5			/							
	Material of Cavity	Food-grade Stainless Steel										
	Operation Mode	Micro-pressure Waterproof Touchscreen										
	Digital Display Screen	Yes										
	Automatic Reminder	Yes - When Cleaning Completed										
	Water Leakage Protection	Yes										
	Child Lock	Yes										

Control panel

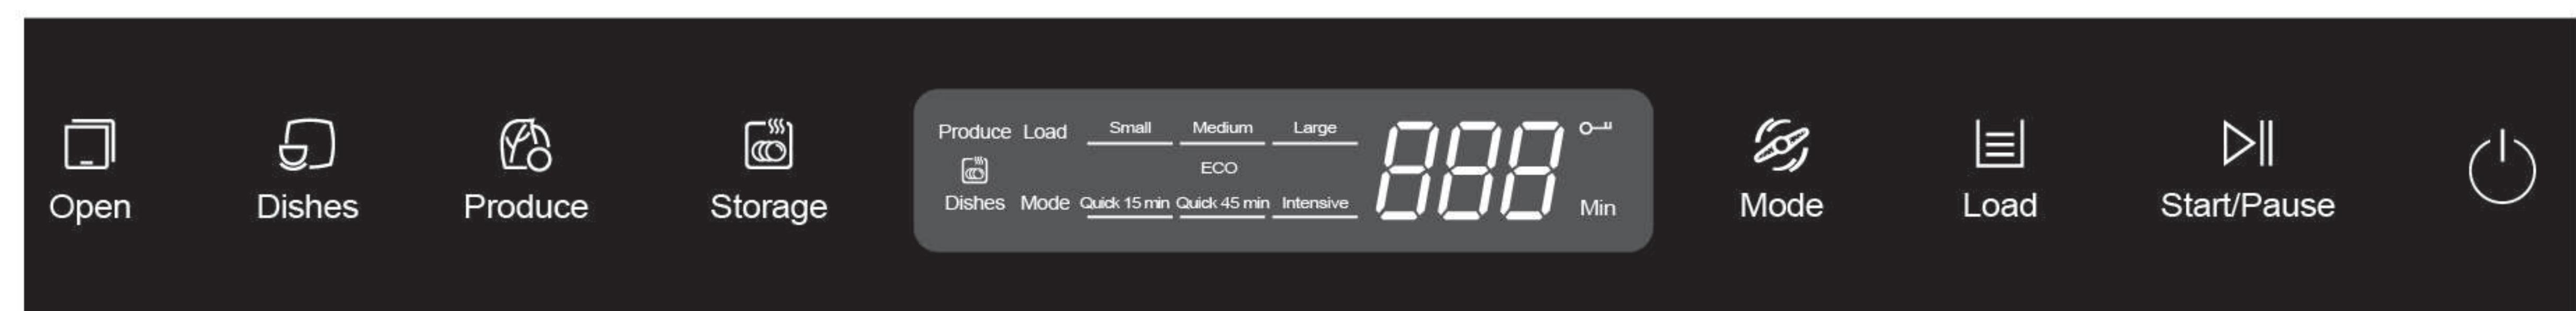


1. Open button : Press [Open] button to directly open the door in clean storage status and non-operating status. In operating status, press [Start/Pause] button, and then press [Open] button to open the door.
2. Dishes button : Press [Dishes] button to start the dishwashing program.
3. Produce button : Press [Produce] button to start the Produce washing program.
4. Storage button : Press [Storage] button in the dishwashing mode to enter the dishwasher's clean storage mode after the dishwashing program ends.
5. Display screen: Display washing time, mode, load, function mode, product operation and pause.
6. Mode button : Select one from the Quick 15 min, Quick 45 min and Intensive programs in dishwashing and Produce washing programs. You can also select ECO mode in dishwashing program.
7. Load button : Select from the three Produce washing programs: Small, medium, and Large.
8. Start/Pause button : Control the start and pause of the product.
9. On/Off button : Control the on and off of power supply.

Operation Instructions

Dishwashing program

Press and hold the [On/Off] button to enable the number flashing → press [Open] button → select the dishwashing mode → select the Mode (optional) → press [Start/Pause] button to start washing → wash and dry tableware → finish washing → power off → daily cleaning.

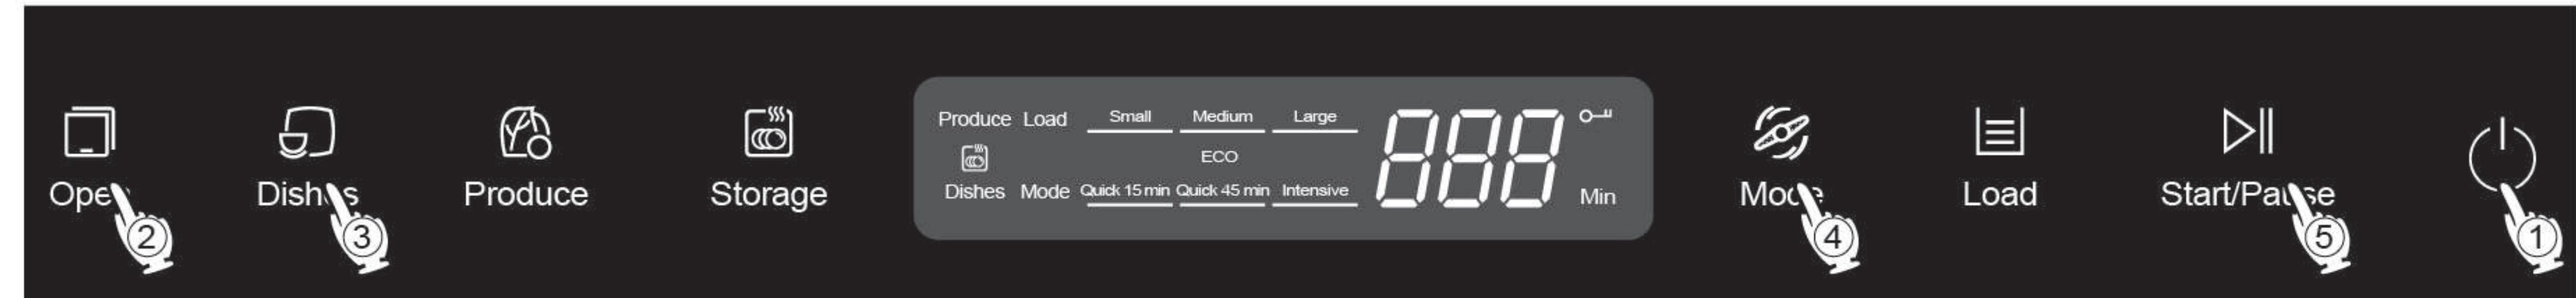

Note: After washing, the door automatically opens and the system enters the tableware drying state. After 30 minutes, the door will close automatically. If it is less than 30 minutes, press and hold the power button to shut it off. Then the tableware drying system will stop working.

Select Mode (as shown in the table below):

	Quick 15 min	Quick 45 min	Intensive	ECO
Applicable tableware	Breakfast dishes, preparation dishes, and other slightly stained tableware	Fairly stained tableware	Severely stained tableware	Fairly stained tableware
Washing time	15 minutes	45 minutes	80 minutes	180 minutes
Water consumption	8L	10L	12L	6.2L
Recommended dosage of detergent	20g	23g	23g	23g
Washing temperature	60°C	70°C	75°C	52°C
* Adding time of rinsing agent	“05”	“07”	“09”	“09”
Amount of rinsing agents	6ml	6ml	6ml	6ml

Notes: 1. To have a better cleaning effect, add your Dish-washing powder before the placement of your tableware. If you are using dishwashing powder, place it at the bottom of the tank. If you are using a dishwasher pod, place it in the debris basket.


2. It's suggested that you pre-rinse your tableware to avoid any food debris that may interfere with the rotating spray arm which could affect the normal operation of the dishwasher.

3. The ECO program is suitable for a normally soiled load of dishes at rated capacity. And this is a standard test program.

Compared with other cleaning programs can save more water and electricity, and can achieve a better cleaning effect, recommended for daily use.

■ Produce washing program

Press and hold the [On/Off] button  to enable the number flashing → press [Open] button  → select the Produce washing mode  → select the Mode (optional)  → select Load  → press [Start/Pause] button  to start washing → finish washing → power off → daily cleaning.

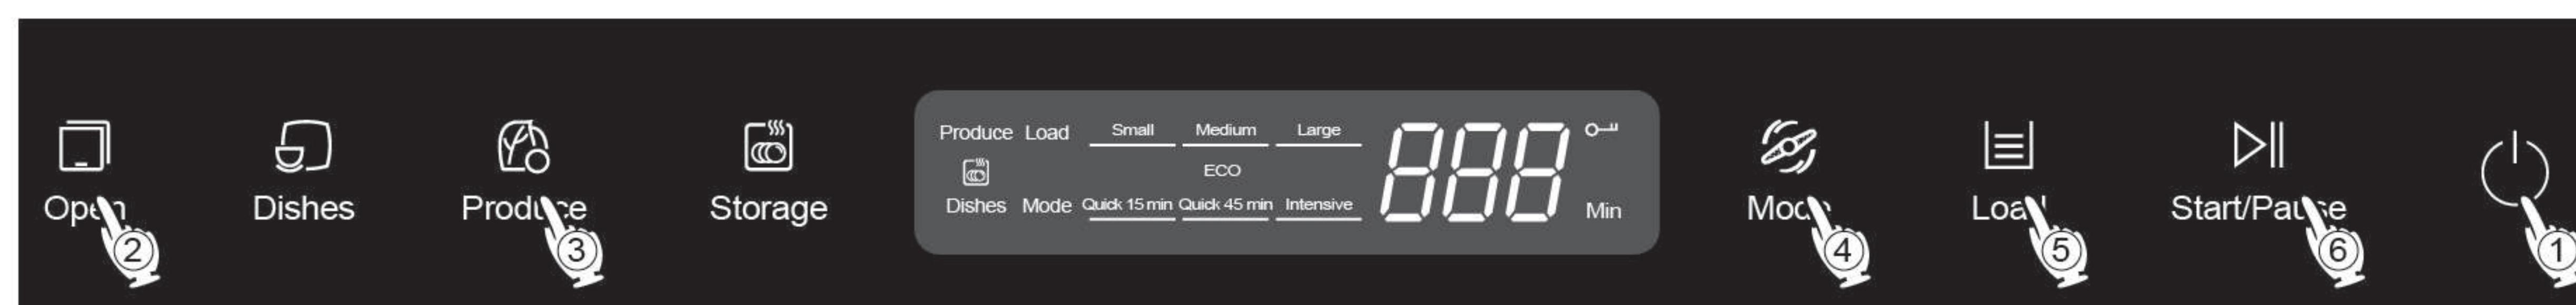

Note: 1. Select Mode: Press the Mode button to select one from the Quick 15 min, Quick 45 min and Intensive.

2. Select Load: Press [Load] button to select one from the three loads: Small, medium and Large.


	Quick15 min	Quick 45 min	Intensive
Washing time	Small, Medium, Large	7 minutes	12 minutes
Cleaned objects	Small, Medium, Large	• Cherry, strawberry, bayberry and other fruits and vegetables easy to wash rotten • Apple, pear, orange, grape, peach, cucumber, green vegetable, tomato and other fruits and vegetables • Fruits and vegetables with dirty surfaces such as sweet potatoes, potatoes and peanuts • Fruits and vegetables with severe surface waxing and pesticide erosion	

Notes: 1. The testing program of the machine is for Intensive and Large load, and the above data were measured in FOTILE Laboratory. In Produce mode, Quick 15 min gear corresponding time is 7 minutes, Quick 45 min gear corresponding time is 12 minutes, Intensive gear corresponding time is 15 minutes.

2. The white bloom on the surface of fruits will not affect consumption. Fruits with fruit wax on the surface are recommended to be washed by hand before consumption. The cleaning effect is better after cutting or breaking off the roots of leaf vegetables. For fruits and vegetables with high sediment content, it is recommended to clean them after pre-treatment: after cleaning, open the door cover in time for ventilation.

■ Storage function

Press and hold the [On/Off] button  to enable number flashing. In the dishwashing mode, press [Storage] button . Then, the storage icon is turned on. Press [Start/Pause] button  to start washing. During dishwashing, if you need to set the storage function, press [Start/Pause] button  first before performing any operation.

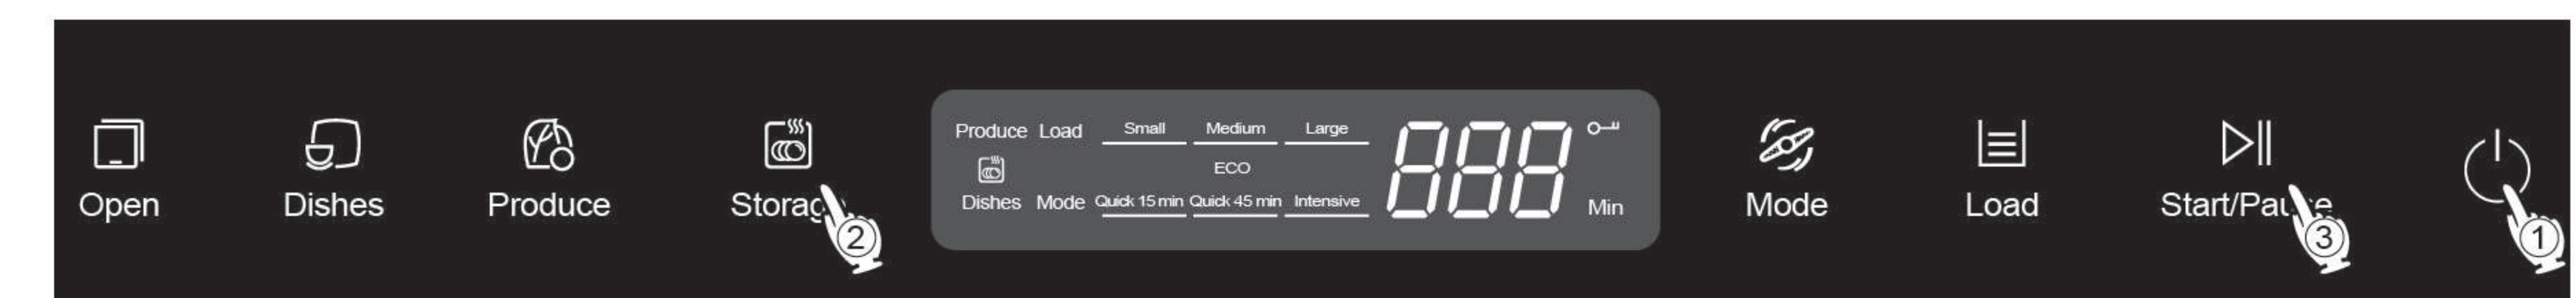


Notes: 1. The storage function will only run after the dishwashing ends, and the duration of this function is 96 hours. During this period, pressing the power button will turn off the storage function.

2. The storage function is not available in the super quick washing mode.

■ Drain valve On/Off


In standby (black screen) mode, press and hold the power button to turn on the machine and turn it off within 5 seconds to open the drain valve. After 30 seconds, the drain valve will automatically close.

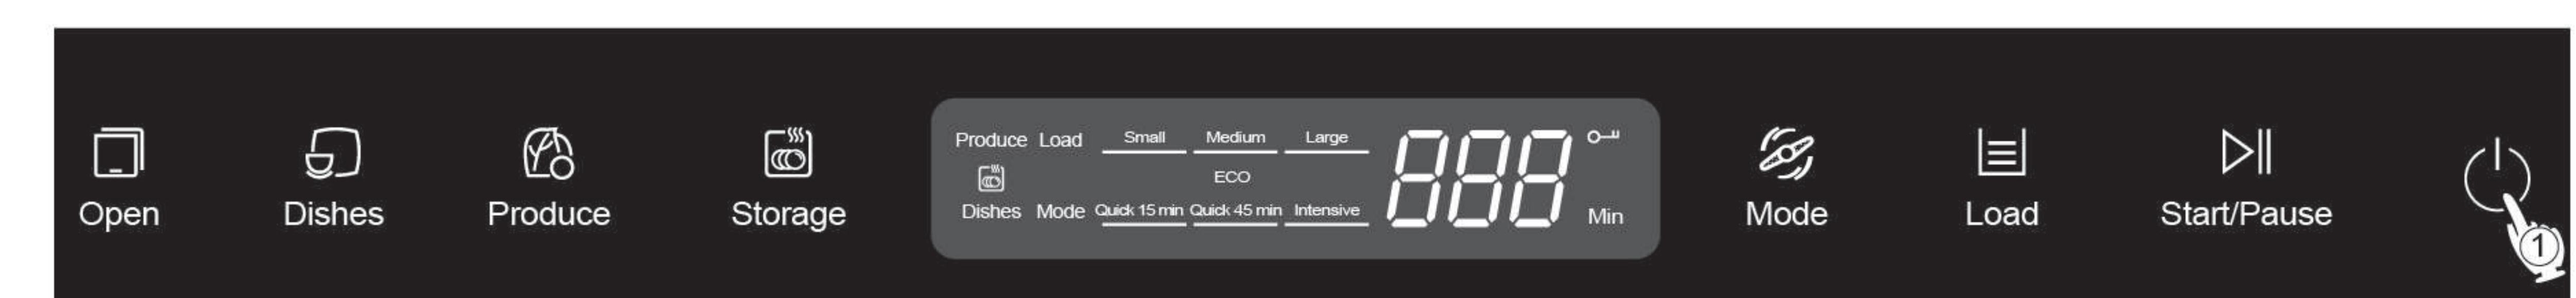

Notes: 1. If there is a large amount of water in the groove, please drain the water multiple times.

2. There will be a slight motor noise during drainage, which is normal.

Placement of Tableware

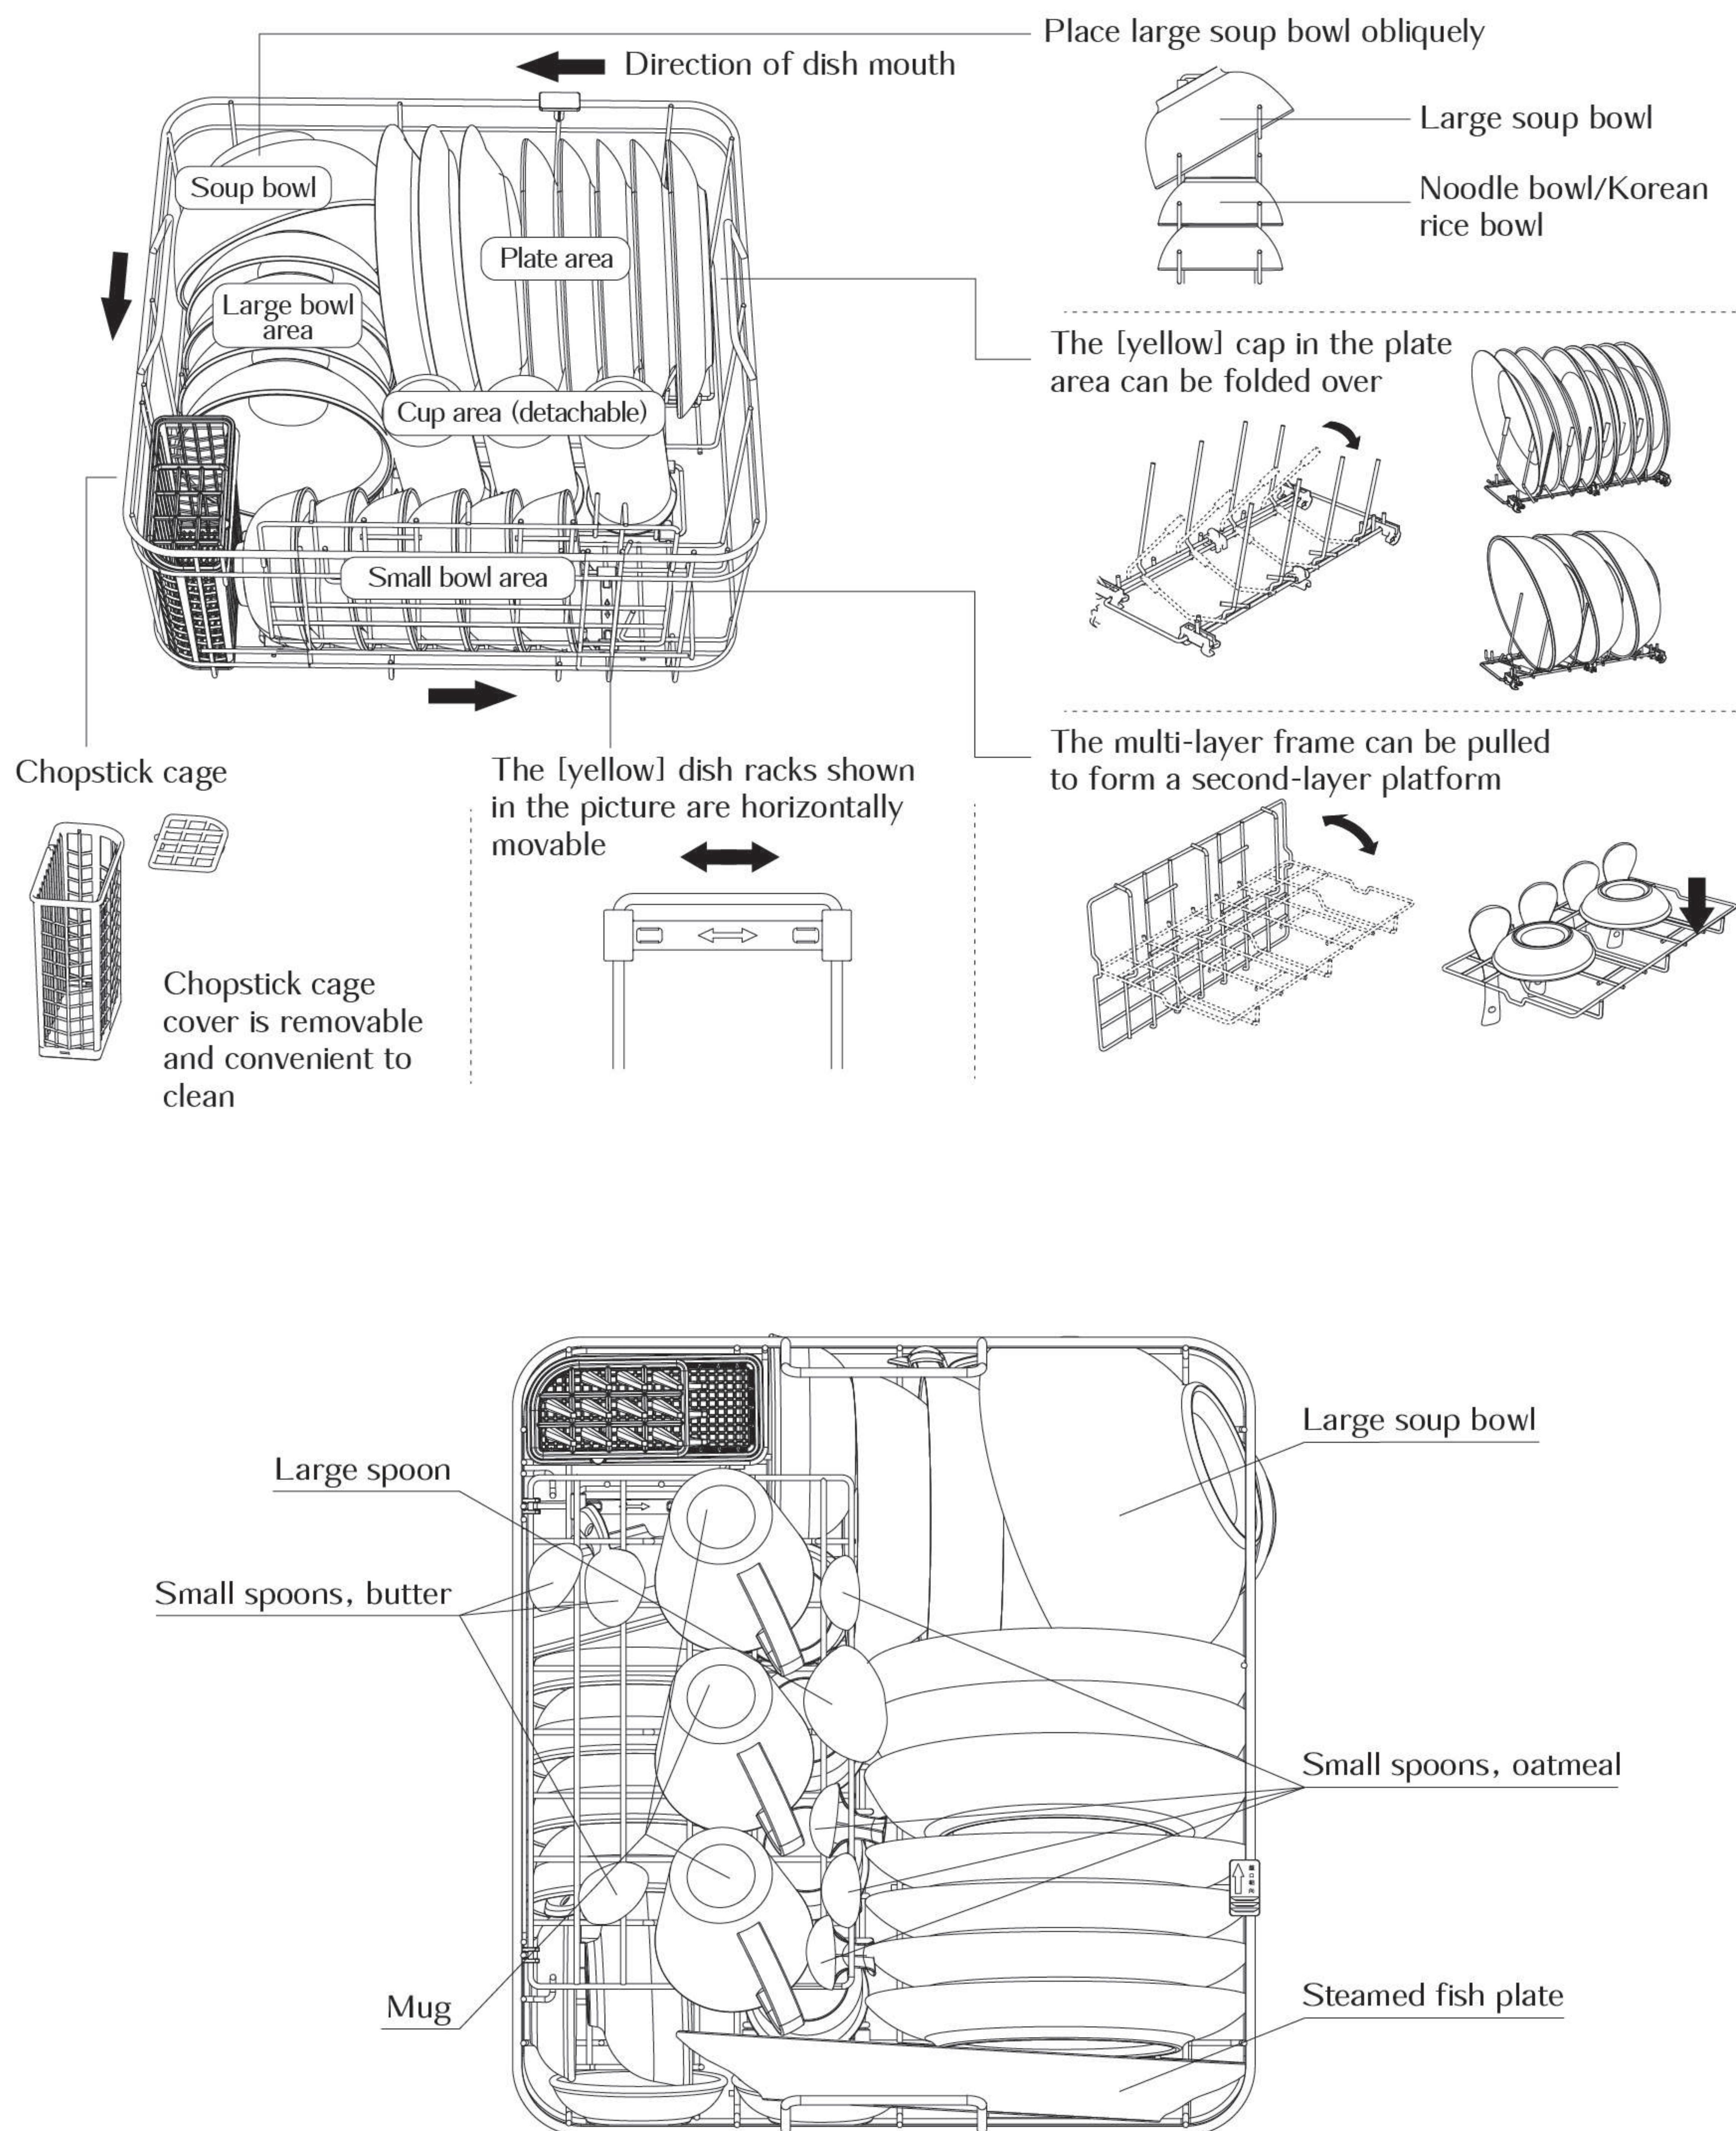


1. The plate area can accommodate various types of plates. If there are plates of different depths, please place the deep plates in front of the shallow plates. The steamed fish plates can be placed on the rightmost side of the plate area;
2. Large bowl and soup bowl area: accommodate soup bowls, large noodle bowls, etc.;
3. Chopstick cage: accommodate chopsticks or spoons;
4. Small bowl area: accommodate various types of rice bowls or smaller noodle bowls;
5. Cup area: accommodate glass cups, seasoning dishes, etc.;
6. Upper bowl rack: the upper dish rack is pulled out to accommodate mug, relish dish, small rice bowl, and hang various spoons;
7. Plate rack and movable turnover rack: The bracket of plate rack can be folded inward, and larger bowls such as noodle bowls can be placed after the movable turnover rack is put down;
8. After placing the tableware, avoid stacking the tableware together, so as not to affect the cleaning effect; In the event of a little tableware, spacing tableware helps better cleaning;
9. After placing the tableware, please ensure that the handle of the spoon type tableware does not protrude from the bottom of the dish rack to avoid preventing the normal rotation of the spray arm. When closing the door, please ensure that the tableware or chopsticks (the length of the chopsticks shall not exceed 24cm) on the upper dish rack will not stand against the door, so as to avoid the deformation of the door or failing to clean dishes.

Daily cleaning


1. Open the door and clean the residual dirt on the door.
2. Clean groove walls, wall corners and add detergent appropriately.
3. Rotate the slag basket counterclockwise to remove the slag, dump the slag and clean the basket.
4. Rotate counterclockwise to remove and clean the spray arm.
5. Take off the filter plate and clean the plate.
6. Clean the bottom of the groove.
7. Install all parts and components in their original positions after cleaning, and check the correctness of their installation.

Suggestions on Cleaning and Maintenance

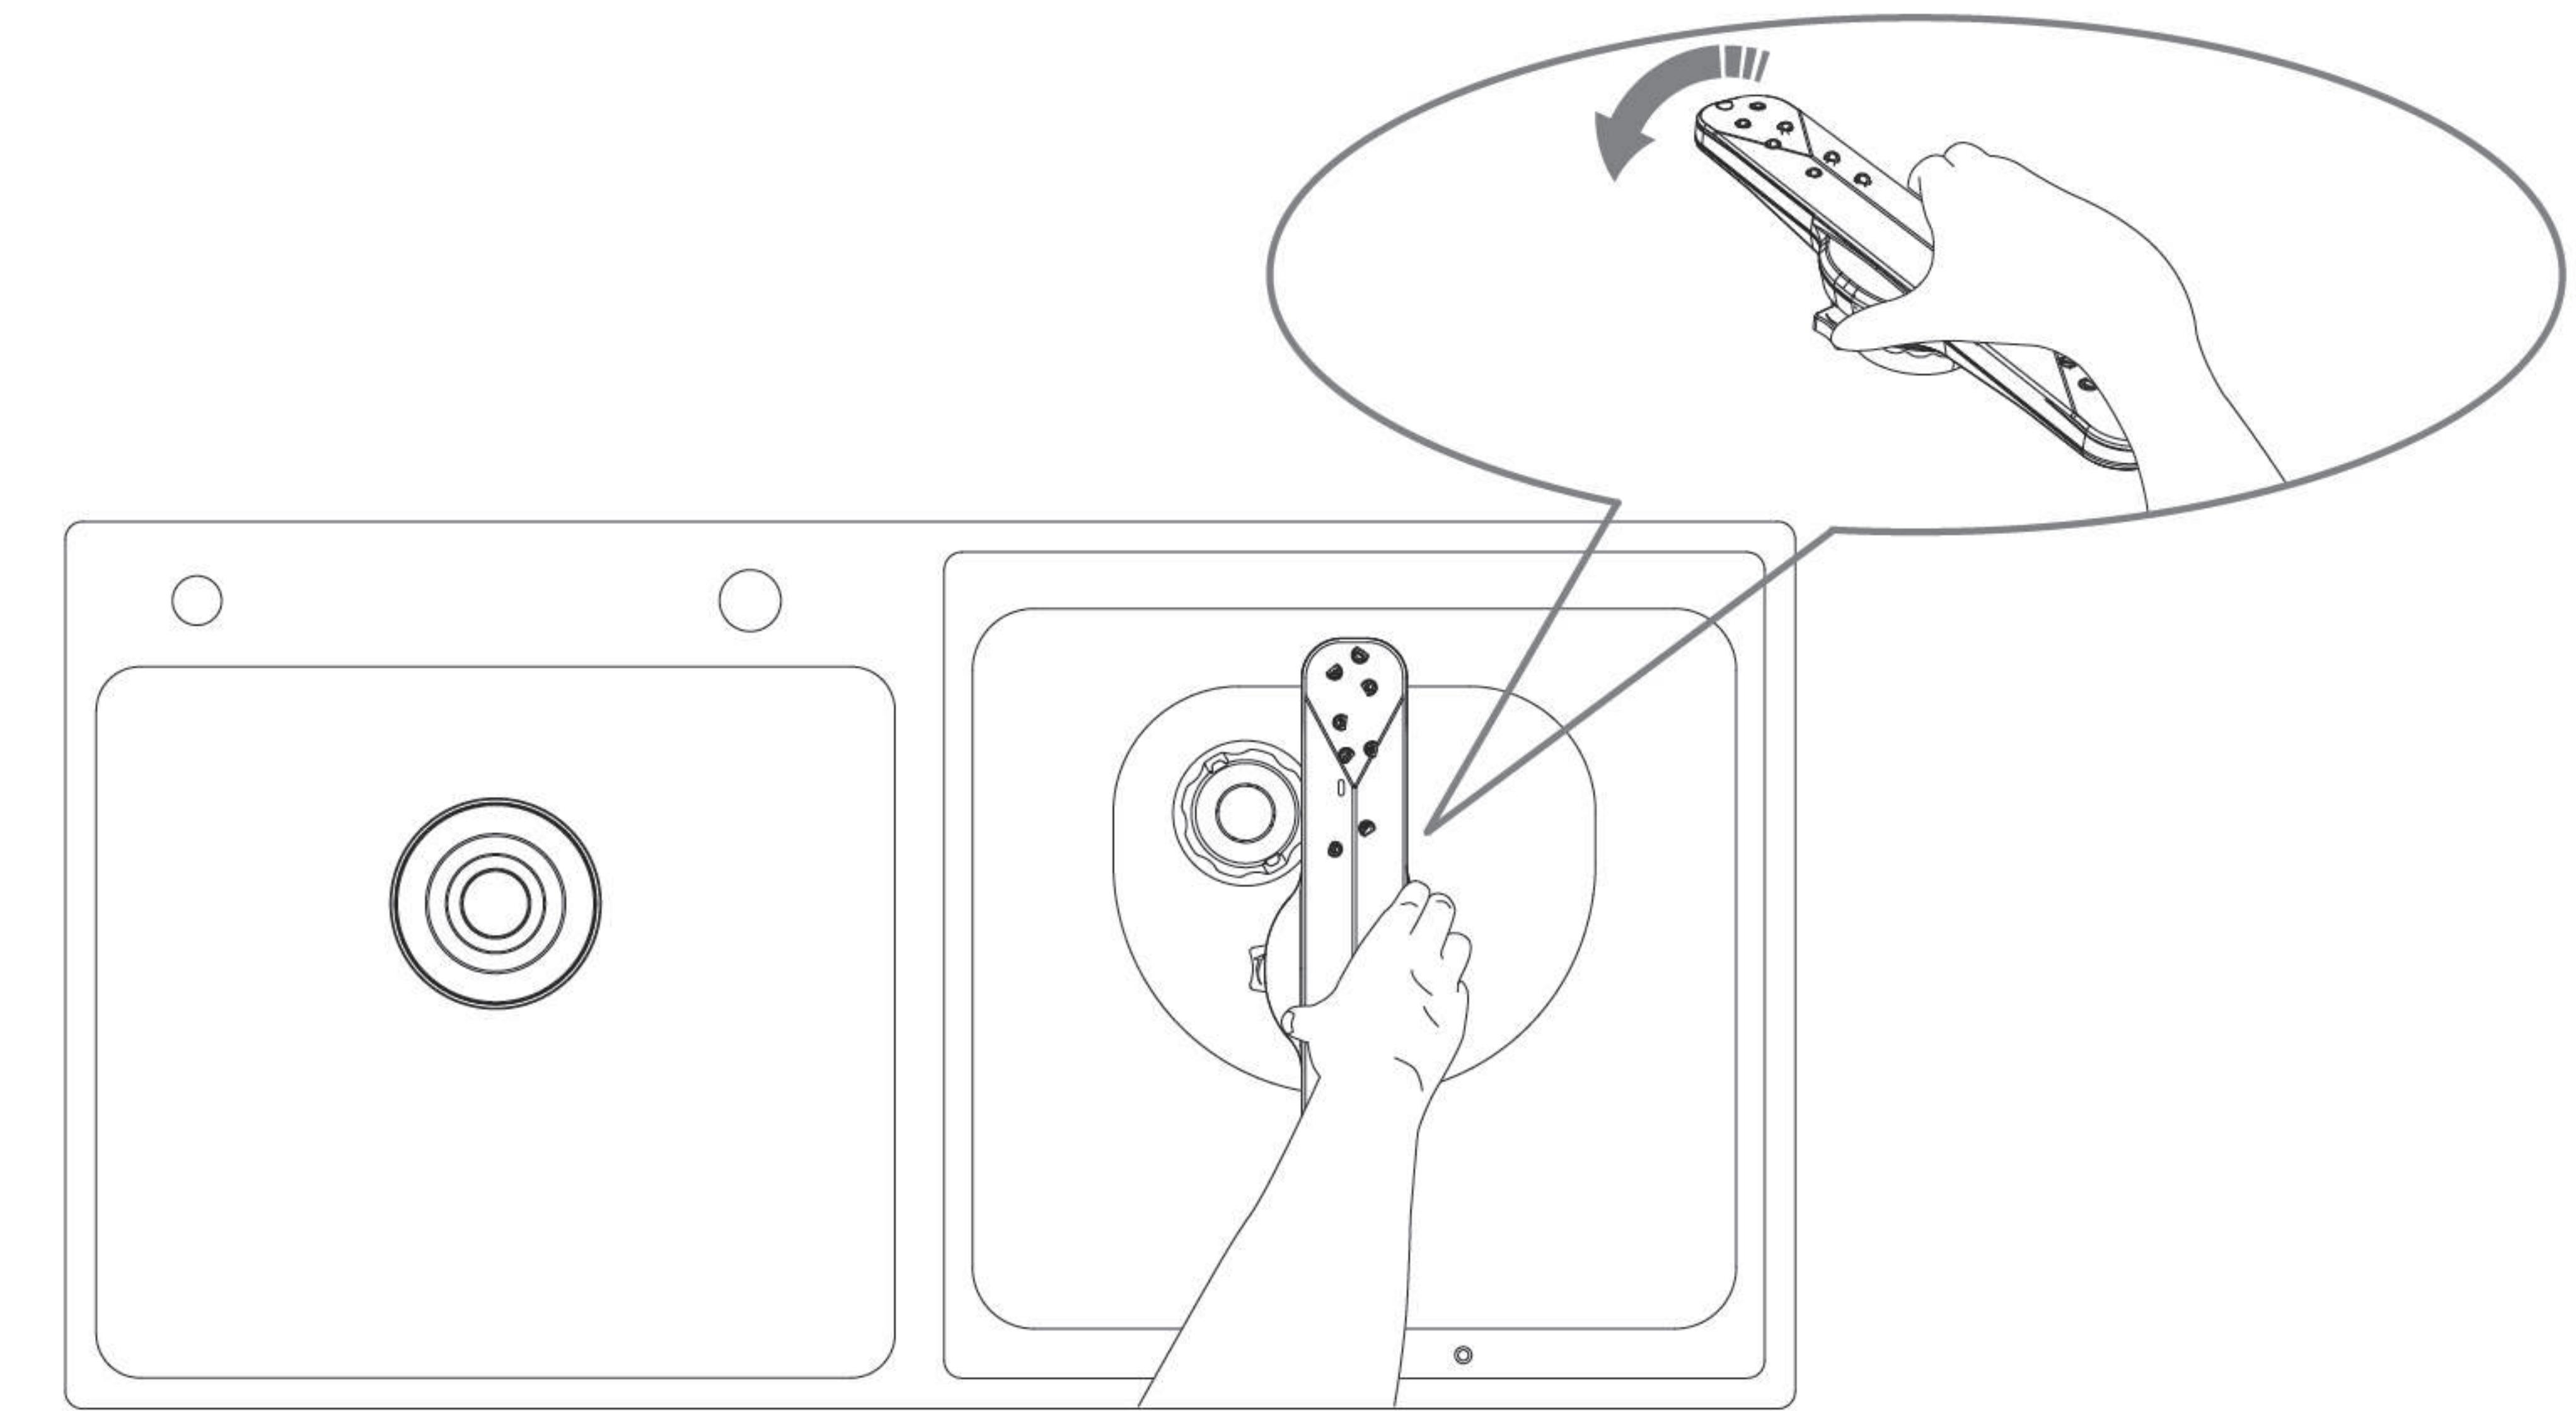

Dismantle & wash spray arm: Hold the two gray locking tab bumps under the spray arm, press and rotate the bumps counterclockwise to remove the spray arm for cleaning.

Installation of spray arm: Hold the two gray locking tab bumps under the spray arm, press and turn clockwise until the buckle clicks, and then move the spray arm to rotate smoothly and produce no abnormal sounds.

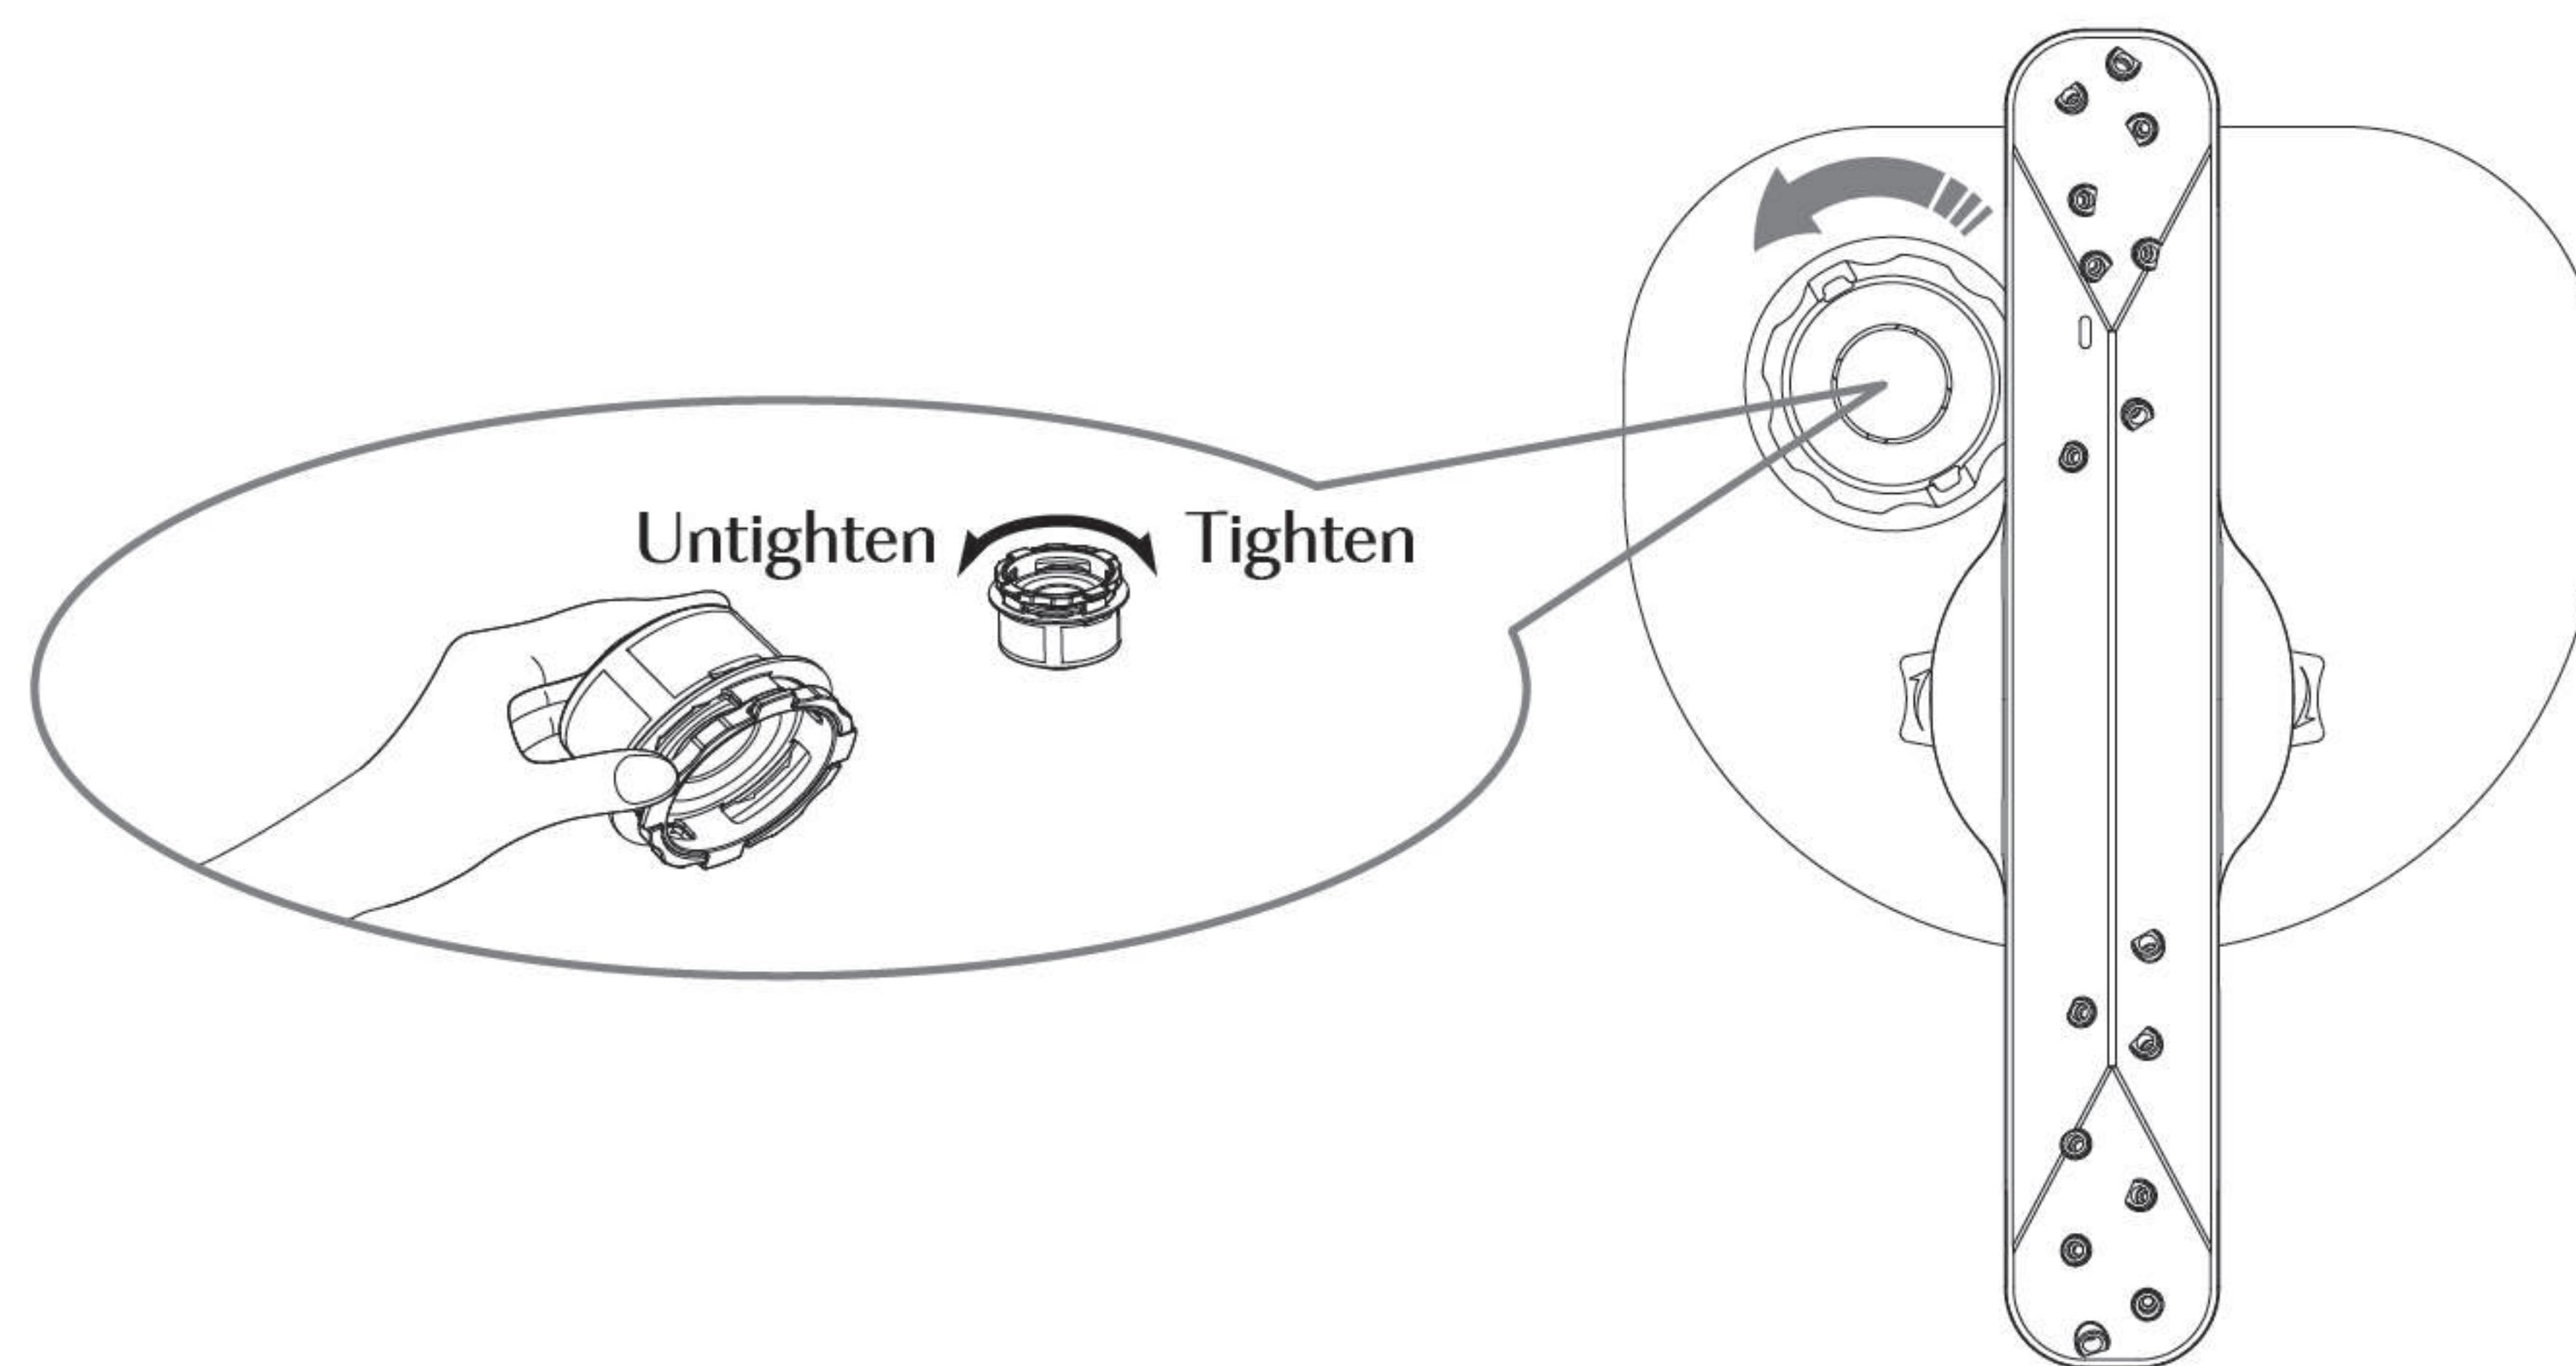

1. Do not use detergent when cleaning the door seal. The door seal may be perforated or cracked over time. In this case, please replace with a new one in a timely manner.

2. Cleaning of panel and door glass:

Clean manually with hot water and a small amount of detergent. Wipe with sponge cloth and dry with soft cloth after cleaning. Do not rub with scouring pad or metal wire articles to avoid scratching the surface.

3. Cleaning of stainless steel groove:

Daily maintenance techniques for 304 stainless steel groove

The sink dishwasher adopts a 304 stainless steel groove, which shall be protected to avoid scratches!

- If you are a user for new decoration, you can apply a layer of oil on the exterior of the groove to avoid floating rust caused by metal debris in the decoration process. In addition, if the sink dishwasher is not used for a long time, a layer of oil can also be applied to protect the sink.
- Use neutral detergent to regularly clean the sink, and clean completely with clean water. Clean gently, avoid using steel brush or rough brush, and dry with sponge or cloth after cleaning.
- Do not place lemons, sauces, pickles, mustard or other salty or corrosive food in the sink or on the panel for a long time to prevent corrosion.
- Try to avoid long-term contact between the groove and powerful bleaching powder, household chemicals and soap.
- Try to avoid sharp and hard utensils such as knives, forks, and cookers from hitting the groove to prevent scratches, scratches, or dents on groove surface.
- Do not put low-carbon steel or cast-iron cookware in the groove for a long time, and do not leave steel wool, rubber dishwashing sheets, wet dishwashing sponges, or other cleaning pads in the groove to avoid "floating rust" and "mildew spots" in the long run.
- If any "floating rust" or "mildew spots" are found on the groove, apply five-cleaning powder or toothpaste to the rust and spots, and then clean them with a rag. But do not clean the groove with scouring wire, polishing sheets, or polishing materials.

4. The spray arm and slag basket can be removed by rotating counterclockwise and can be cleaned with clean water.

5. After cleaning, there should be no water on the control panel, which will affect normal use.

6. After each cleaning, the food residue in the slag basket shall be cleaned in time, otherwise it will affect the next cleaning effect and generate abnormal flavor.

7. If fouling is found in the functional groove (such as whitening on the surface of the groove, heating plate, dish rack, etc.), please use a washing tablet or a small amount of sodium citrate to clean the groove.

Identification and treatment of common faults


If you find anything unusual during use, please stop using it, unplug the power plug, and check the following items:

Fault description	Possible causes	Solution
With abnormal sound	The spray arm is not installed in place	Reassemble and disassemble the spray arm
	Tableware is not placed as specified, resulting in tableware collision.	Check whether the tableware placement meets the standard requirements
The display is not lit, and the buttons are unresponsive	Failure to power on	Check whether the power plug is properly plugged in
Functional groove cannot drain water	Drain valve Off	Please press and hold the power button to turn on and turn off within 5 seconds
With abnormal flavor	/	Please follow the daily cleaning steps for maintenance and service
Door cannot be opened	Sudden power outage during use	After manually unlocking by pulling down the door lock rope, open door with tools

After the above troubleshooting, if the dishwasher still cannot work normally, please contact FOTILE service hotline.


Exploded View

SD2F-P6

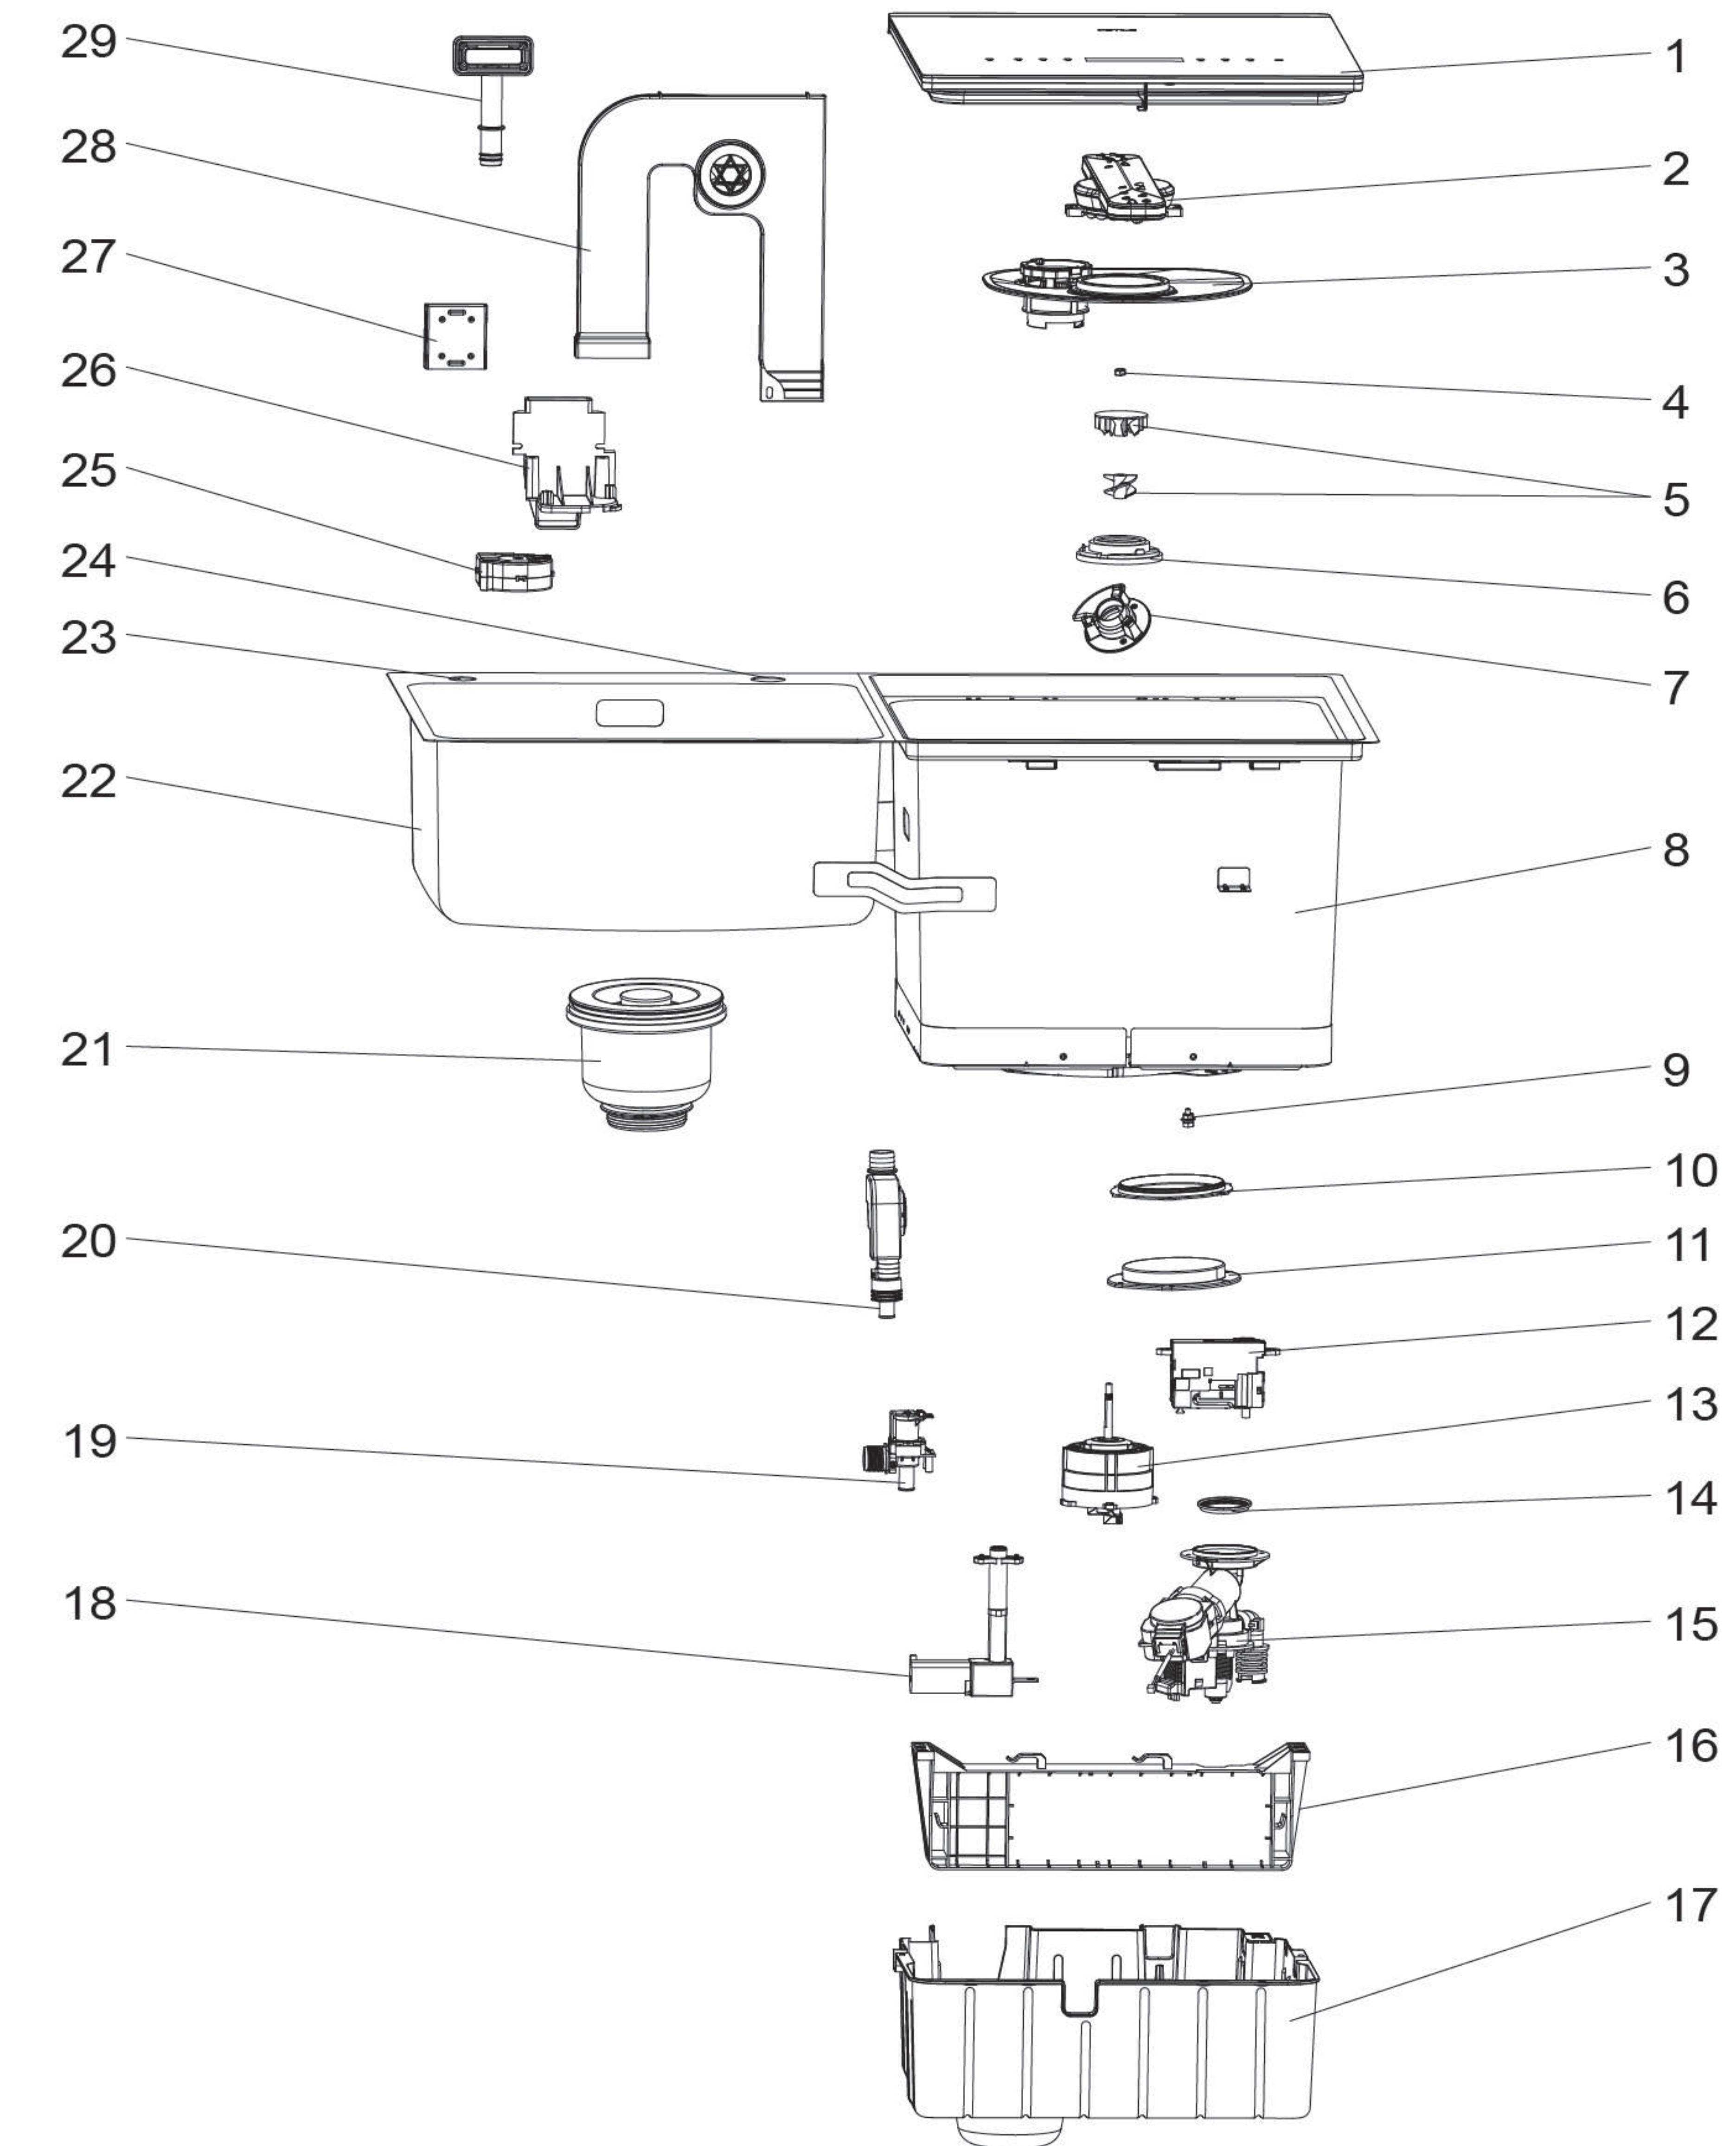

- 1. Door
- 2. Spray arm
- 3. Filtering Screen
- 4. Vane locknut
- 5. Impeller (upper and lower)
- 6. Motor Cover
- 7. Diversion Base
- 8. Functional Sink
- 9. Temperature sensor
- 10. Sealing Gasket for Heating Plate
- 11. Heating Plate
- 12. Electronic Lock
- 13. Motor
- 14. Seal ring of traction value
- 15. Valve pump assembly
- 16. Electrical Box
- 17. Bottom Cover
- 18. Door Motor
- 19. Inlet Valve
- 20. Overflow Port for the Functional Sink
- 21. Drain
- 22. Sink
- 23. Installation hole of soap dispenser
- 24. Faucet mounting hole
- 25. Fan
- 26. Fan fixing seat
- 27. assembly of PTC
- 28. Assembly of air intake seat
- 29. Overflow Port for the Sink

Abnormal condition and fault codes

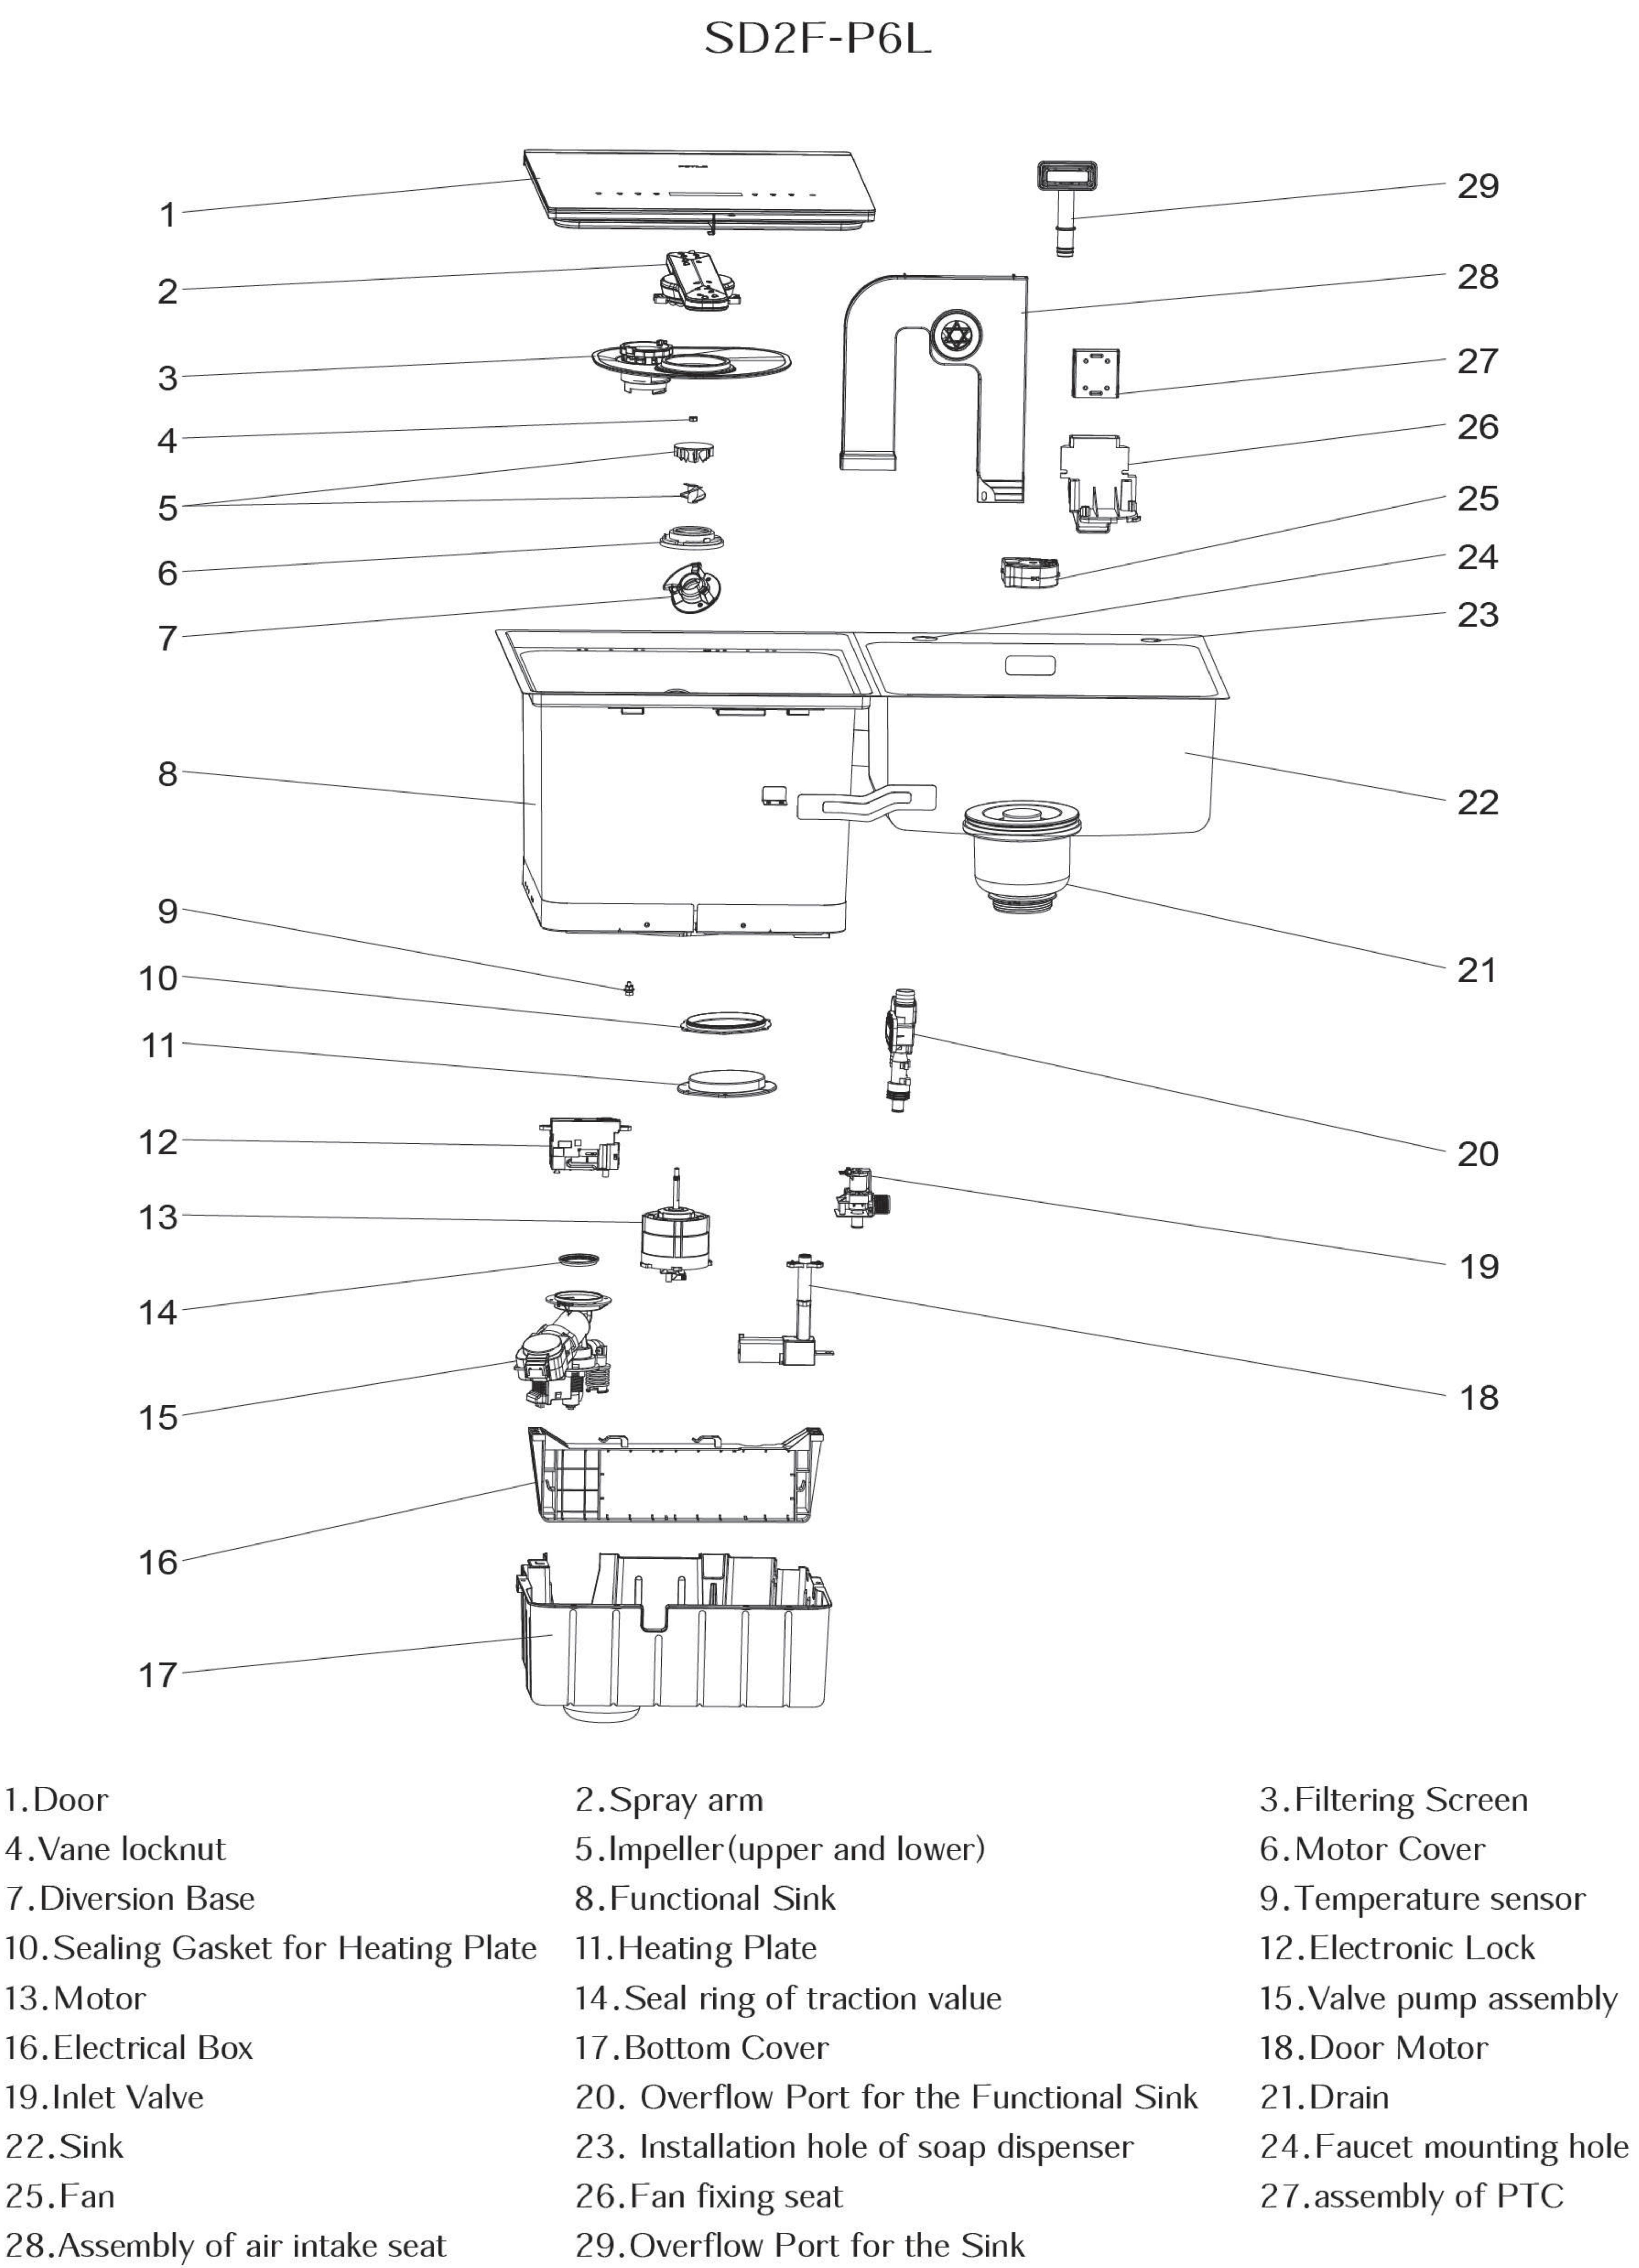

Prompt codes	Fault prompt	Possible causes	Solutions
E1	The door is not closed or the door lock fails	1.The door is not closed in place 2.The door lock fails	1.Close the door and make sure it is tightly closed before pressing the start/pause button 2.Ask professional repair personnel for on-site repair
E2	Small water flow	1.The water supply valve in the customer's home is not open 2.The water flow in the customer's home is too small 3.The inlet valve is broken and not opened 4.The filter screen at the cked 5.Parts relating to water inflow are damaged	1.Check the water valve to make sure it is open 2.Check whether there is water supply shut off or the water pressure is too low 3.Ask professional repair personnel for on-site repair
E5	Temperature sensor is short circuited or open circuited	Temperature sensor is abnormal	Ask professional repair personnel for on-site repair
E6	Top door motor fails or is not installed	1.Top door motor is not installed 2.Top door motor fails	Ask professional repair personnel for on-site repair
E8	Dry burning protection	1.Water leakage 2.Poor sealing of door	1.Close the door and make sure the door is closed tightly 2.Check whether the tableware is placed correctly, and make sure that no tableware is placed with the bowl mouth facing upwards 3.Ask professional repair personnel for on-site repair
E0	Motor communication fault	Motor fault	Ask professional repair personnel for on-site repair
EC	Abnormal communication	Communication line is disconnected	Ask professional repair personnel for on-site repair
F2	Leakage protection	1.Reverse connection of zero line/live line 2.Poor grounding	Please cut off the power and water immediately and ask the professional repair personnel for on-site repair
F3	Overflow alarm	Inlet valve is broken	Ask professional repair personnel for on-site repair
F4	High-temperature alarm	The water temperature exceeds 90 °C	Ask professional repair personnel for on-site repair
F5	Motor is of overvoltage or undervoltage	Voltage is too high or too low	Ask professional repair personnel for on-site repair

Prompt codes	Fault prompt	Possible causes	Solutions
F6	Motor is of phase loss	Short circuit or open circuit inside the coil	Ask professional repair personnel for on-site repair
F7	Motor software is of overcurrent Motor hardware is of overcurrent Motor stalling	Motor current is excessive	Ask professional repair personnel for on-site repair

In order to ensure safety and correct use, this product must be installed and repaired by professionals appointed by the Company. If this product cannot be used in a good condition because the consumer entrusts personnel who are not appointed by the Company to carry out installation and repair or the consumer carries out installation and repair, even during the warranty period, it is not within the scope of free maintenance, and the Company will not bear any responsibility for the property loss and personal injury caused thereby.

Customer Service


The following circumstances do not fall into the scope of warranty:

- Improper transportation, installation or maintenance conducted by user voluntarily.
- Product failure caused by abuse, misuse, modification, or use for other purposes or commercial purposes.
- Damage caused by cleaning and maintenance not in accordance with the instructions.
- Product damage caused by accident, fire, flood, force majeure, etc.
- Failure and damage caused by using the product beyond the normal operating conditions, e.g. the voltage is too high.
- Discrepancy between the information on the purchase voucher and the warranty registration information of the product.

This warranty covers original purchasers and any subsequent owners purchased the product in Australia. If the product is located in a place where authorized service of FOTILE cannot reach, you shall be responsible for paying the corresponding transportation expenses, or you shall need to take the product to the authorized service office for maintenance.

- If you have purchased the FOTILE sink dishwasher product, please inform us of the product model and serial number when communicating, which can help us serve you better.

You can find the information at position A in the diagram:

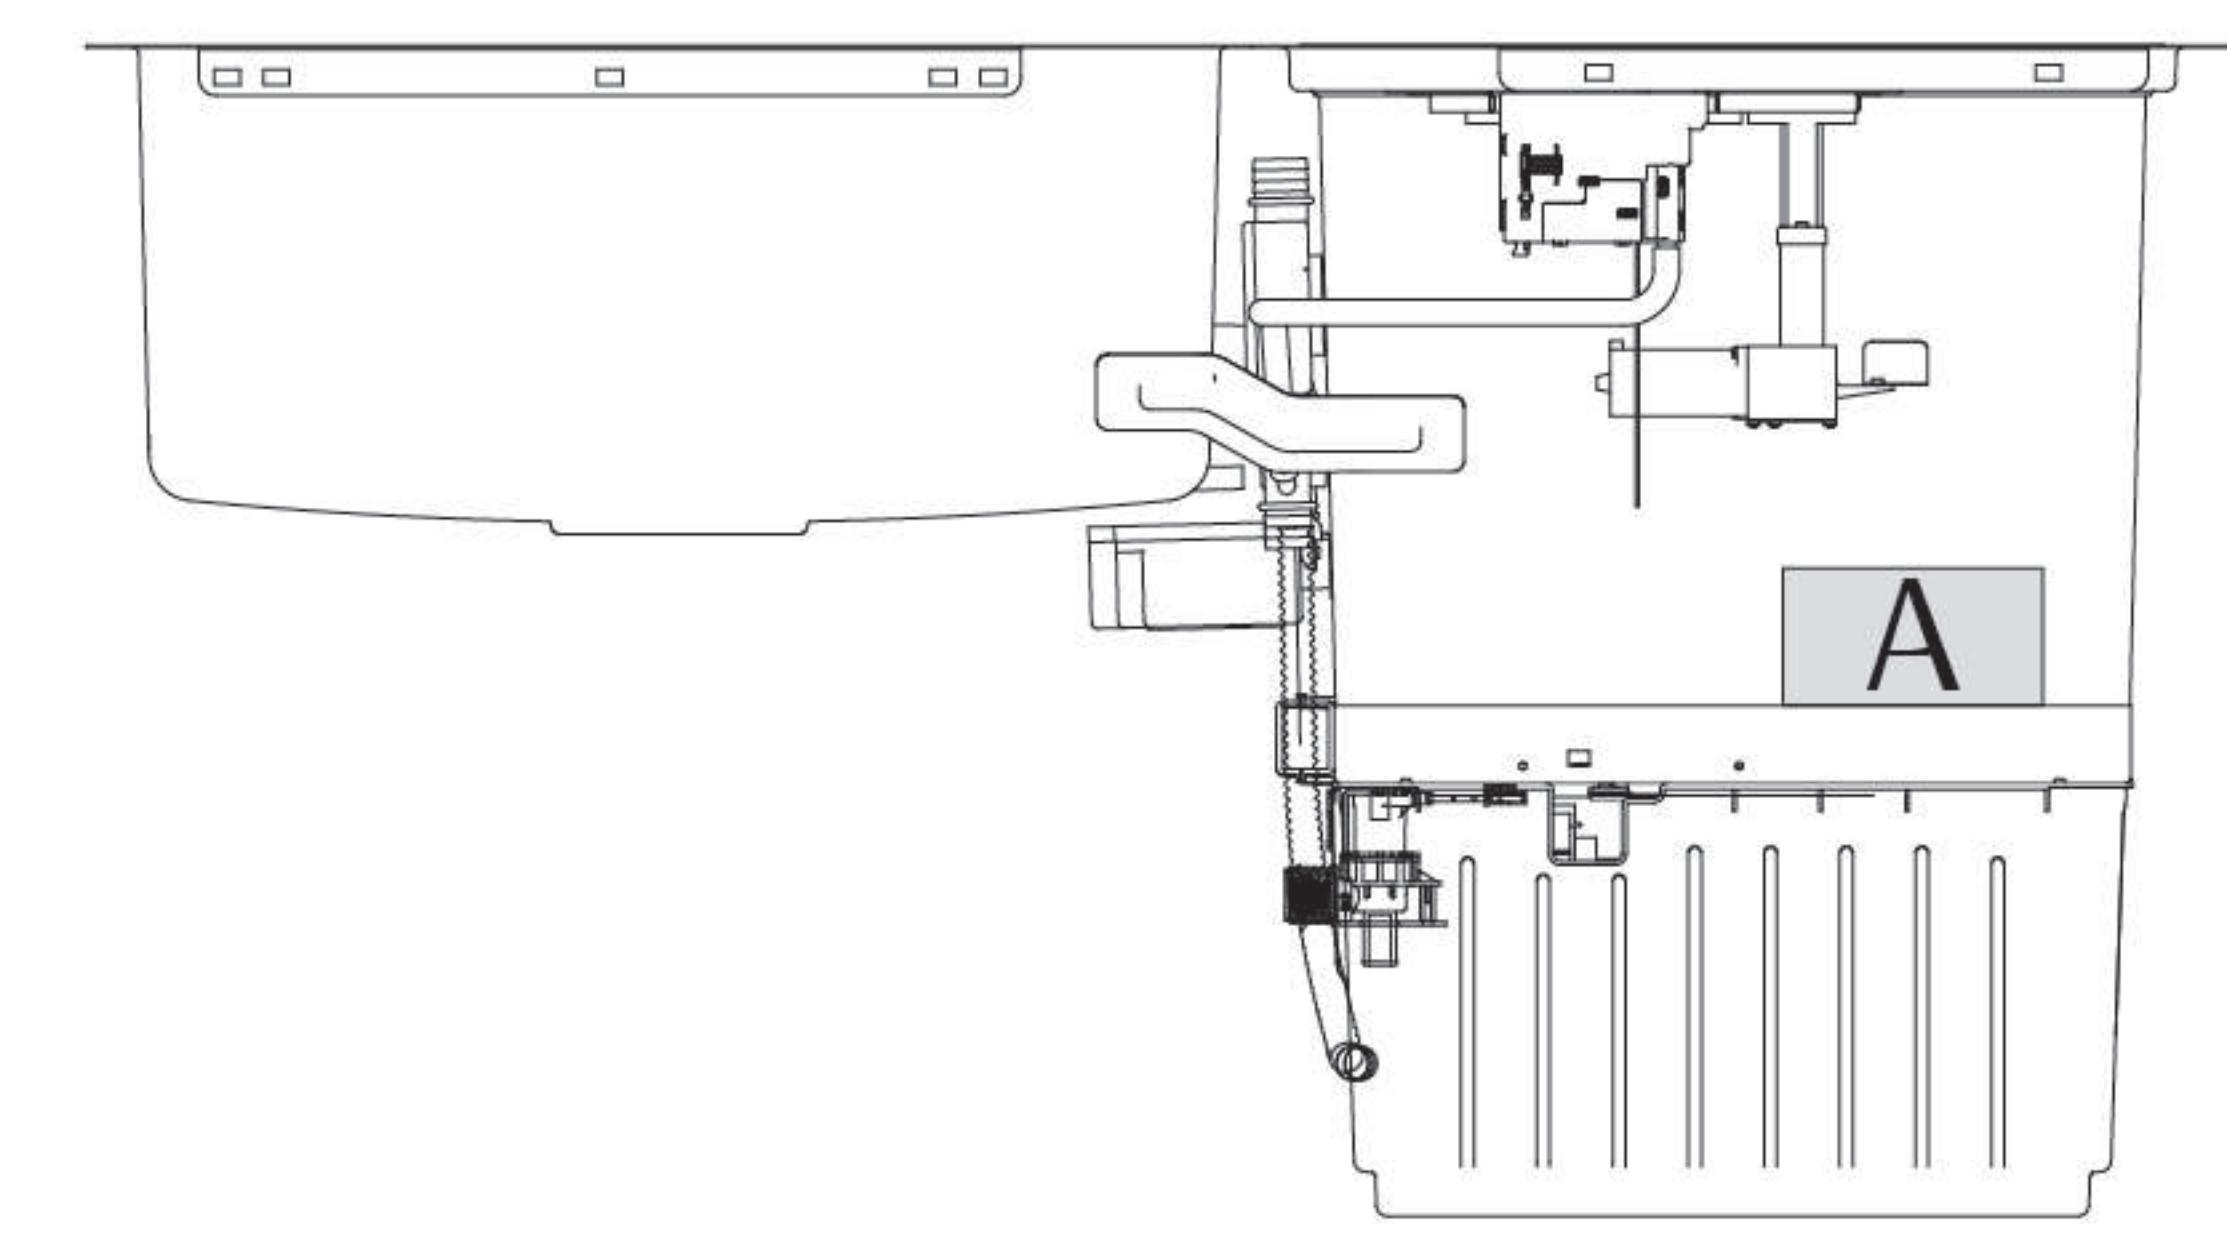

目 錄

尊敬的用戶，您好！

感謝您選購方太公司為您精心製造的方太系列產品。
使用和安裝前，請您務必認真閱讀此說明書相應內容
並遵從要求操作。這對於維持產品的良好工作狀況十分
重要，也有助于您獲得滿意的下厨體驗。
我們建議您，任何時候如有需要維修或服務時，請與
方太公司服務中心聯繫，以便我們能及時為您服務。

方太厨電，全球廚房的幸福選擇！

安全注意事項	24
主要技術參數	29
控制面板	30
操作說明	30
餐具擺放位置	32
日常清理	34
清理保養建議	35
常見故障的識別處理	36
部件名稱圖	37
非正常和故障代碼	39
客戶服務	40

安全注意事項

為了避免對使用人員及其他人員造成危害及財產損害，特作如下區分及標志。

以下均為有關安全的重要事項，敬請嚴格遵守，并在充分理解內容的基礎上正確使用。

本產品不適合具有身體、感官或精神缺陷或缺乏經驗及知識的人士（包括兒童）使用，但由其安全負責人對其使用提供監督或指導的情況除外。

請照看好兒童，本產品不能用于玩耍。

若電源線損壞，為避免危險，必須由制造商、其服務代理或具有類似資格的人員予以更換。

■ 根據危害、損害程度進行的內容區分

⚠ 危險	若忽視這一標志，并進行錯誤操作，易導致人員危險、重傷或引起火灾。
⚠ 警告	若忽視這一標志，并進行錯誤操作，有可能導致人員危險、重傷或引起火灾。
⚠ 注意	若忽視這一標志，并進行錯誤操作，有可能導致人員受傷或造成物品損害。
建議	為了安全、正確地進行使用，希望予以了解的內容。

■ 注意、禁止內容的圖標



⚠ 注意:玻璃的鋼化機理決定了存在極小概率的鋼化玻璃自爆。

本說明書各項規定若有與國家法律強制性規定相衝突之處，請以法律規定為准。

* 特別說明:請嚴格按照本說明書規定使用，由於本產品不當使用造成的任何財產損失、人身損害，本公司不承擔責任。

⚠ 危險	
	嚴禁電源插頭、接插件等電器部件沾水，如果沾水使用可能會導致觸電或其他意外傷害。
	請不要對電源線進行改制、拉伸、結扣及施加重物擠壓等。否則易導致電源線破損而發生觸電和火灾等事故。
	請勿用濕手觸摸電源插頭或電器部件，否則易發生觸電事故。
	禁止使用酒精等易燃溶劑清洗槽體。

⚠ 危險	
	移動產品時注意槽體邊角，以免割傷。 嚴格執行
	產品運行時，請勿強行打開門體，濺出的熱水可能會導致燙傷。 小心燙傷

⚠ 警告	
	請勿使用接觸不良或松動的電源插座，否則可能導致觸電、短路、起火。 禁止
	功能槽門體自動頂開狀態下，請勿強行關閉門體，否則會導致門體損壞。 禁止
	不要在產品運行時觸摸加熱裝置，可能會導致燙傷。 小心燙傷
	請勿讓兒童或行動不便者單獨使用本產品。請勿將本品放在兒童可觸及的地方，否則可能造成燙傷、觸電或其他意外傷害。 嚴格執行
	刀和其鋒利的用具必須裝在碗架裏，並且尖端朝下或水平放置。 嚴格執行
	請勿讓兒童玩耍塑料薄膜和包裝箱，這可能會產生窒息事故，所以請讓包裝材料遠離兒童，包裝材料不是玩具。 嚴格執行
	如果出現任何故障，請拔掉電源插頭，停止使用，并按“常見故障識別與處理”進行相應處理。 嚴格執行
	一些洗碗機清潔劑呈強鹼性，誤食會非常危險。門體打開時，避免接觸皮膚和眼睛，確保兒童遠離洗碗機。完成洗滌循環後，檢查洗滌劑容器是否為空。請使用冷水運行洗碗機。 禁止

⚠ 注意

 <p>禁 止</p> <p>洗果蔬時，請勿將營養成分衝突的果蔬放置在一起，以免造成果蔬營養成分流失。</p>	 <p>禁 止</p> <p>請勿將珠寶、黃金等貴重物品放入洗滌槽內清洗，以免損壞產品及清潔物。</p>
 <p>禁 止</p> <p>請勿用粗糙的擦洗劑或鋒利的金屬刮刀清潔玻璃，會擦傷玻璃表面，從而導致玻璃破碎。</p>	 <p>禁 止</p> <p>請勿使用多個插頭的多功能插座。</p>
 <p>嚴 格 執 行</p> <p>產品在使用期間會發熱，注意避免接觸產品的發熱元器件及周邊位置。</p>	 <p>禁 止</p> <p>請勿將重物放置在產品的玻璃上。</p>
 <p>嚴 格 執 行</p> <p>如果電源軟線損壞，為了避免危險，必須由制造商、維修部或類似部門的專業人員更換。</p>	 <p>禁 止</p> <p>請勿頻繁按壓“開始/暫停”鍵。</p>
 <p>禁 止</p> <p>請勿將肉類放置于洗滌槽內進行洗滌。</p>	 <p>嚴 格 執 行</p> <p>安裝產品的臺面要有足夠的支撐強度和高度，整機必須牢固的安裝在臺面上。</p>
 <p>禁 止</p> <p>停電時，請勿強行打開功能槽門體蓋板。</p>	 <p>嚴 格 執 行</p> <p>整機應遠離熱源以及煤氣和酒精等易燃物。</p>
 <p>禁 止</p> <p>產品運行時，不得直接將水倒入洗滌槽中，否則可能會導致產品無法正常工作。</p>	 <p>嚴 格 執 行</p> <p>每次洗滌結束后，渣籃中的食物殘渣請及時清理。</p>
 <p>禁 止</p> <p>請勿使用筷子等細長物品來捅門體鎖孔，否則機器可能無法正常工作。</p>	 <p>嚴 格 執 行</p> <p>保證下水管道暢通，管道堵塞可能導致產品無法正常工作。</p>
 <p>嚴 格 執 行</p> <p>請勿將帶大量泥沙的清洗物放置產品中，可能會導致產品無法正常工作。</p>	 <p>嚴 格 執 行</p> <p>安裝必須由有澳洲認證的管道工或方太指定的技術人員進行安裝。</p>


建 議

- 清洗的餐具內盡量不要有大塊的殘渣（如骨頭），以免干擾噴淋臂旋轉，影響機器正常使用和清洗效果。
- 安裝完噴淋臂，請檢查是否安裝到位，以免噴淋臂脫落，損壞機器。
- 關閉門體時，需按壓門體，保證功能槽槽體密封。
- 清洗餐具前，建議加入專用洗碗粉。
- 若餐具上有手洗甚至鋼絲球也很難清洗的污漬，直接放入則無法清洗干淨，建議對污漬進行預處理，再放入洗碗機進行洗滌。
- 若打開包裝發現槽體內有少量積水，為出廠合格測試所致，並非機器自身故障導致。
- 本產品不提供水龍頭，需用戶自行配置。
- 放置餐具時，不要讓高腳杯等易碎物品觸碰其它餐具。
- 洗滌完畢后，建議把門體打開，保持槽體干燥。
- 在運行果蔬程序前，請先清理槽體底部殘渣。
- 您也可以通過下表查看清洗的餐具是否合適：

餐具及材料	是否可清洗	餐具及材料	是否可清洗
鋁	否	不銹鋼	是
瓶子和罐子	否 標簽有膠，會堵塞噴淋臂，不利于洗滌	純銀	是
鑄鐵	否 會生銹	錫	否 會腐蝕生銹
陶瓷	是 骨瓷及表面花紋易脫落器具除外	木質 象牙類	否 未經處理的木質會產生扭曲、裂紋
水晶	是		
金	否 會變色	空心手柄 刀具	否 刀具裏的粘合劑在高溫水的作用下會松脫
玻璃	是		
一次性塑料	否 不能承受高溫水和洗滌劑	銅、青銅	否 在高溫水和洗滌劑作用下會變形和變色
塑料	是		


注：1.請確保清洗餐具所能承受溫度差在洗滌程序規定溫度範圍內；
2.如果是其它特殊材料，請諮詢售后。

主視圖

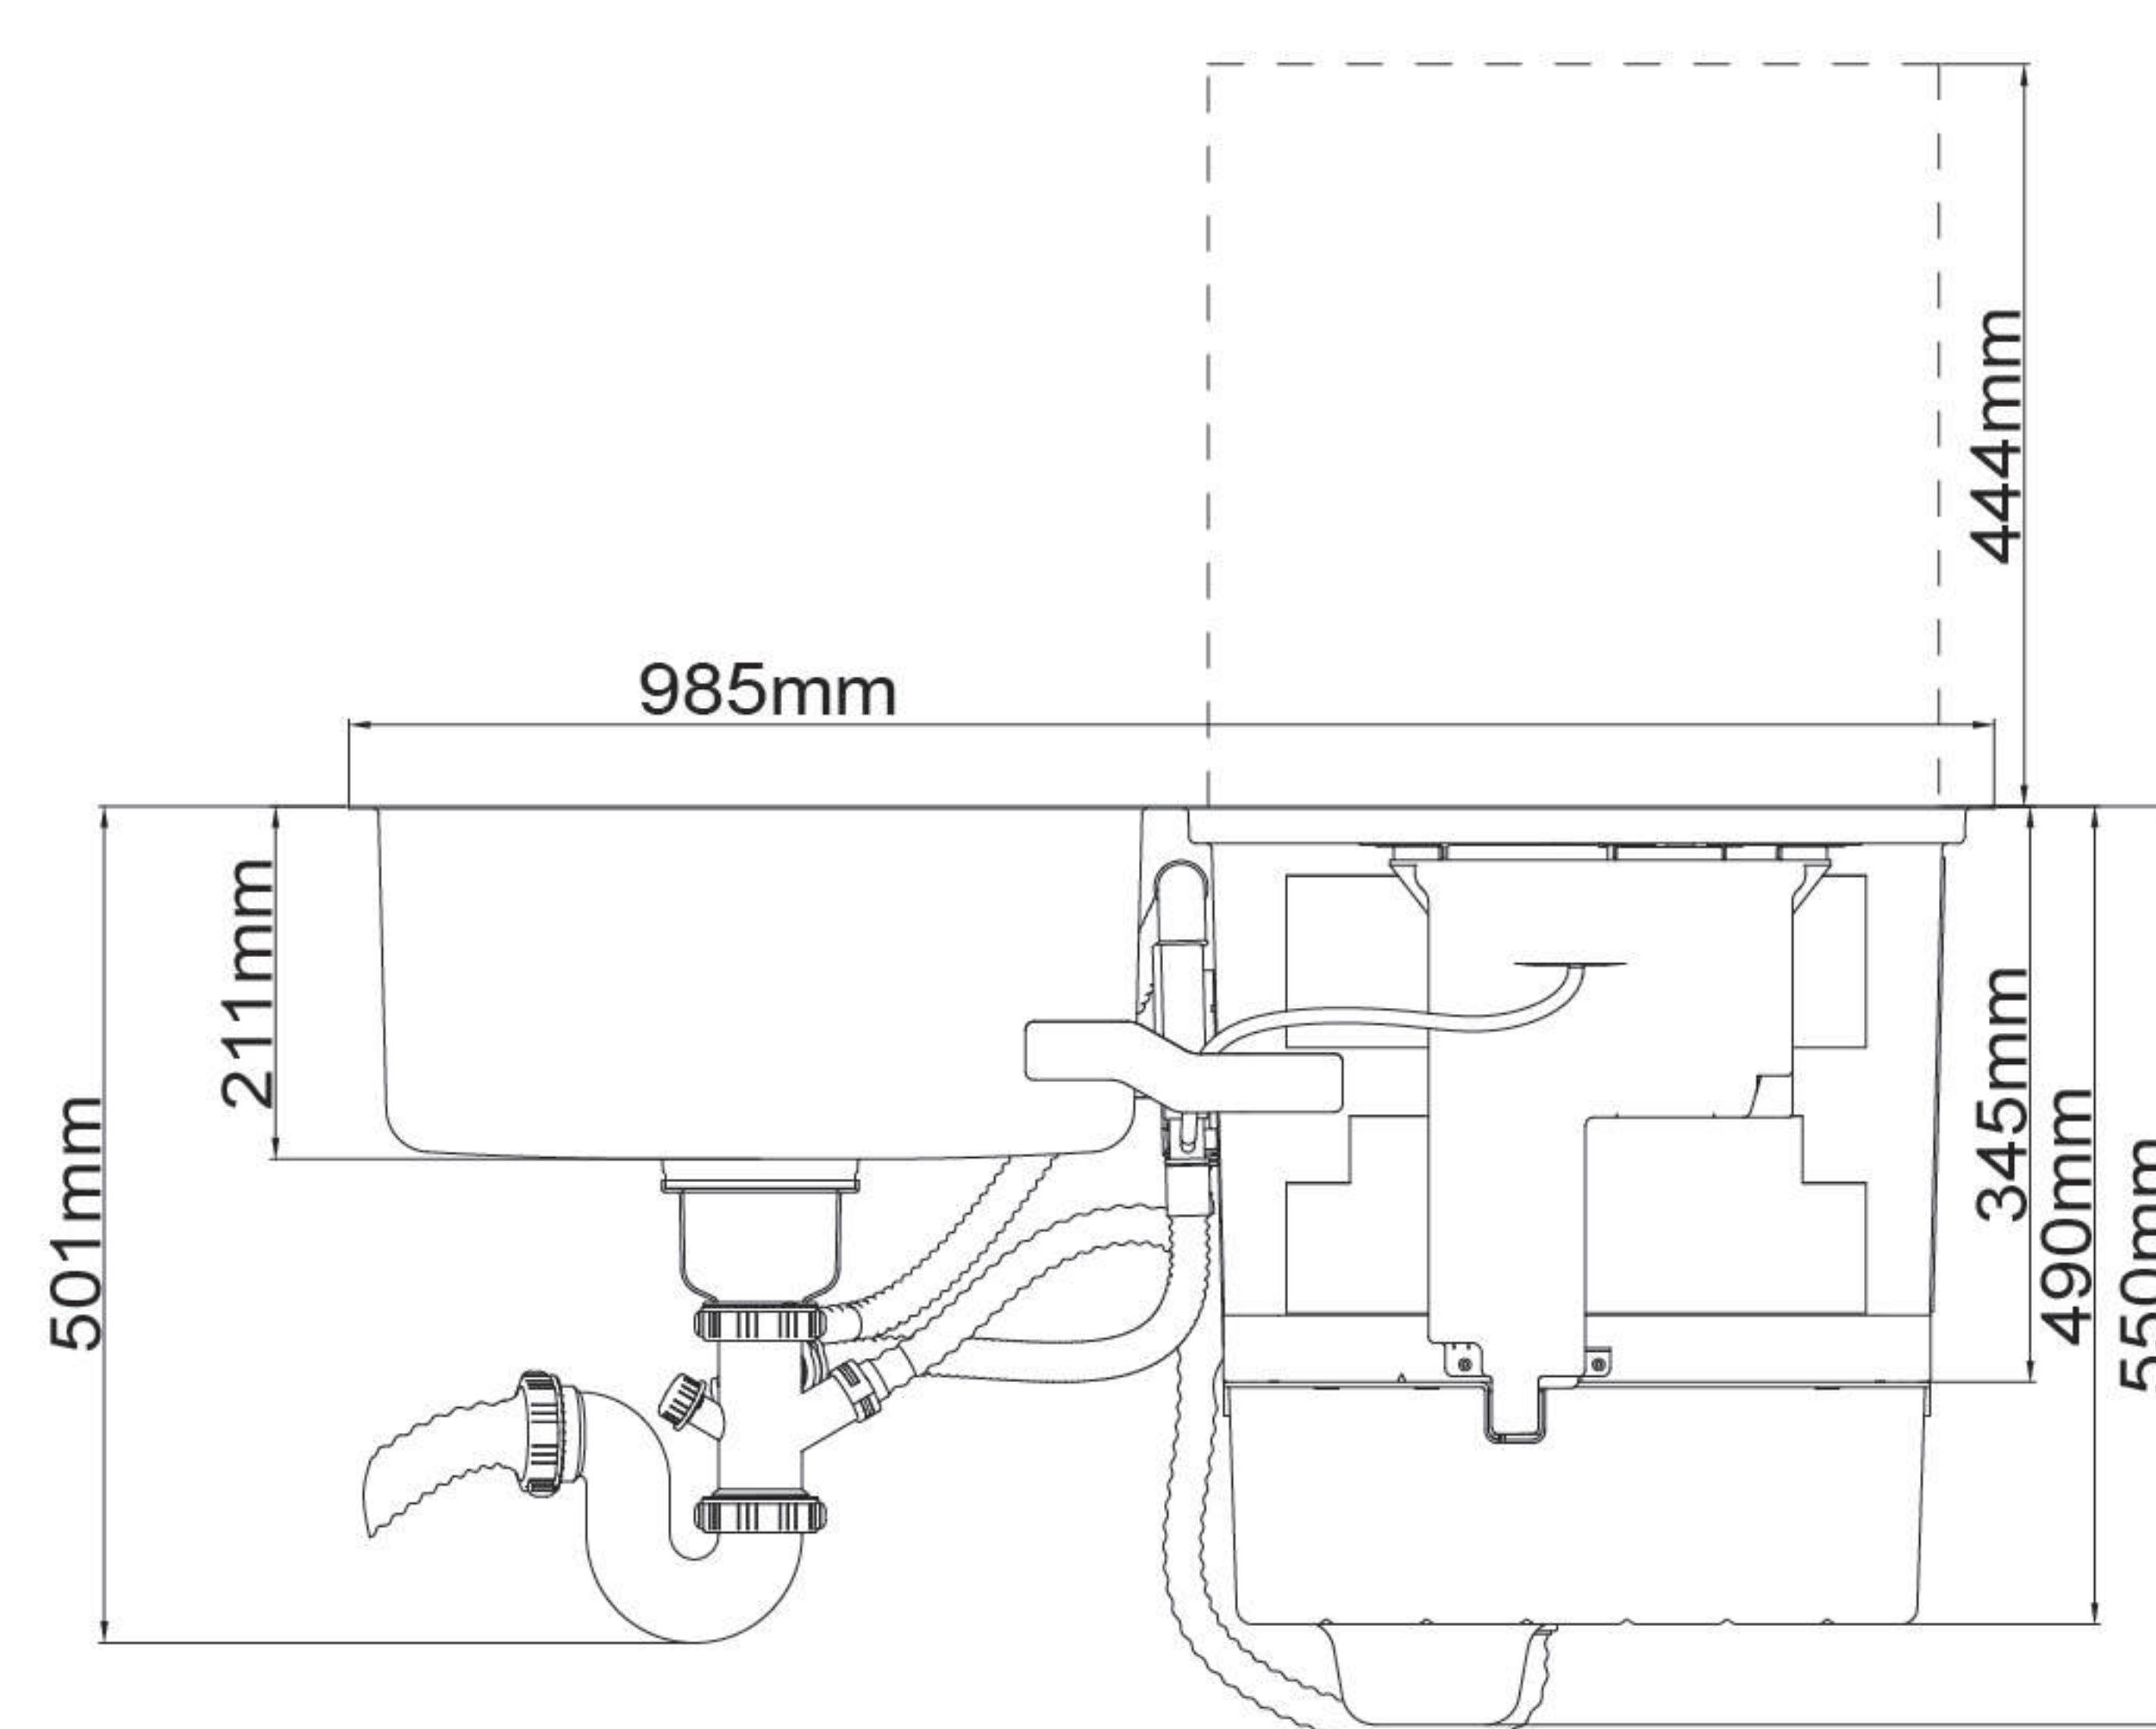

注：圖示為SD2F-P6（右款），SD2F-P6L（左款）
功能槽與水槽位置互換。


排水管安裝圖

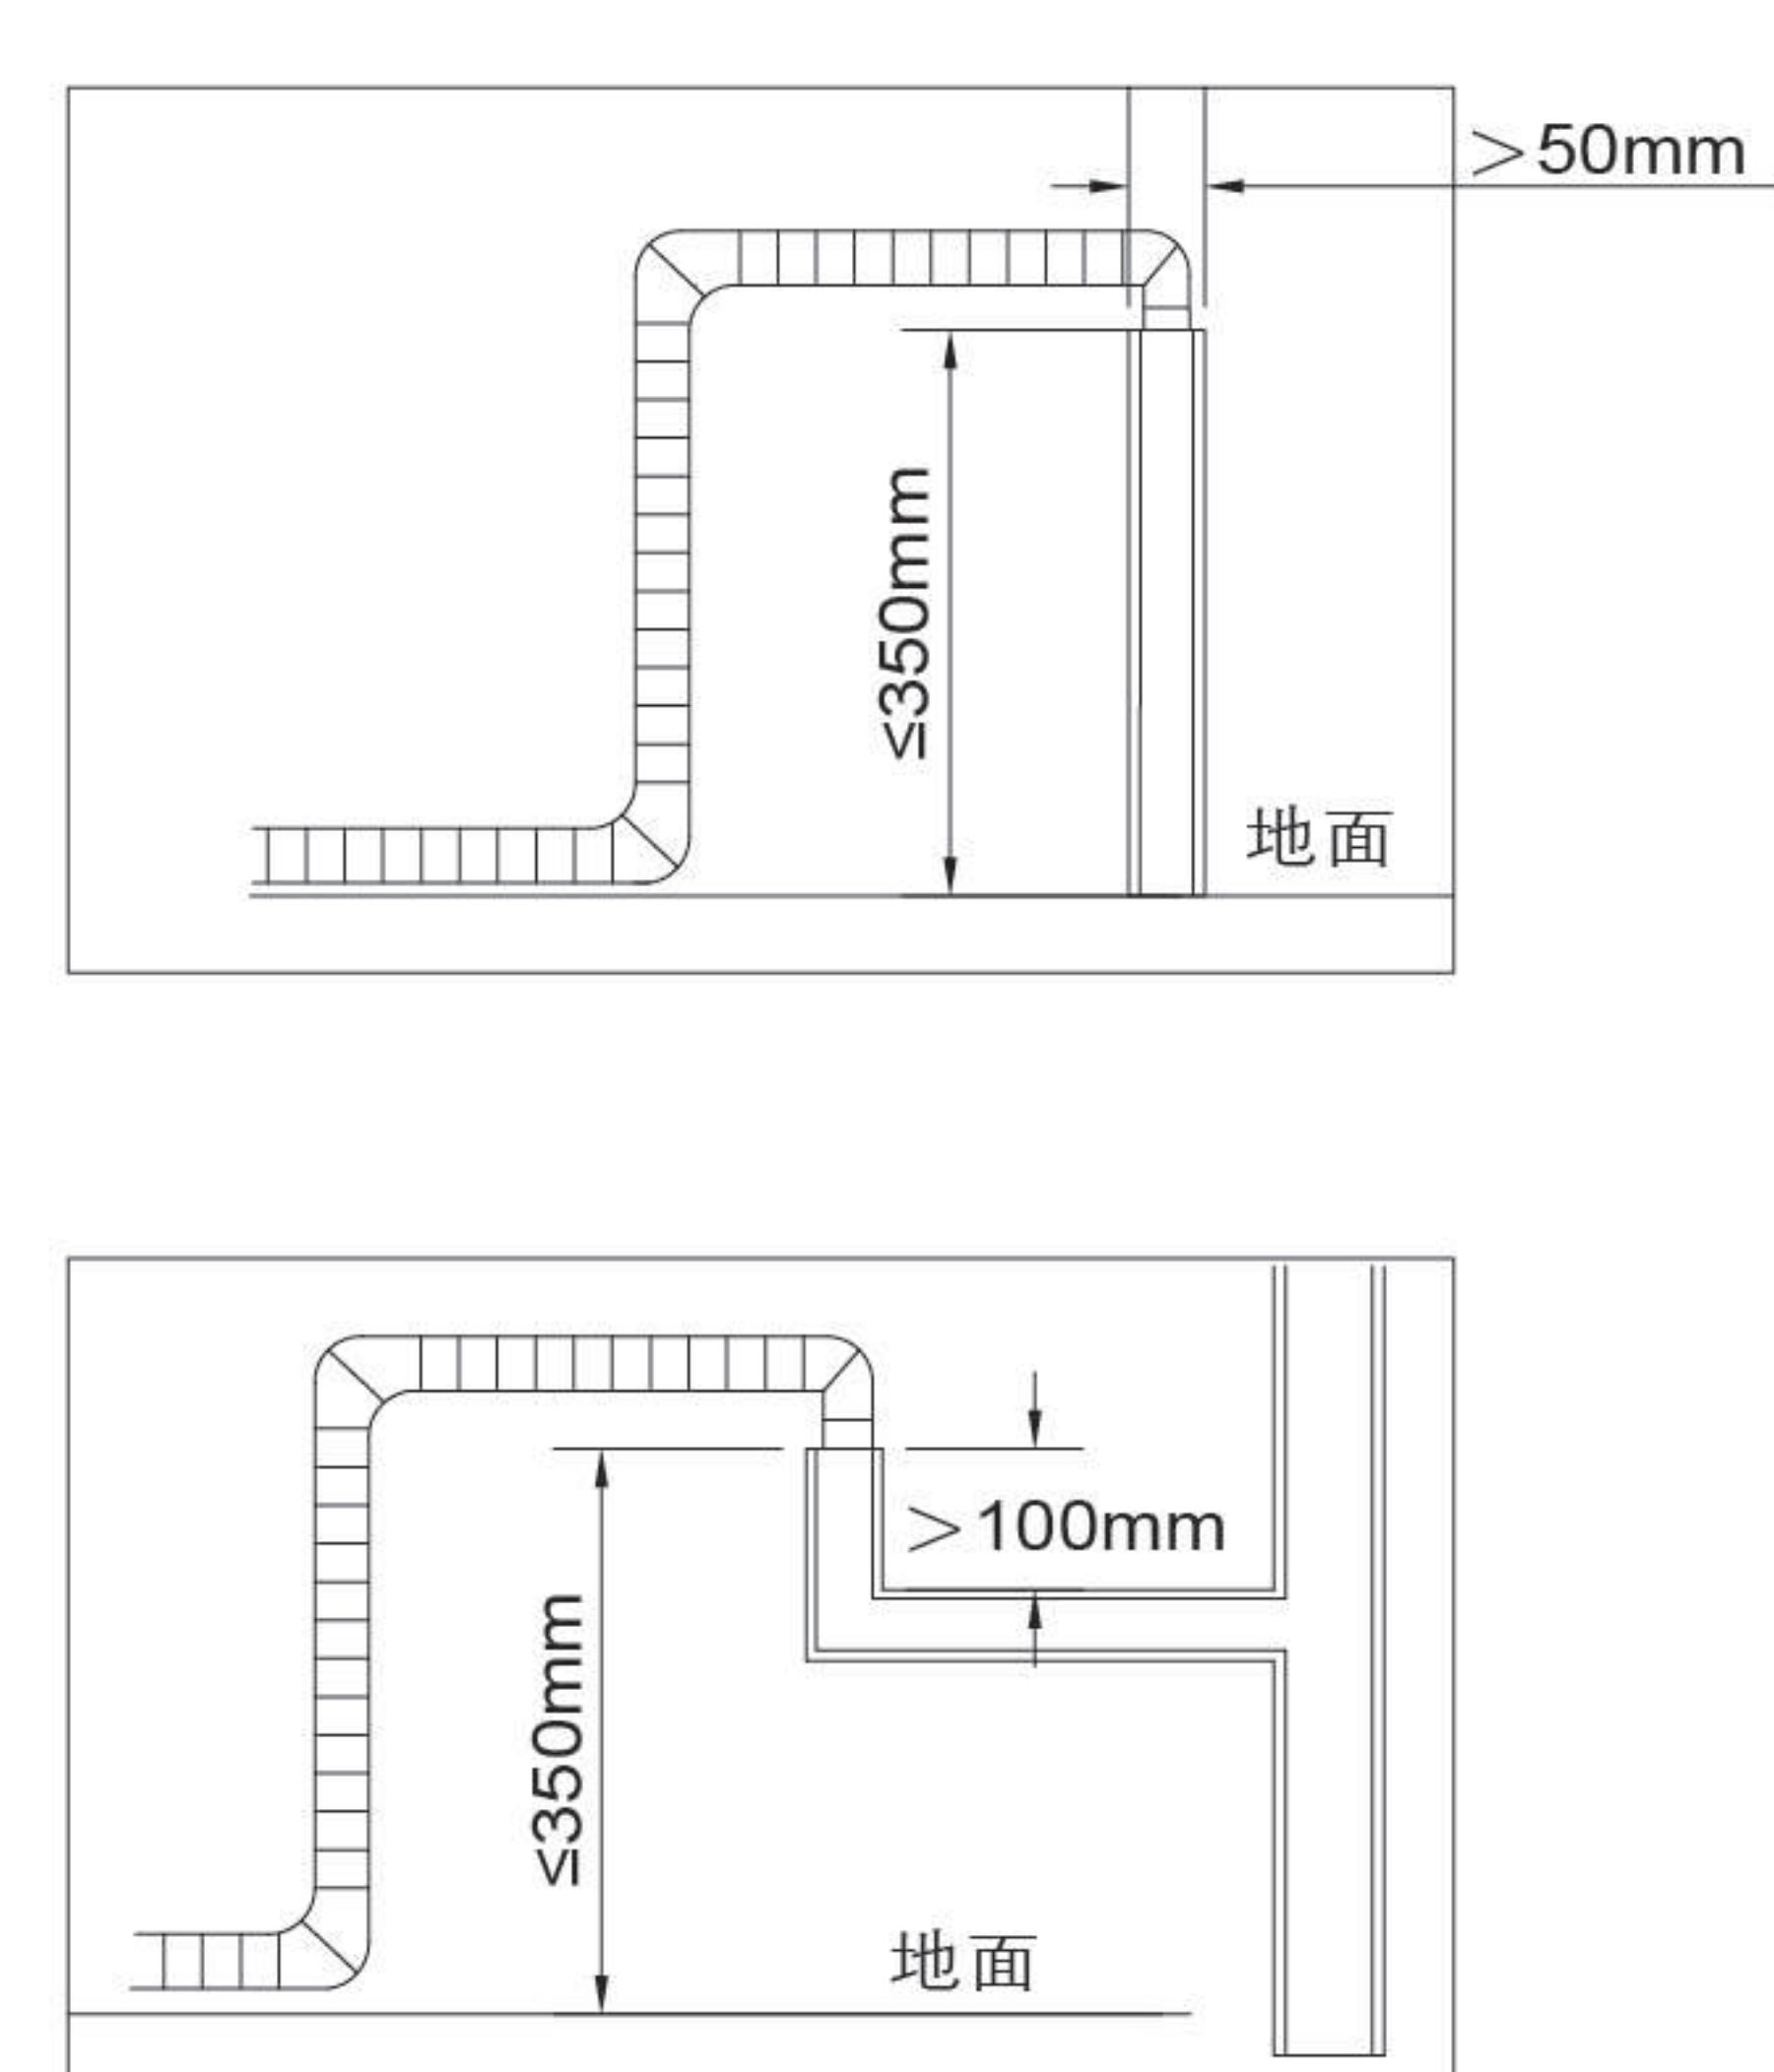

主要技術參數

		3-In-1 In-sink Dishwasher							
		SD2F-P6/SD2F-P6L							
產品尺寸	長 x 寬 x 深		985mm X 505mm X 550mm						
	完全打開后的門體高度		444mm						
開孔尺寸	長 x 寬 x 深		960mm X 480mm X ≥550mm						
	功率(W)		1950W						
基礎參數	電流(A)		9A						
	電壓(V)		220-240V						
耗電量	頻率(Hz)		50Hz						
	水壓(MPa)		0.14MPa-1MPa						
產品功能 / 性能	最大噪音(dB)		55.6dB						
	毛重(kg)		32kg						
產品功能 / 性能	淨重(kg)		24.2kg						
	耗電量		190 千瓦時/年						
清洗模式		碗碟清洗				果蔬清洗			
		超快洗	強快洗	超強洗	ECO	輕柔	適中	強勁	
最高清洗溫度(°C)		60°C	70°C	75°C	52°C	室溫			
清洗時間(分鐘)		15 分鐘	45 分鐘	80 分鐘	180 分鐘	7分鐘	12分鐘	15分鐘	
總耗水量(L / 次)		8L	10L	12L	6.2L	低: 15L	低: 18L	低: 20.5L	
						中: 16L	中: 19.5L	中: 22L	
						高: 17L	高: 21L	高: 23.5L	
最大可清洗餐盤直徑		260mm				/			
可變碗架		是				/			
3D風扇烘干		是				/			
隱藏式加熱盤		是				/			
進水檔位		/				3			
可容納餐具套數 (IEC測試負載)		5				/			
內腔材質		食品級不銹鋼				/			
操作方式		微壓屏防水觸控				/			
數碼屏顯示		是				/			
自動提醒		是-結束清洗後				/			
漏水保護		是				/			
童鎖		是				/			

控制面板

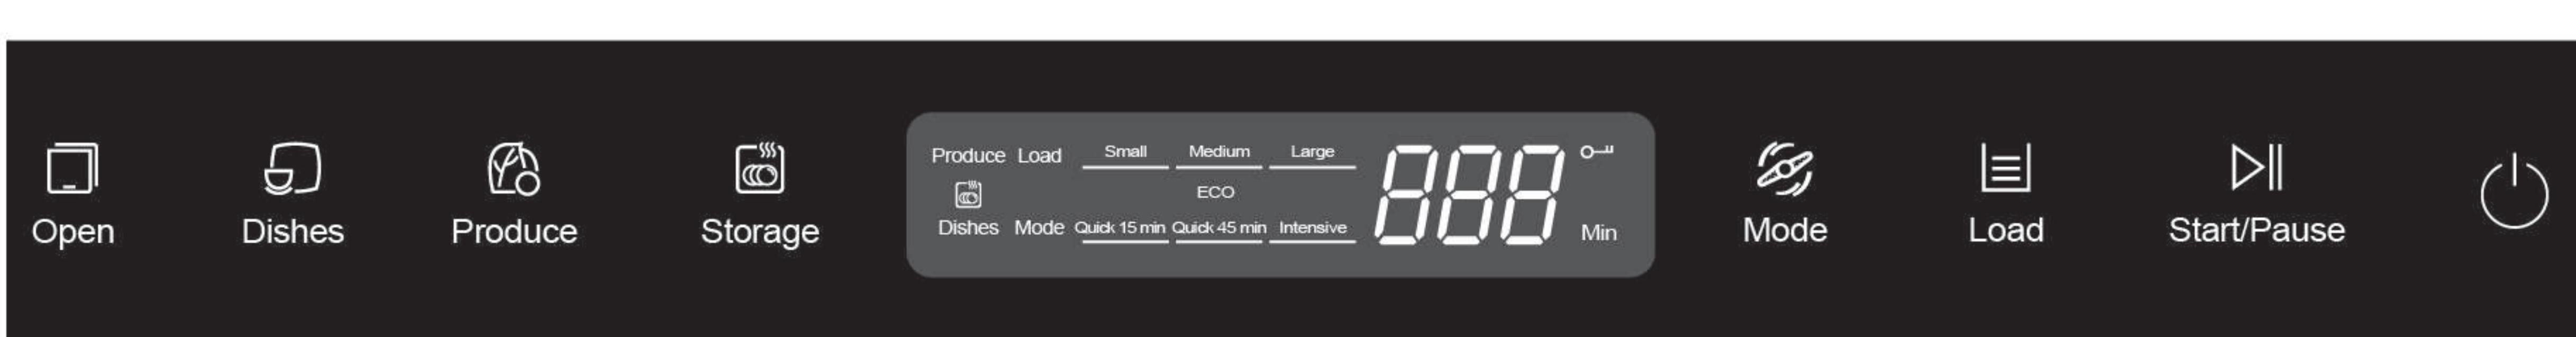


1. 開門鍵 ：按壓開門鍵，保潔存儲狀態及非工作狀態下可直接打開門體，工作狀態下需按壓開始/暫停鍵，再按開門鍵，可打開門體。
2. 碗碟鍵 ：按壓碗碟鍵，可進入碗碟清洗程序。
3. 果蔬鍵 ：按壓果蔬鍵，可進入果蔬清洗程序。
4. 保潔存儲鍵 ：在碗碟清洗模式中按壓保潔存儲鍵，洗碗機將在碗碟清洗程序結束後進入保潔存儲模式。
5. 顯示屏：顯示洗滌時間、強度大小、水位高低、功能模式、產品運行和暫停。
6. 強度鍵 ：碗碟清洗、果蔬清洗程序中選擇，可選擇超快洗、強快洗、超強洗三個程序，碗碟清洗程序中還可選擇節能模式。
7. 水位鍵 ：果蔬清洗程序中選擇，可選擇低、中、高三個程序。
8. 開始/暫停鍵 ：控制產品的開始和暫停。
9. 關關鍵 ：控制電源的開啓和關閉。

操作說明

■ 碗碟清洗程序

長按開關鍵 此時數字閃爍→按壓開門鍵 →選擇碗碟清洗模式 →選擇強度（可選） →按壓開始/暫停鍵 開始洗滌→洗滌並烘干餐具→洗滌結束→關機→日常清理。

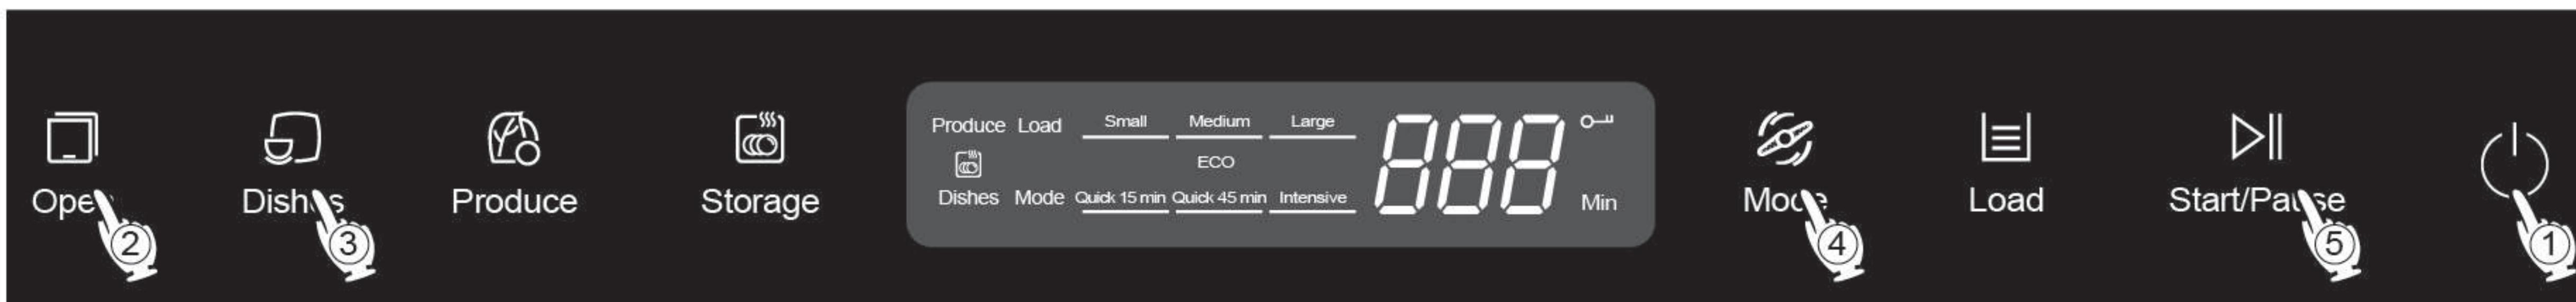

注：清洗完畢後，門自動打開，系統進入餐具烘干狀態，持續30分鐘後自動關閉，未到30分鐘長按電源鍵關機，餐具烘干系統停止工作。

選擇強度（如下表）：

	超快洗	強快洗	超強洗	節能洗
適合餐具	早餐、備菜盤等輕油污餐具	一般髒污的餐具	嚴重髒污的餐具	一般髒污的餐具
洗滌時間	15分鐘	45分鐘	80分鐘	180分鐘
耗水量	8L	10L	12L	6.2L
建議洗滌劑用量	20g	23g	23g	23g
洗滌溫度	60°C	70°C	75°C	52°C
*漂洗劑加入時間	“05”	“07”	“09”	“09”
漂洗劑用量	6ml	6ml	6ml	6ml


注：1. 為獲得更好的清洗效果，在放入餐碟之前，可先放入洗碗粉。洗碗粉直接撒入洗碗槽底部即可，如果使用洗碗塊，請放置於濾籃中。

2. 清洗的碗碟建議進行預處理，以免殘渣干擾噴淋臂旋轉，影響正常使用和清洗效果。

3. ECO程序為標準測試程序，適用於常見的被污染的碗碟清洗，相比其他程序更加節能、節水，且有更出色的清洗效果，推薦日常清洗使用。

■ 果蔬清洗程序

長按開關鍵 此時數字閃爍→按壓開門鍵 →選擇果蔬清洗模式 →選擇強度 →選擇水位 →按壓開始/暫停鍵 開始洗滌→洗滌結束→關機→日常清理。

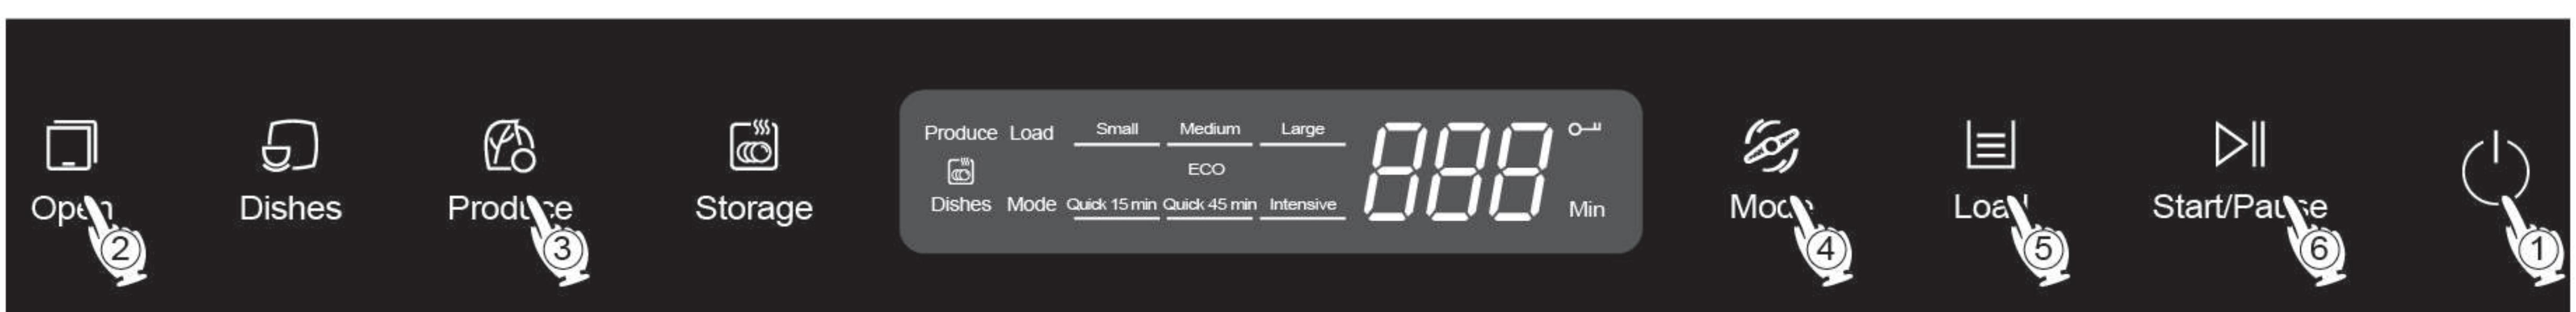

說明：1. 選擇強度：按壓強度鍵可選擇超快洗、強快洗、超強洗三種強度的一種。

2. 選擇水位：按壓水位鍵可選擇低、中、高三種水位的一種。


	超快洗(Quick 15 min)	強快洗(Quick 45 min)	超強洗(Intensive)
清洗時間	低中高水位	7分鐘	12分鐘
清洗對象	低中高水位	●櫻桃、草莓、楊梅等易洗爛的果蔬 ●蘋果、梨、橙子、葡萄、桃子、黃瓜、青菜、番茄等果蔬	●番薯、土豆和花生等表面較髒的果蔬 ●表面打蠟、農藥侵蝕較嚴重的果蔬

注：1. 本機測試程序為超強洗、高水位，以上數據在方太實驗室條件下測定。在果蔬洗模式下，Quick 15 min為超快洗模式，對應時間7分鐘，Quick 45 min為強快洗模式，對應時間為12分鐘，Intensive為超強洗模式，對應時間為15分鐘。

2. 水果表面白霜為果霜，不影響食用；表面帶有果蠟的水果建議手洗後食用；葉菜類根部切除或掰開清洗，效果更佳，泥沙較多的果蔬，建議預處理後清洗；清洗後及時打開門蓋，進行通風。

■ 保潔存儲功能

長按開關鍵 此時數字閃爍，在碗碟清洗選擇模式下，按壓保潔存儲鍵 ，此時保潔存儲圖標亮起，按壓開始/暫停鍵 開始洗滌，碗碟清洗過程中，如需對保潔存儲功能進行操作，需先按開始/暫停鍵 再進行操作。

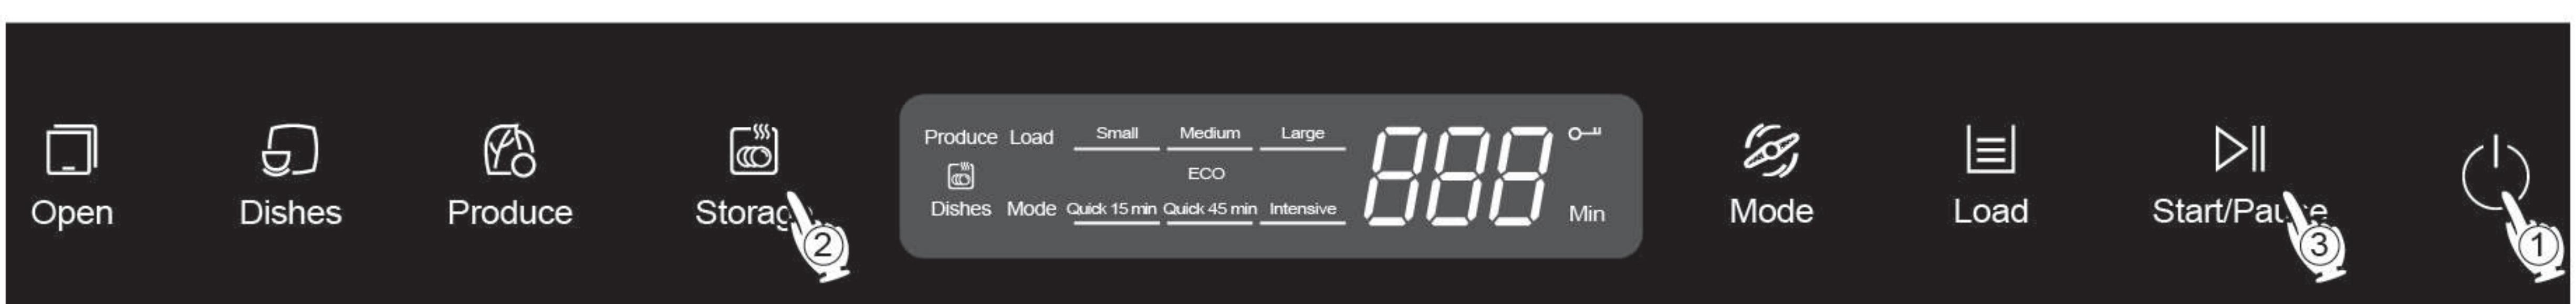


注：1. 保潔存儲功能僅會在碗碟清洗結束後運行，該功能持續時間為96小時，持續期間按壓電源鍵，保潔存儲功能將會關閉。

2. 超快洗模式下無法使用保潔存儲功能。



■ 排水閥開/關

待機（黑屏）狀態下，長按電源鍵開機并在5秒內關機，即可打開排水閥，持續30秒后排水閥自動關閉。

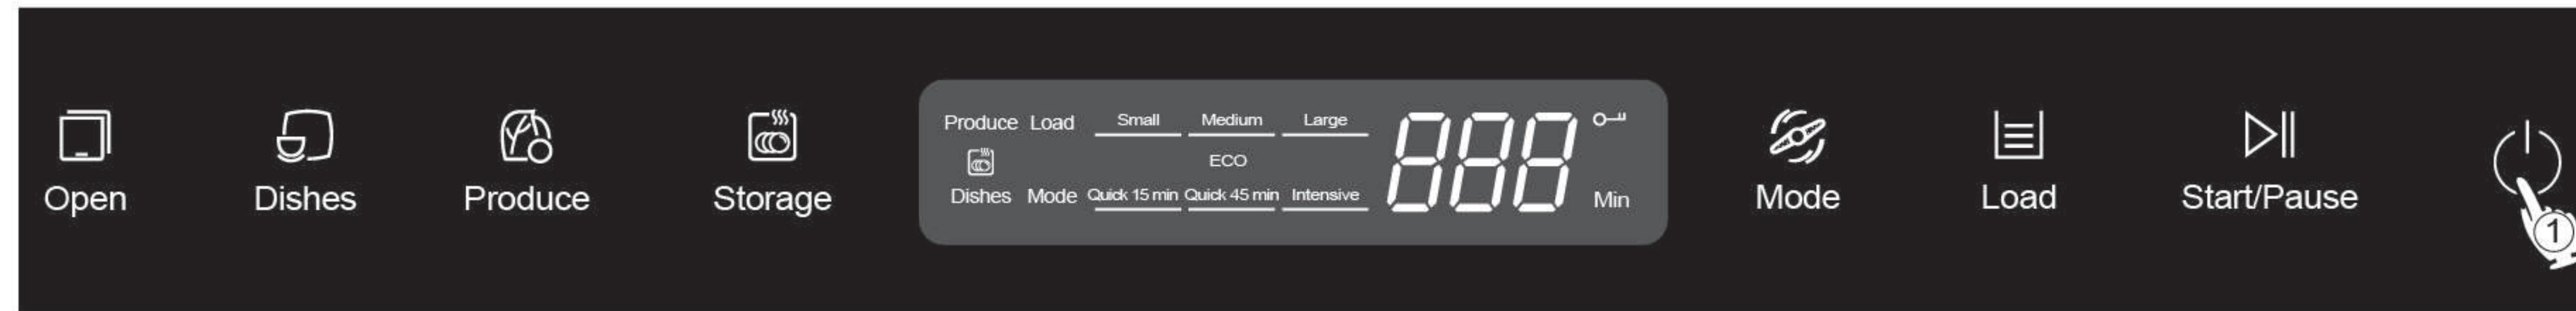

注：1. 若槽體內水量較多，請進行多次排水操作。
2. 排水過程中會有輕微電機聲，屬正常現象。


餐具擺放位置

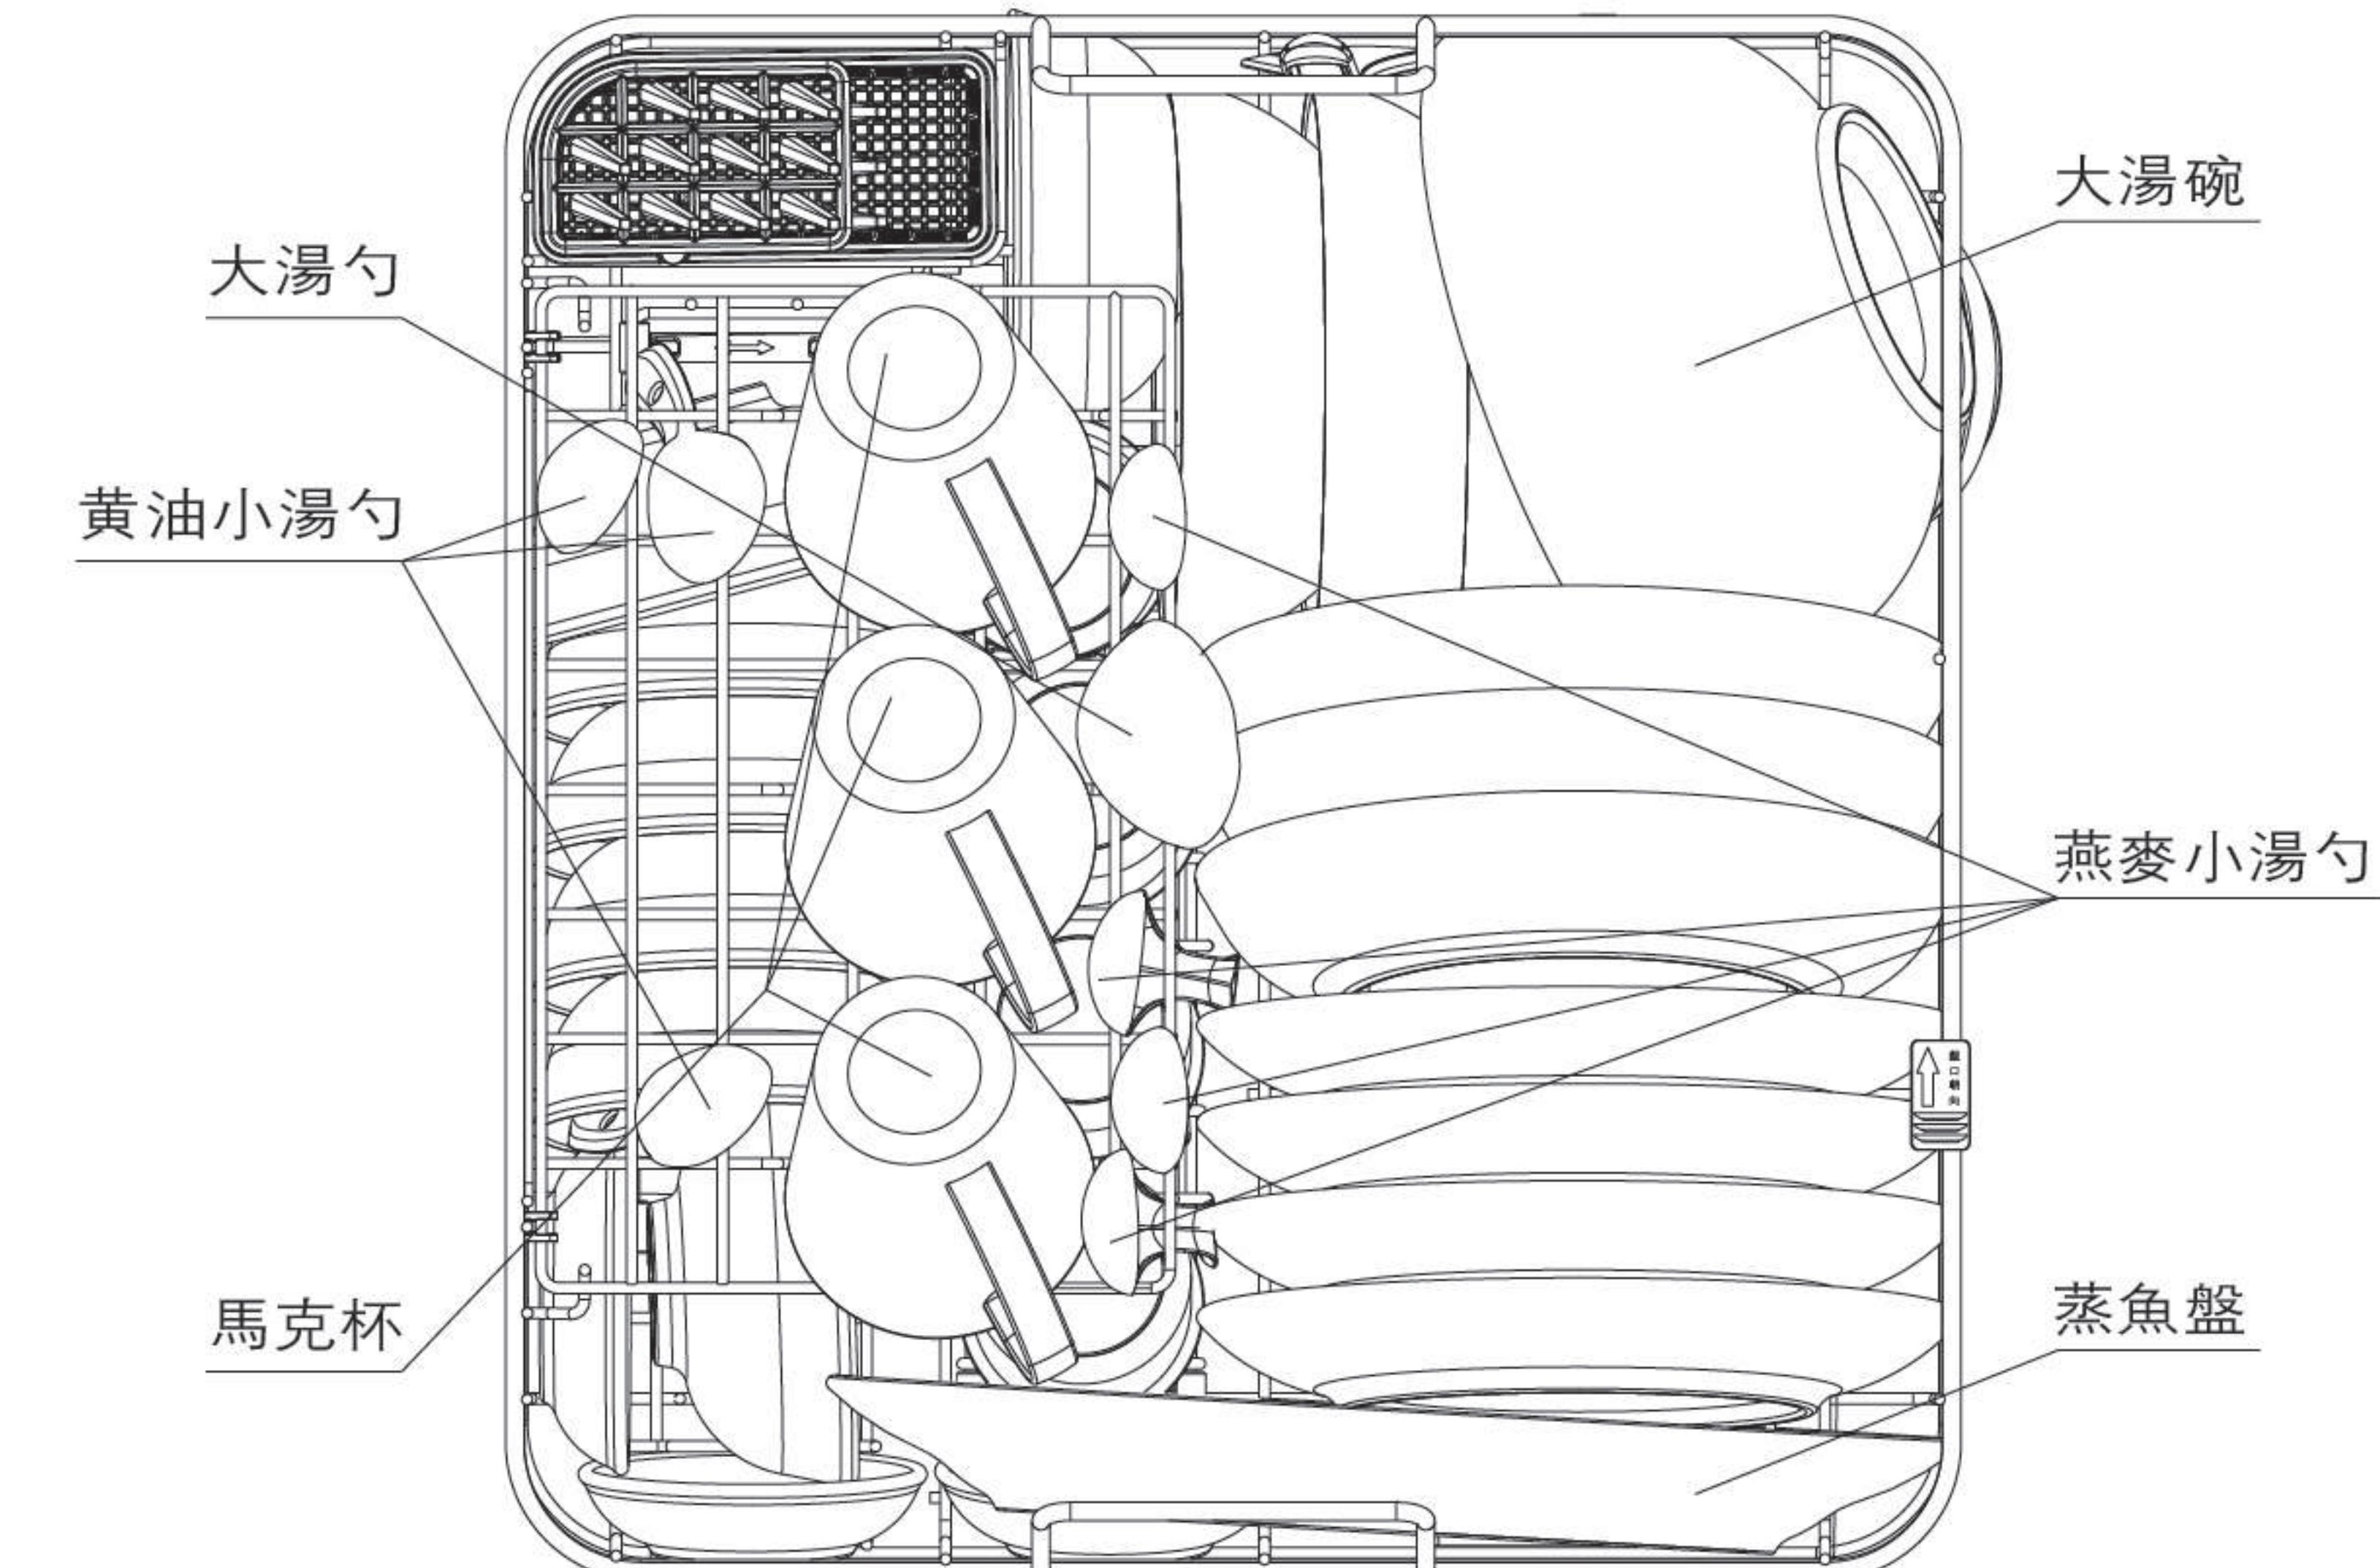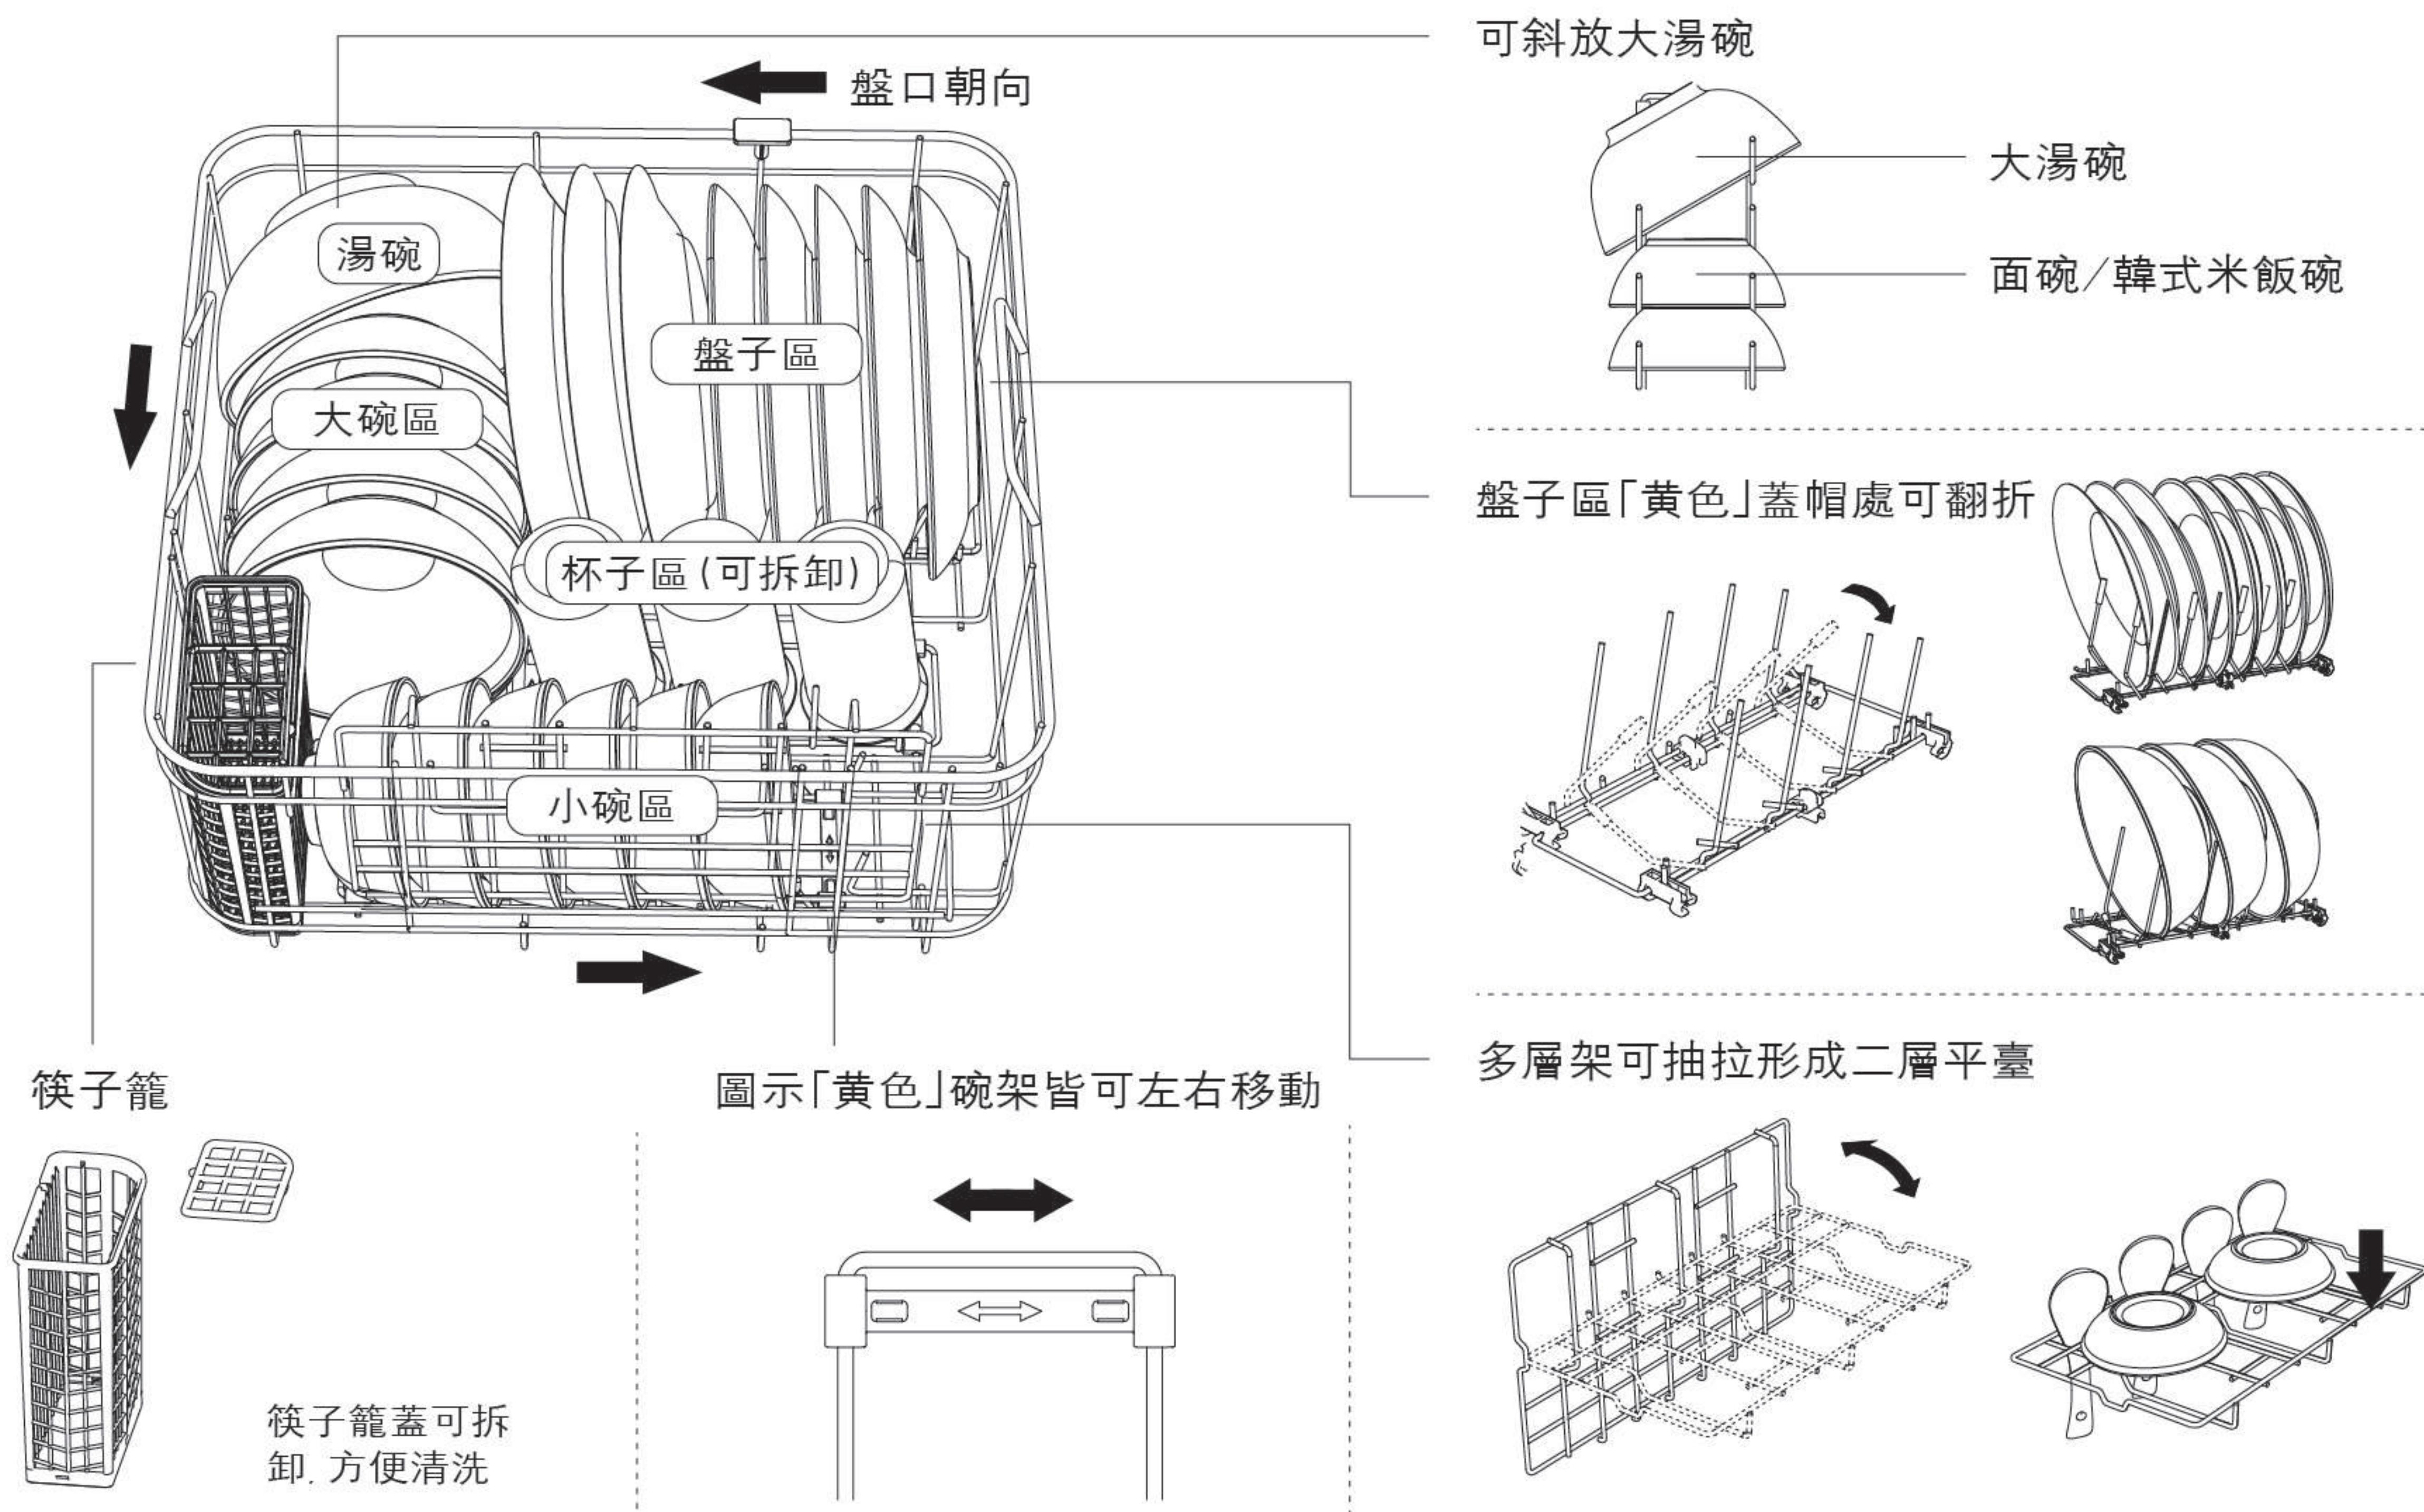

1. 盤子區：可放置各類餐盤，若有深淺不同的盤子，請將深盤放在淺盤之前，盤子區最右側可放置蒸魚盤；
2. 大碗湯碗區：可放置湯碗、大面碗等；
3. 筷子籠：可放置筷子或者湯勺；
4. 小碗區：可放置各類飯碗或者較小的面碗；
5. 杯子區：可放置玻璃杯、作料碟等；
6. 上層碗架：上層碗架拉出，可放置馬克杯、佐料碟、小米飯碗，挂置各類湯勺等；
7. 盤架活動翻架：盤架部分支架可以向內側放倒，活動翻架放倒后可以擺放面碗等較大碗；
8. 餐具放置后，避免餐具疊在一起，以免影響清洗效果；餐具較少時，間隔放置餐具有助于更好地清洗；
9. 餐具放置后，請確保勺子類餐具的手柄不會從碗架底部伸出，以免阻擋噴淋臂的正常旋轉；關門時請確保上層碗架上的餐具或者筷子（筷子長度不得高於24cm）不會頂住門，以免門變形或者餐具洗不干淨。


日常清理

1. 打開門體，清潔門體上殘留的污垢。
2. 清潔槽體四壁和壁角，可以適當的加入洗滌劑。
3. 逆時針旋轉移除渣籃，傾倒殘渣并清洗。
4. 逆時針旋轉移除噴淋臂并清洗。
5. 拿下過濾網板并清洗。
6. 清洗槽體底部。
7. 清理完后請將各零部件按原位置安裝，并檢查是否安裝到位。

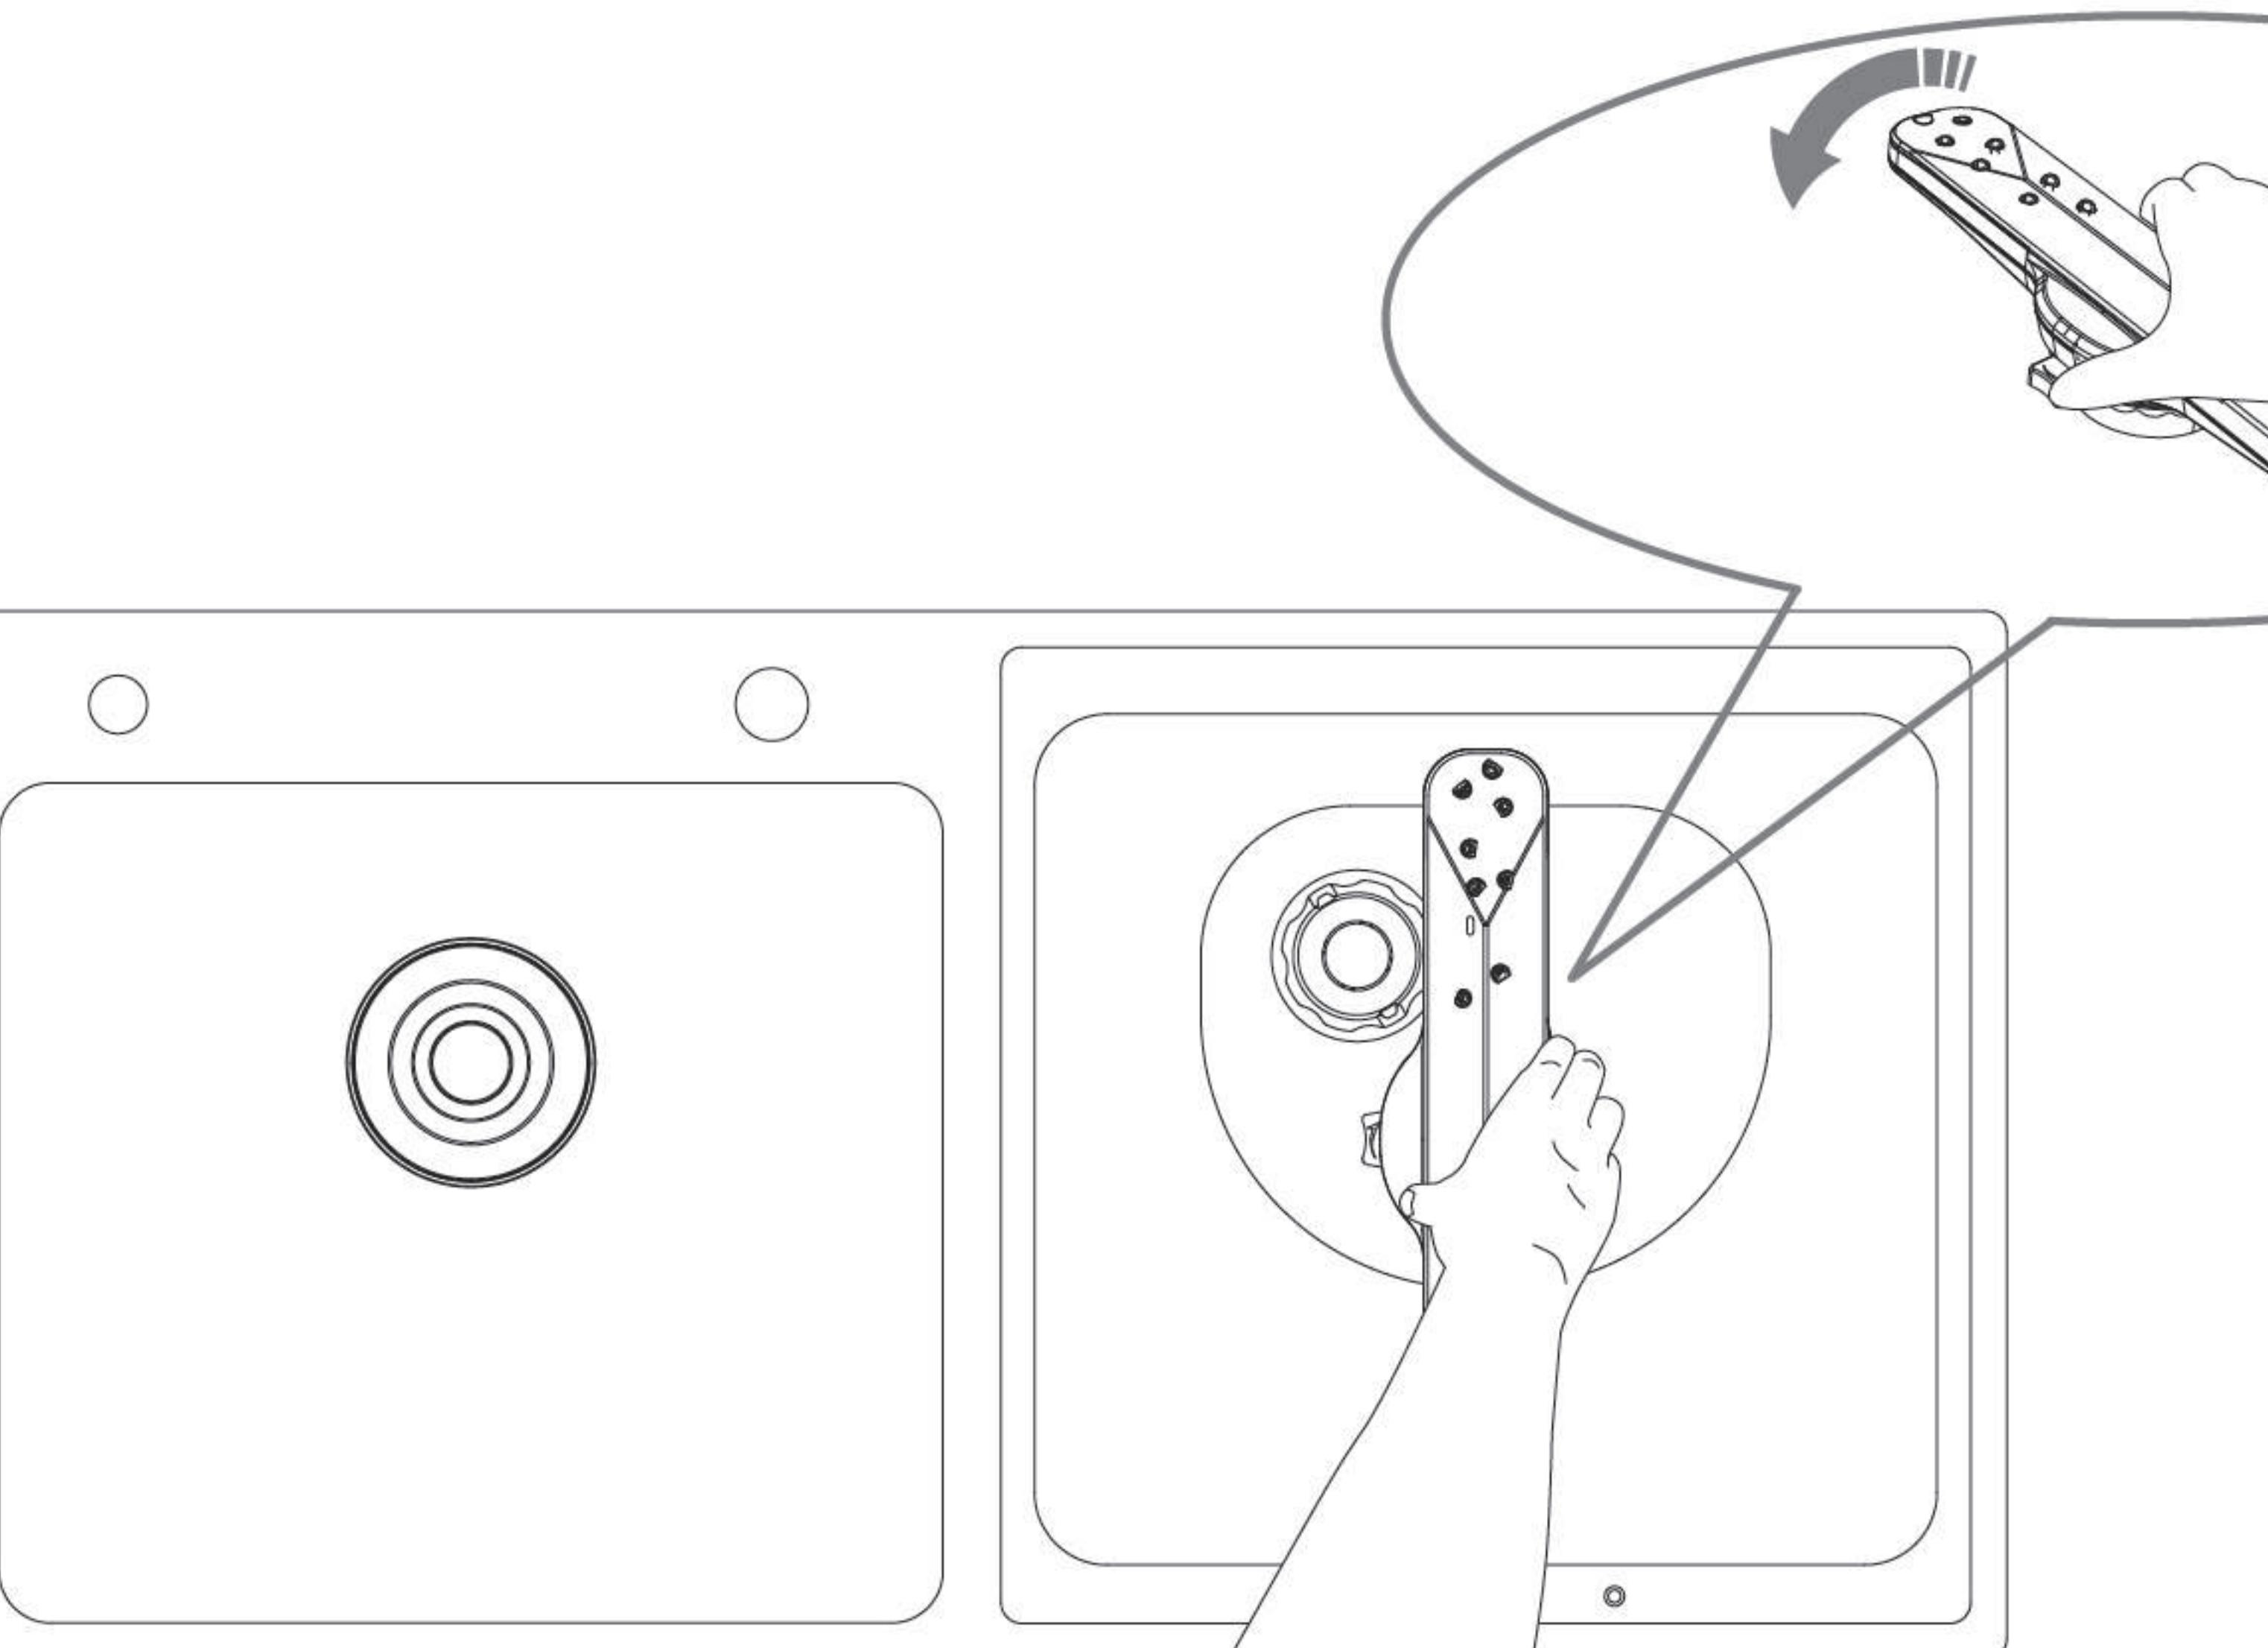

拆&洗噴淋臂：捏住噴淋臂下方兩個灰色的卡扣凸塊，按壓并逆時針旋轉，即可拆下噴淋臂進行清洗。

安裝噴淋臂：捏住噴淋臂下方兩個灰色的卡扣凸塊，按壓并順時針旋轉，聽到“咔噠”聲后，撥動噴淋臂，能順暢旋轉且無異響即可。

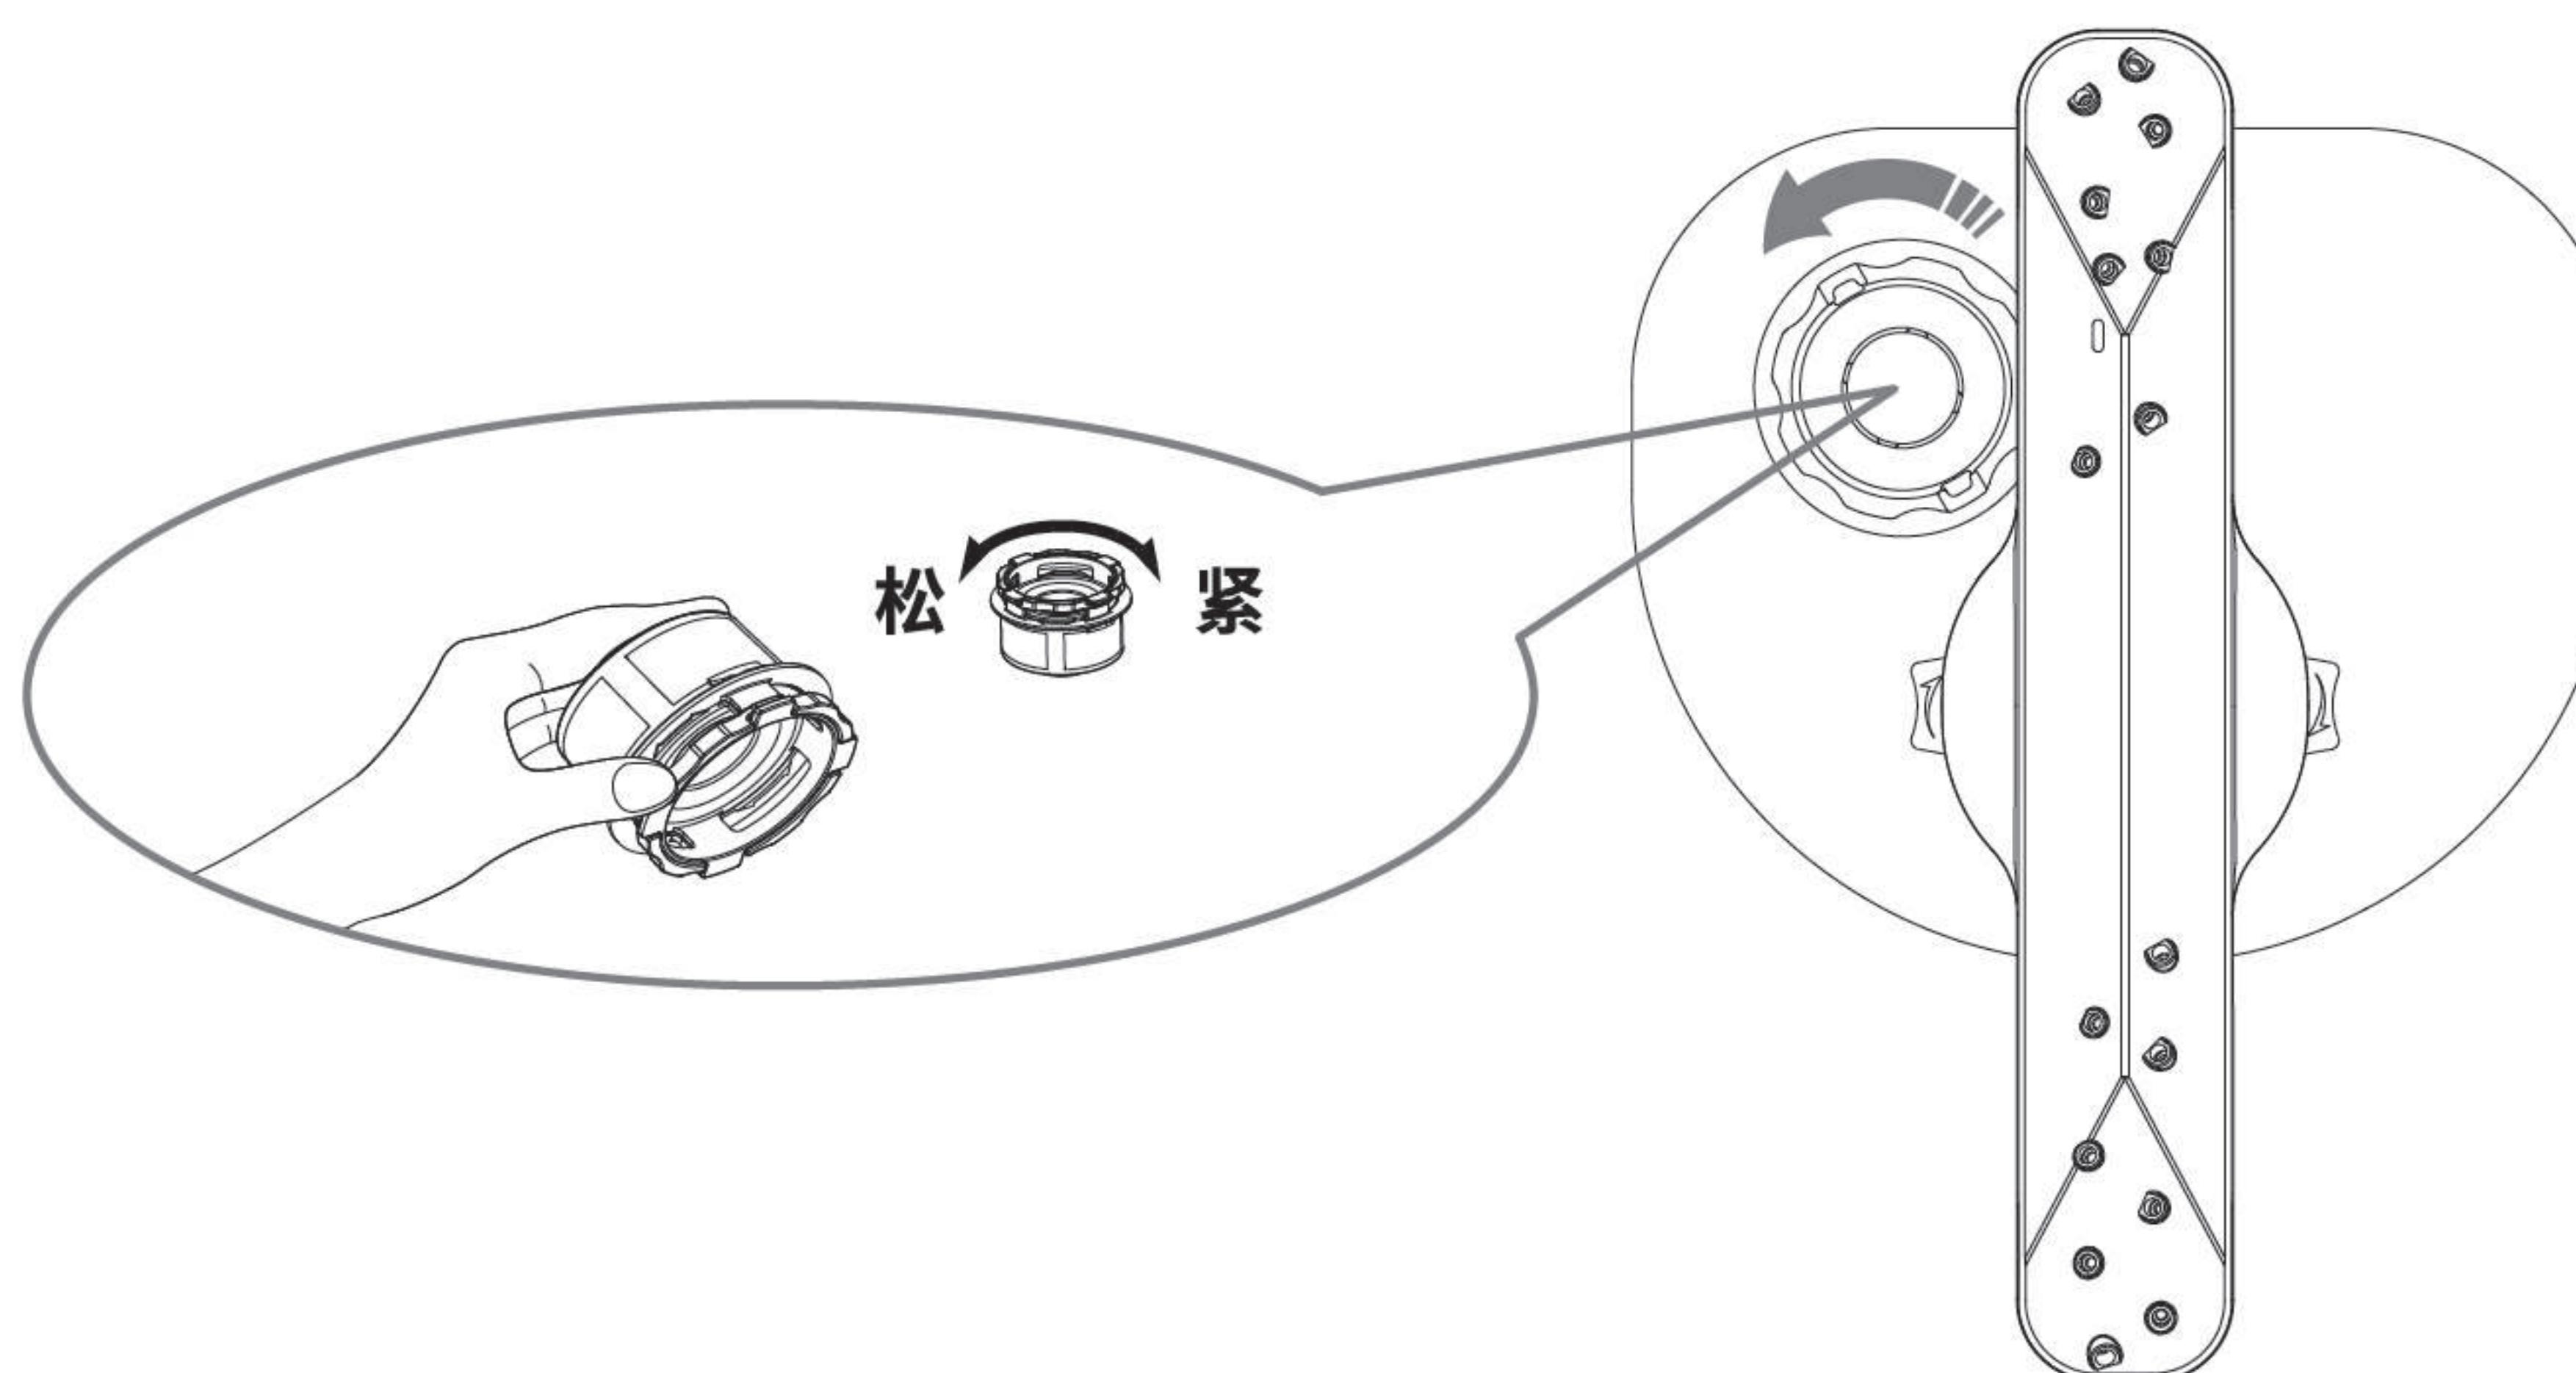

清理保養建議

1. 門封條清潔時不要使用洗滌劑，門封條可能會因為日久而穿孔或者裂開，如出現此情況，請及時更換新的門封條。
2. 面板和門體玻璃的清潔：可以用熱水和少量清洗劑進行手動清洗，用海綿布拭抹，清潔后用軟布抹干。不要用百潔布、金屬絲狀物等摩擦，以免刮傷表面。
3. 不锈鋼槽體清潔：

304不銹鋼槽體日常養護技巧

水槽洗碗機采用304不銹鋼槽體，請注意保護謹防劃傷！

- 如果您是新裝修的用戶，可以在槽體外觀塗一層油，避免裝修過程中的金屬碎屑產生浮銹。此外，假如長期不用水槽洗碗機的話，也可用一層油塗刷在槽體上，以保護槽體。
- 經常清洗槽體，采用中性的潔淨劑，并用清水完全清潔干淨。清潔過程要輕柔，避免用鋼刷或粗糙的刷子，洗淨后用海綿或抹布擦干。
- 不要把檸檬、醬汁、泡菜、芥末或其餘富含鹽分的、或帶侵蝕性的食物長時間置于槽體內及面板上，以防止其腐蝕槽體。
- 盡量避免槽體與強力漂白粉、家用化學品和肥皂長期的接觸。
- 盡量避免刀叉、炊具等尖銳堅硬的器皿撞擊水槽，以防止刮花、劃傷或碰凹槽體外觀。
- 不要把低碳鋼或鑄鐵炊具長期擺放于槽體中，也不要將鋼絲球、橡膠洗碗片，濕潤的洗碗海綿或其餘清潔墊遺置于槽體中，避免長此以往形成“浮銹”、“霉斑”等。
- 若槽體出現“浮銹”、“霉斑”等，可用五潔粉或牙膏塗在銹迹和斑點處，用抹布擦洗干淨即可，不要運用百潔絲、打磨片或打磨材料來清潔槽體。

4. 噴淋臂和渣籃逆時針方向旋轉即可取出，可以用清水進行清洗。
5. 清洗后請不要讓控制面板上有積水，會影響正常使用。
6. 每次清洗后，渣籃裏的食物殘渣要及時清理，否則會影響下次清洗效果，并產生異味。
7. 若發現功能槽有結垢現象（如槽體、發熱盤、碗架等表面發白等），請使用洗機片或少量檸檬酸鈉對槽體進行清洗。

常見故障的識別與處理


如果您在使用中發現異常狀況，請停止使用，拔去電源插頭，檢查以下內容：

故障現象	可能原因	檢修方法
有異響	噴淋臂沒有安裝到位	重新拆裝噴淋臂
	餐具沒有按指定要求放置，導致餐具碰撞	檢查餐具擺放是否符合標準要求
顯示屏不亮，按鍵無反應	未接通電源	檢查電源插頭是否插好
功能槽無法排水	排水閥為關閉狀態	請長按電源鍵開機並於5秒內關機
有異味	/	請按日常清理步驟進行維護保養
門無法打開	使用過程中突然斷電	下拉門鎖拉繩手動解鎖後，可用工具打開門體

上述故障排除後，仍不能正常工作，請致電方太幸福服務熱線。


部件名稱圖

SD2F-P6

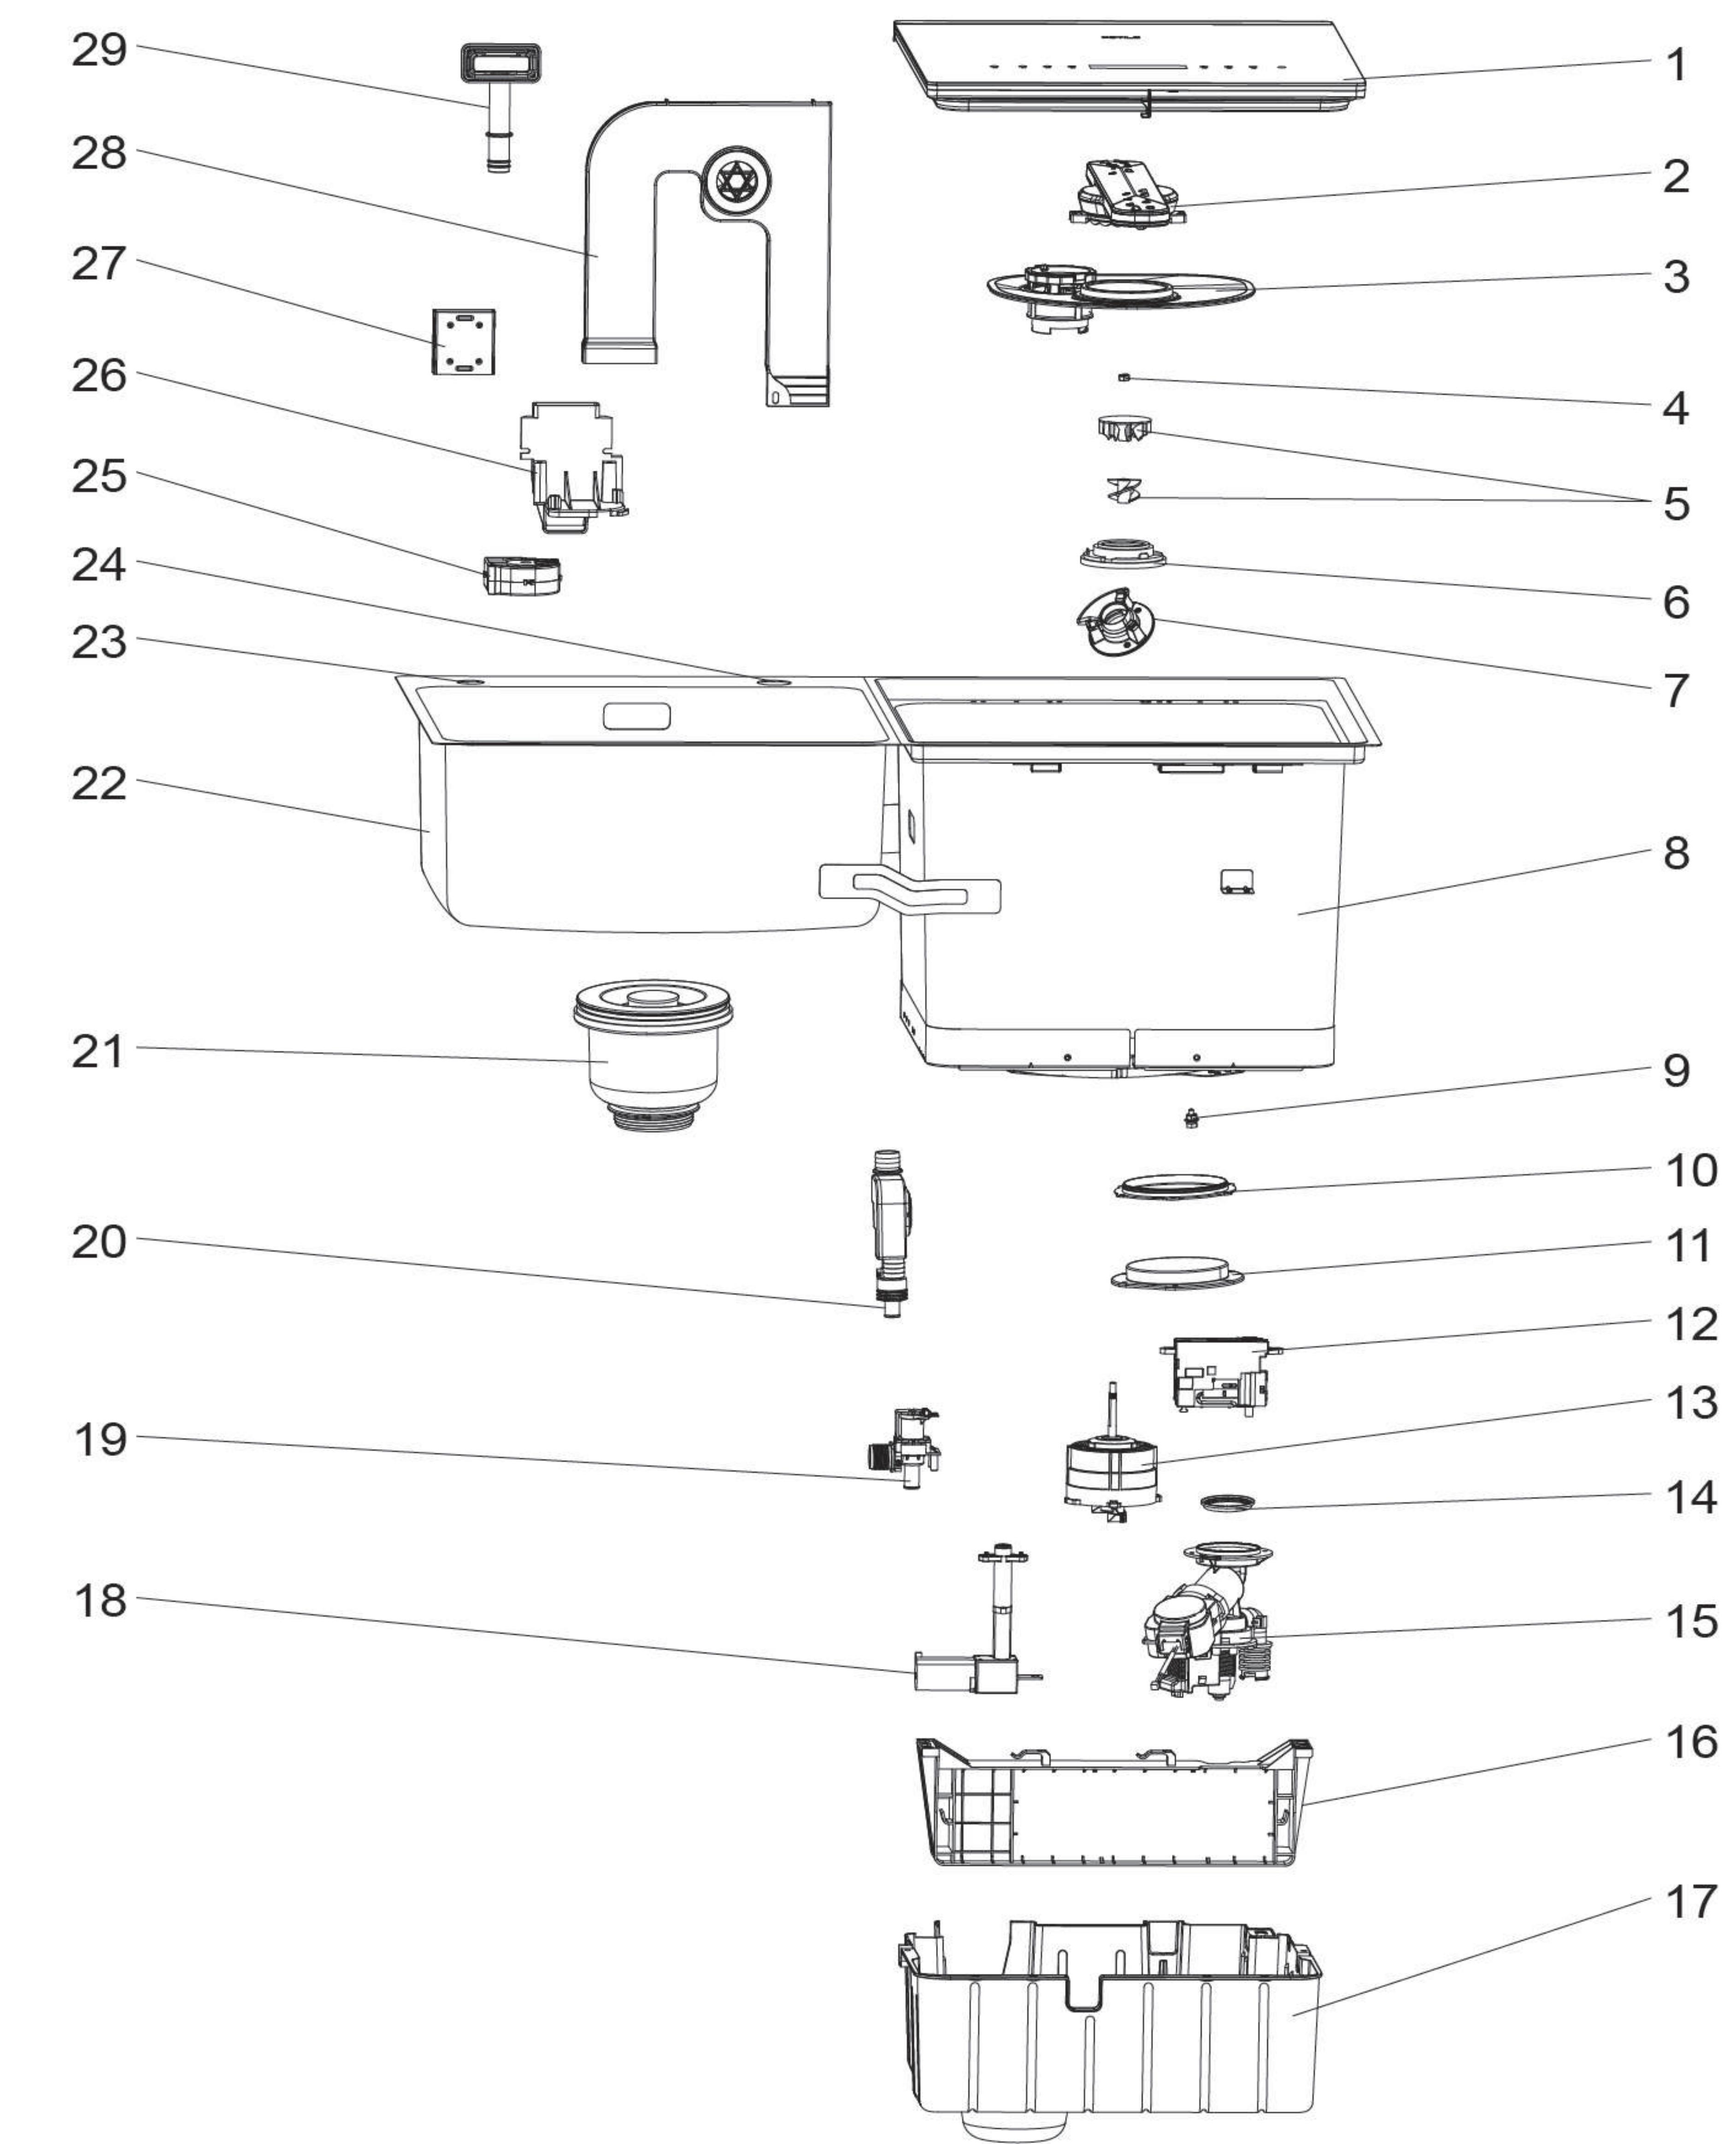

1. 門體	2. 噴淋臂	3. 過濾網板	4. 葉片鎖緊螺母
5. 葉輪（上、下）	6. 電機上蓋	7. 導流座	8. 功能槽槽體
9. 溫度傳感器	10. 加熱盤密封圈	11. 加熱盤	12. 門鎖
13. 電機	14. 牽引閥密封圈	15. 閥泵一體組件	16. 電器盒
17. 底蓋	18. 頂門電機	19. 進水閥	20. 功能槽溢水組件
21. 下水器	22. 水槽槽體	23. 皂液器安裝孔	24. 水龍頭安裝孔
25. 風扇	26. 風扇固定座	27. PTC組件	28. 進氣座組件
29. 水槽溢水組件			

非正常和故障代碼

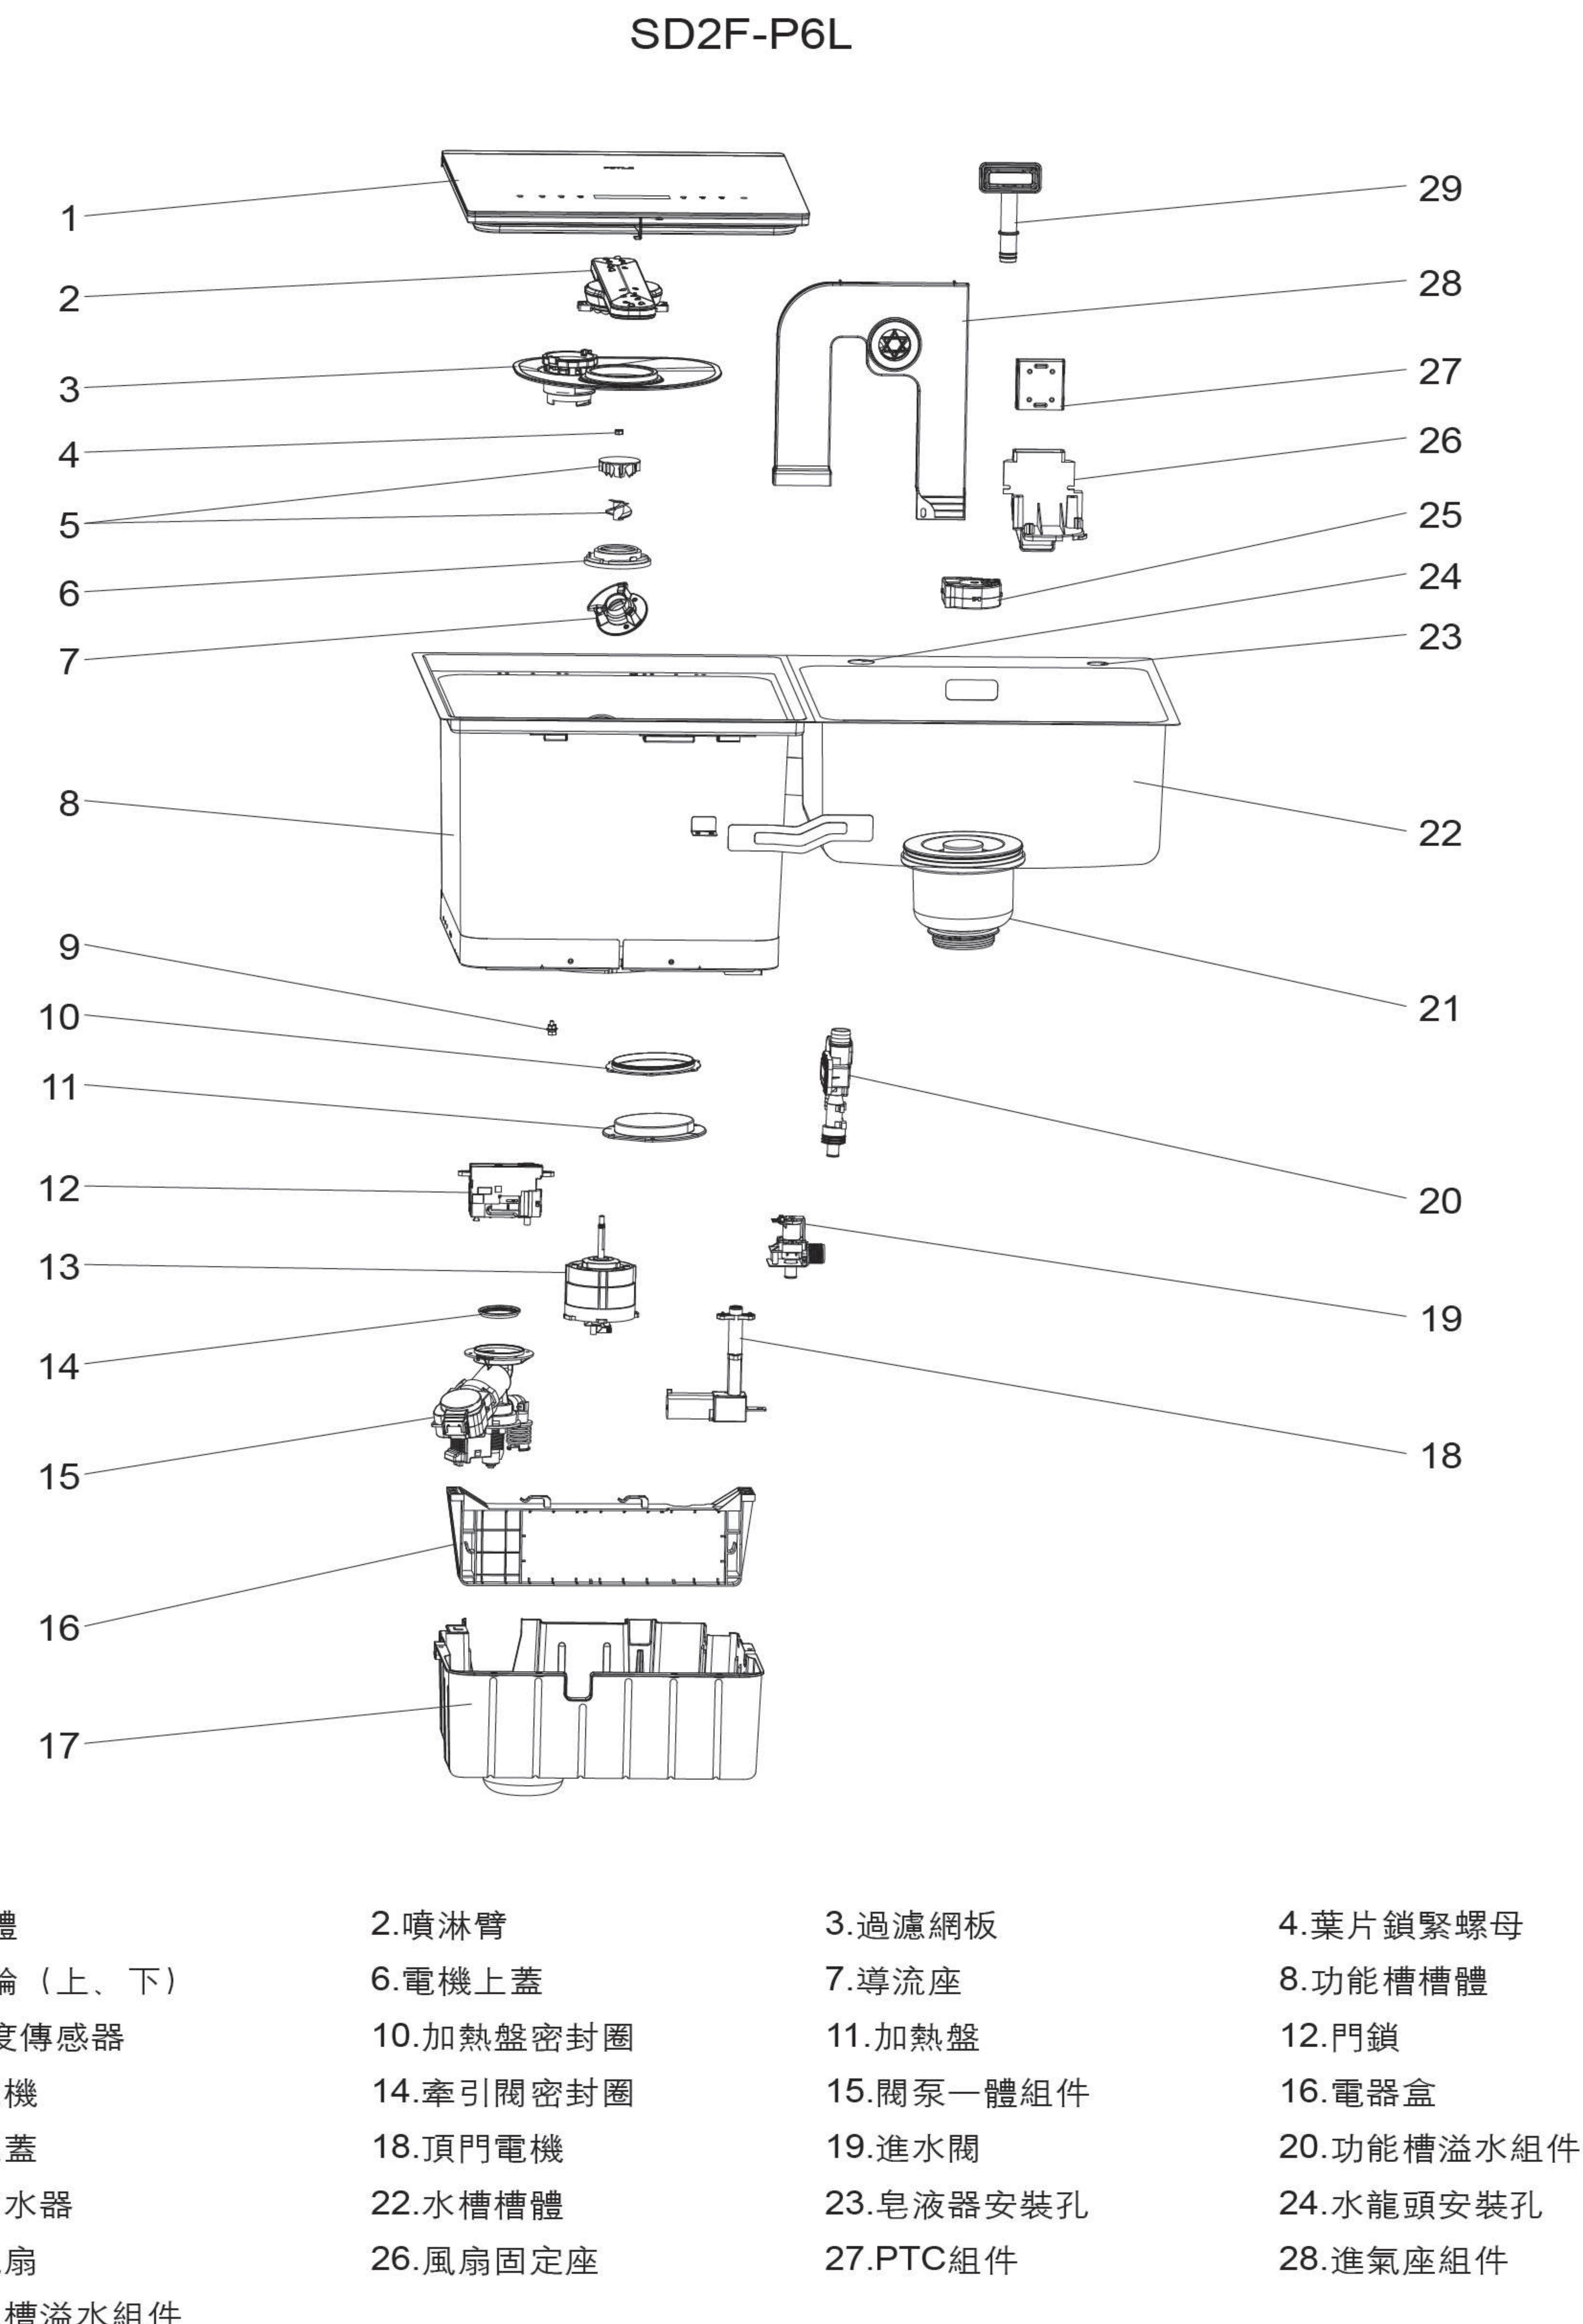

顯示代碼	故障顯示	可能原因	解決措施
E1	門未關閉或 門鎖故障	1. 門未關到位 2. 門鎖故障	1. 關閉門，確保門關緊后按 壓開始/暫停鍵 2. 請專業維修人員上門維修
E2	水流量小	1. 客戶家裏水源的水閥未開 2. 客戶家裏水流量太小 3. 進水閥壞，沒打開 4. 進水閥處濾網堵塞 5. 進水相關零部件損壞	1. 檢查水閥，確保水閥處于 打開狀態 2. 檢查是否停水或水壓過小 3. 請專業維修人員上門維修
E5	溫度傳感器短路 或開路	溫度傳感器異常	請專業維修人員上門維修
E6	頂門電機故障 或者未裝	1. 沒裝頂門電機 2. 頂門電機壞	請專業維修人員上門維修
E8	干燒保護	1. 漏水 2. 門密封不好	1. 關閉門，確保門關緊 2. 檢查餐具是否擺放正確， 確保無餐具碗口朝上放置 3. 請專業維修人員上門維修
E0	電機通信故障	電機故障	請專業維修人員上門維修
EC	通信異常	通信線斷開	請專業維修人員上門維修
F2	漏電保護	1. 零火線接反 2. 接地不良	請立即切斷電源、水源并 請專業維修人員上門維修
F3	溢水報警	進水閥壞	請專業維修人員上門維修
F4	高溫報警	水溫超過90°C	請專業維修人員上門維修
F5	電機過壓欠壓	電壓過高或過低	請專業維修人員上門維修
F6	電機缺相	線圈內部短路或開路	請專業維修人員上門維修
F7	電機軟件過流 電機硬件過流 電機堵轉	電機電流超標	請專業維修人員上門維修

客戶服務

以下情況不在保修條款覆蓋範圍內：

- 用戶自行運輸、安裝或維護不當。
- 因產品被濫用、誤用、修改或用于其他目的或商業用途，導致產品故障。
- 未按照說明書要求進行清潔保養，導致損傷。
- 事故、火灾、洪水或不可抗力等因素造成的產品損壞。
- 超出正常使用條件，強行使用本產品造成的故障和損傷，如電壓不符合。
- 購買憑證和產品的保修註冊信息不符。
- 方太水槽洗碗機採用手工打磨工藝，不銹鋼表面出現部分不平整屬於正常現象，不屬於保修範圍。
- 未按照規定由澳洲認證管道工安裝的。

本保修範圍覆蓋在澳洲購買產品的原始購買者以及任何繼任所有者。

如產品位於方太公司授權服務不可到達之處，則需要由您負責支付相應交通費用，或者您可能需將產品帶至授權服務處，進行維修保養。

- 如果您已購買方太水槽洗碗機產品，在溝通時告知該產品型號、序列號，可以幫助我們更好地為您服務。

您可以在圖示A位置找到以上信息：

