

H101 series

휴롬프라임

Unique Selling Proposition
SLOW JUICING, SIMPLIFIED

HUROM





Best performance focused on the essence of juicing,
Make it simple but significant



HUROM

Which type of Juice you want to drink?



HUROM Magic

New Advanced Squeezing Technology



HUROM

Advanced Squeezing Technology

The Newest Squeezing Solution

Make juices using the specially designed gaps from the combination of strainers (Inner Strainer & Juice Strainer)

High squeezing efficiency unaffected, easier to assemble.



Limited for orange, lemon



Conventional Fine Strainer + Spinning Brush



Strainer set: Inner Strainer + Juice Strainer

Easy Wash

New Strainer

Quick and easy wash and prevents pulp build-up between the strainer gaps

Since pulp residues don't get stuck between the strainers' long gaps, after separating the two strainers, simply rinse them under running water.

It takes just 5 seconds to complete washing!

HUROM



Easy Wash

Refined Chamber Interior


Simpler chamber interior becomes easy to clean by reducing pulp in corners.

The screw’s silicone packing prevents the inflow and build up of pulp into the screw and at the bottom of the chamber.

The uncomplicated chamber interior & screw packing minimizes the build up of pulp . It is easy to wash by just rinsing.



[기존]
Old Chamber

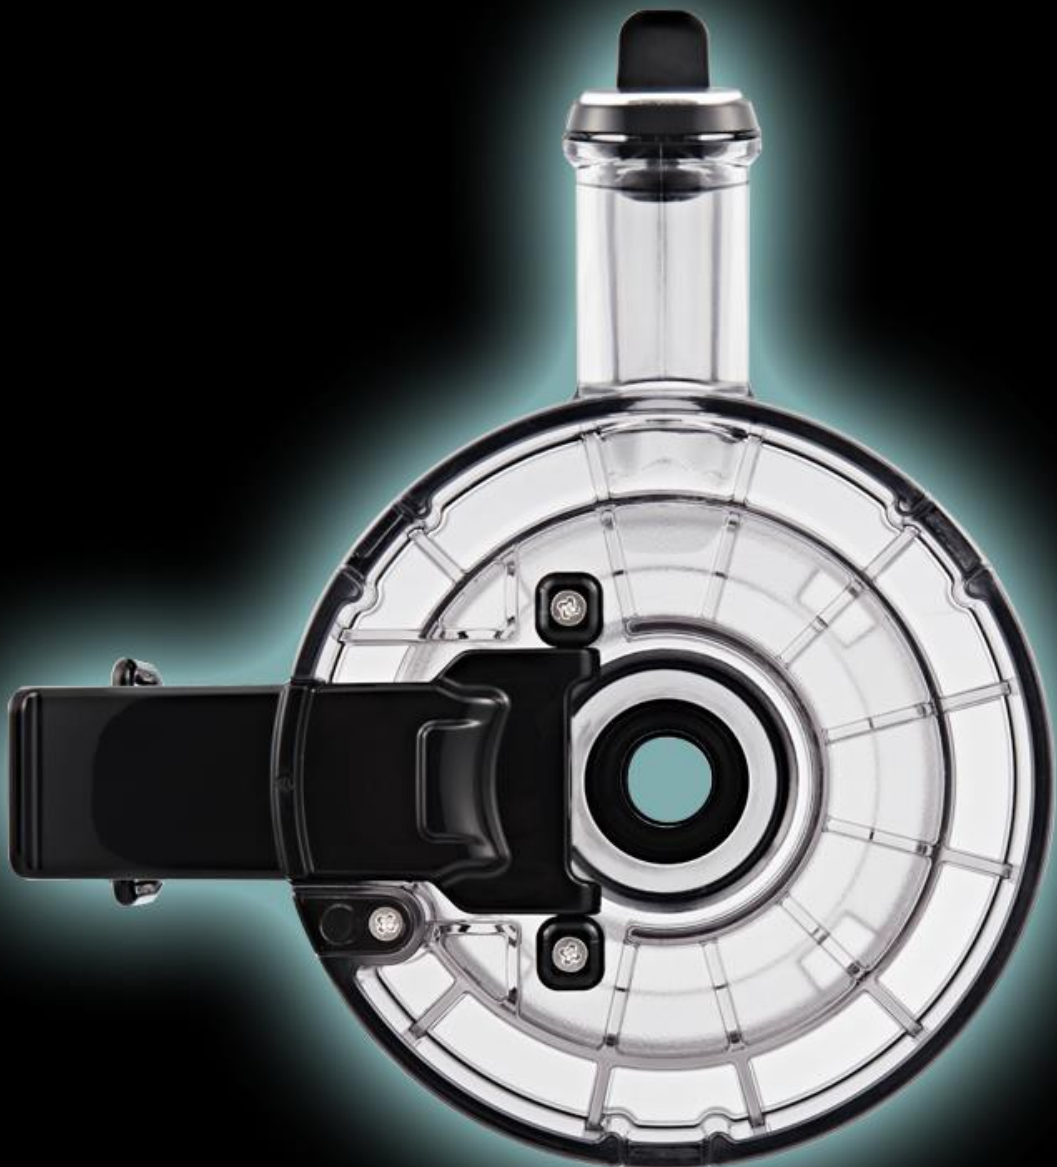

[휴롬프라임]
New Chamber


Easy Wash

Refined Chamber Interior

Simpler chamber interior becomes easy to clean by reducing pulp in corners.

The screw's silicone packing prevents the inflow and build up of pulp into the screw and at the bottom of the chamber.

The uncomplicated chamber interior & screw packing minimizes the build up of pulp . It is easy to wash by just rinsing.

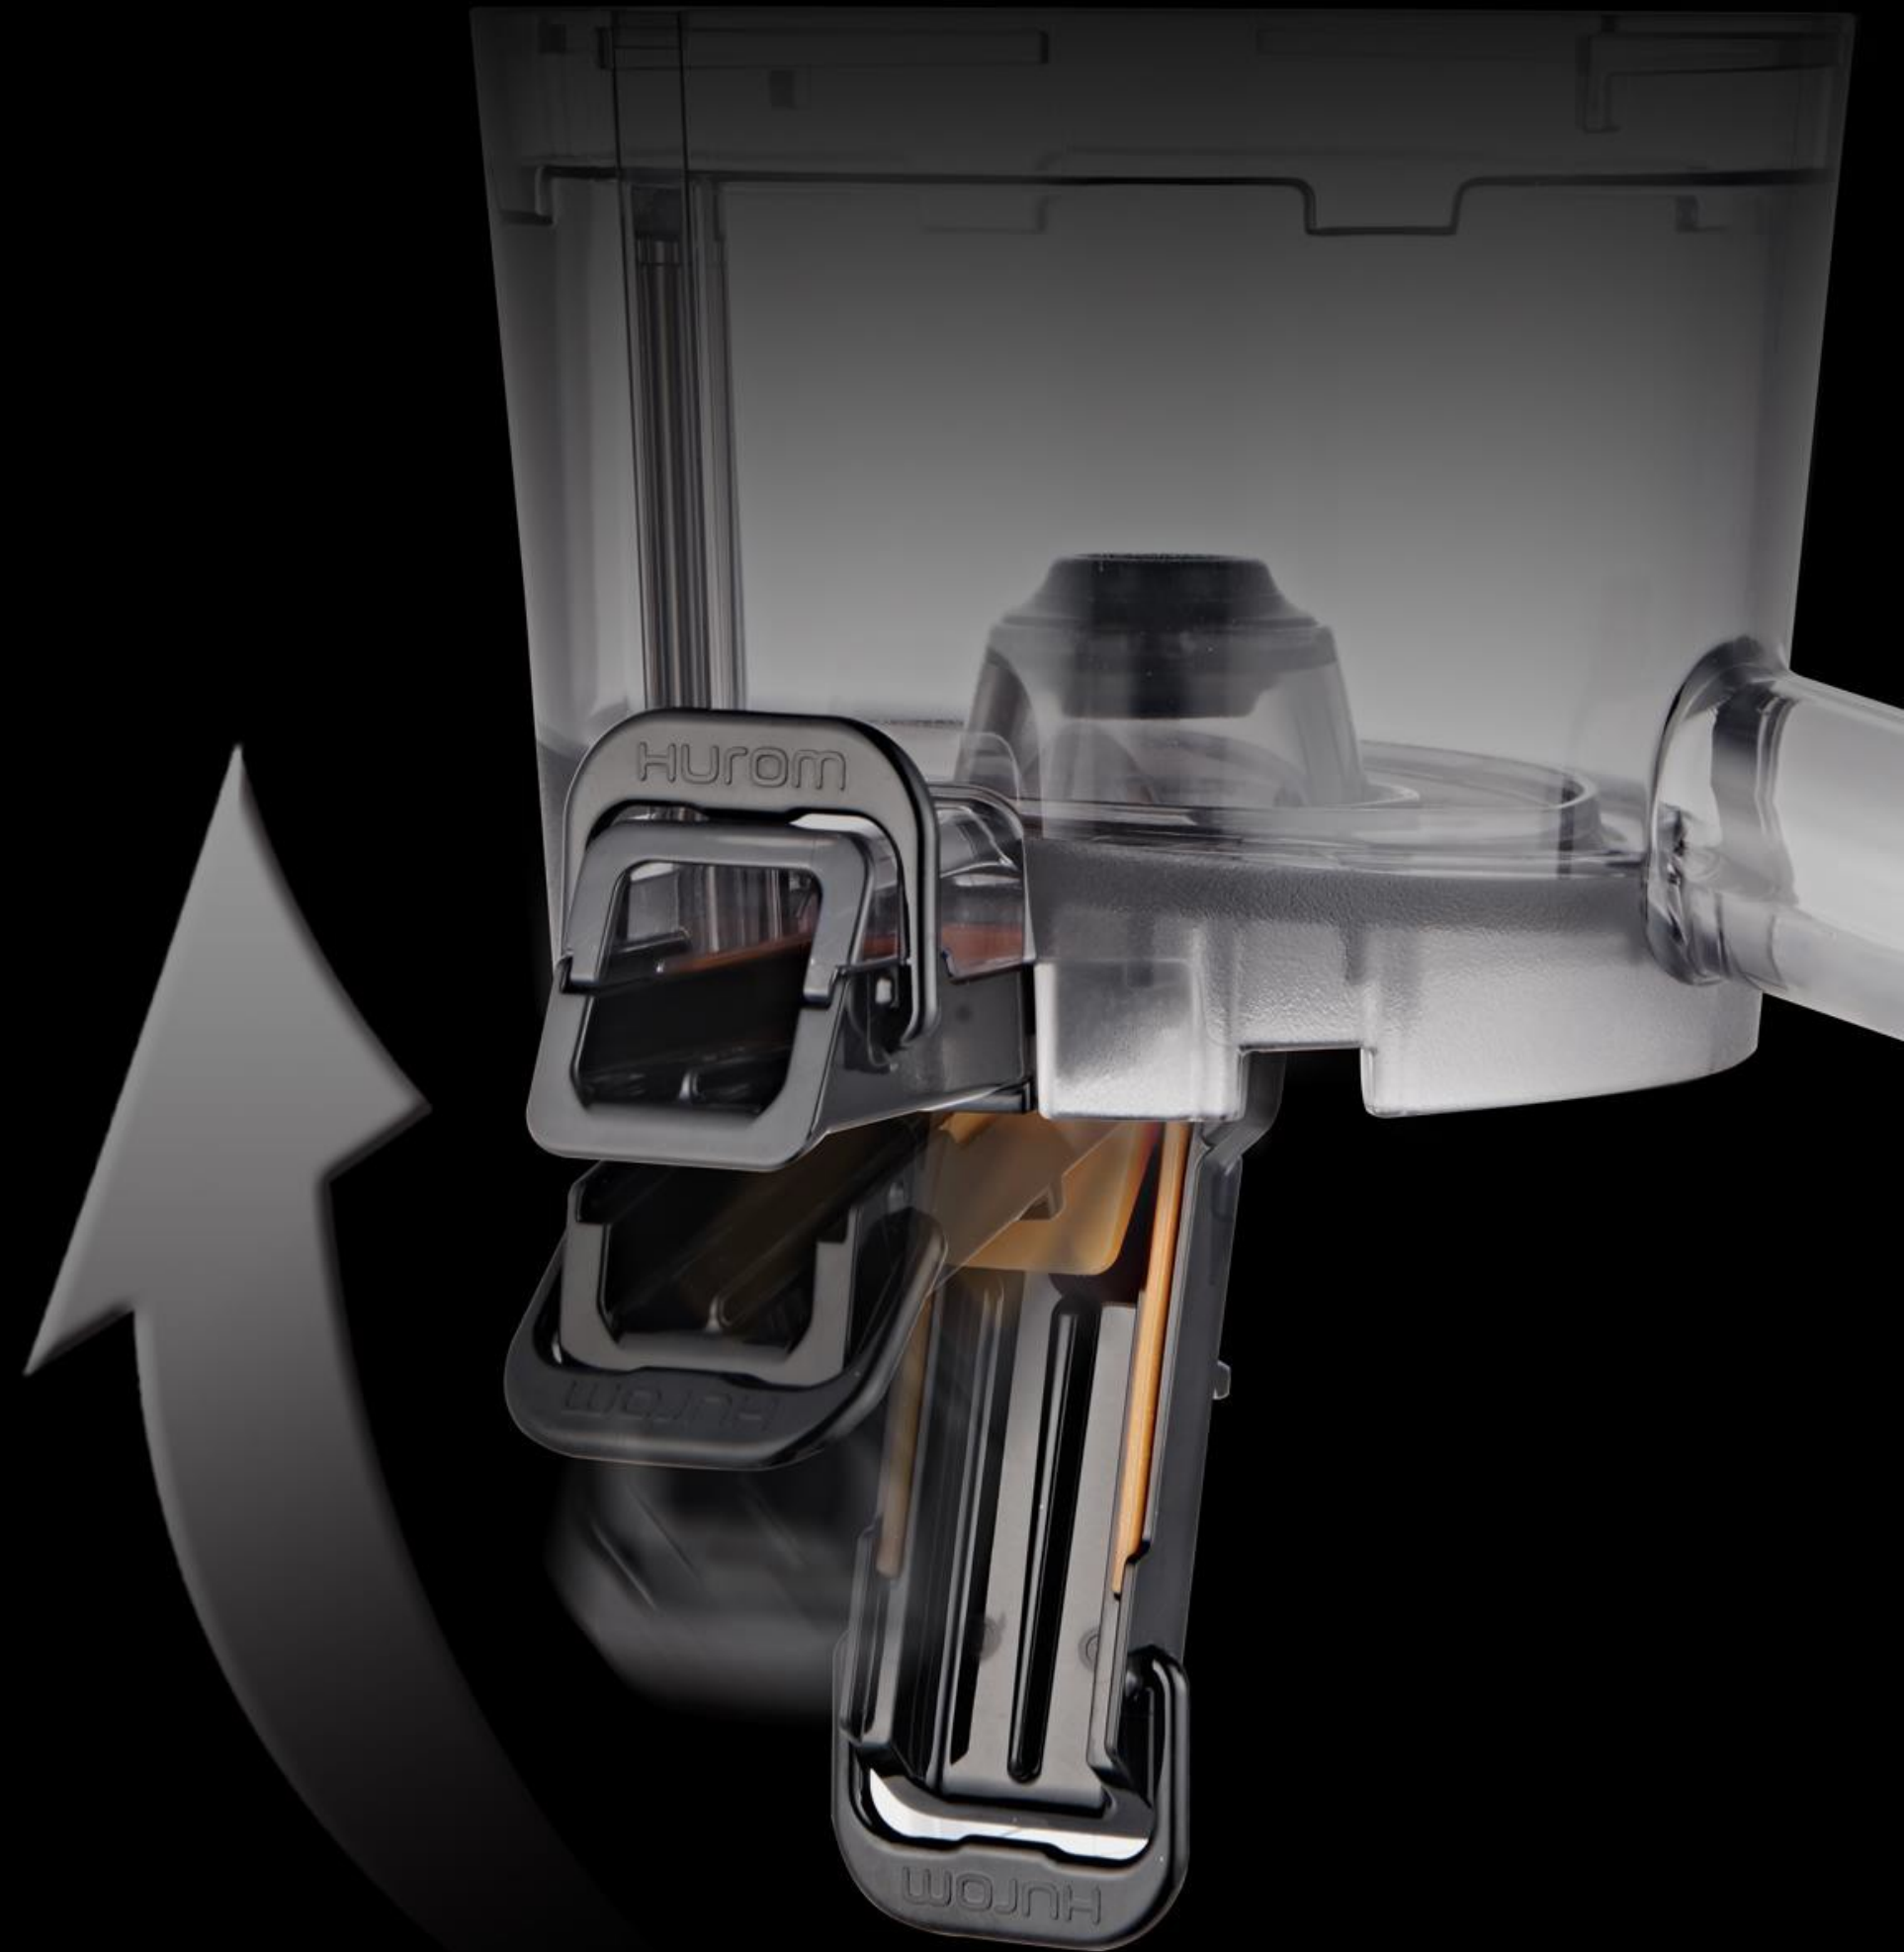

HUROM

Easy Assembly

One-step Intuitive Assembly

Precise assembly using the square motor shaft

Assembling the main body and the chamber is clear-cut as they have an easy-to-fit form.

The square motor shaft helps connect the chamber to the main body without hassle due to its quadrangle shape.




[Movable square motor shaft]

Easy Assembly

One-touch Guide Grooves

Guide grooves at the top, bottom and middle of the chamber allow you to simply align the tabs on the juicing strainer for quick and easy assembly.


Chamber assembly (including strainers and screw) can now be assembled at once, just by matching the guide grooves.

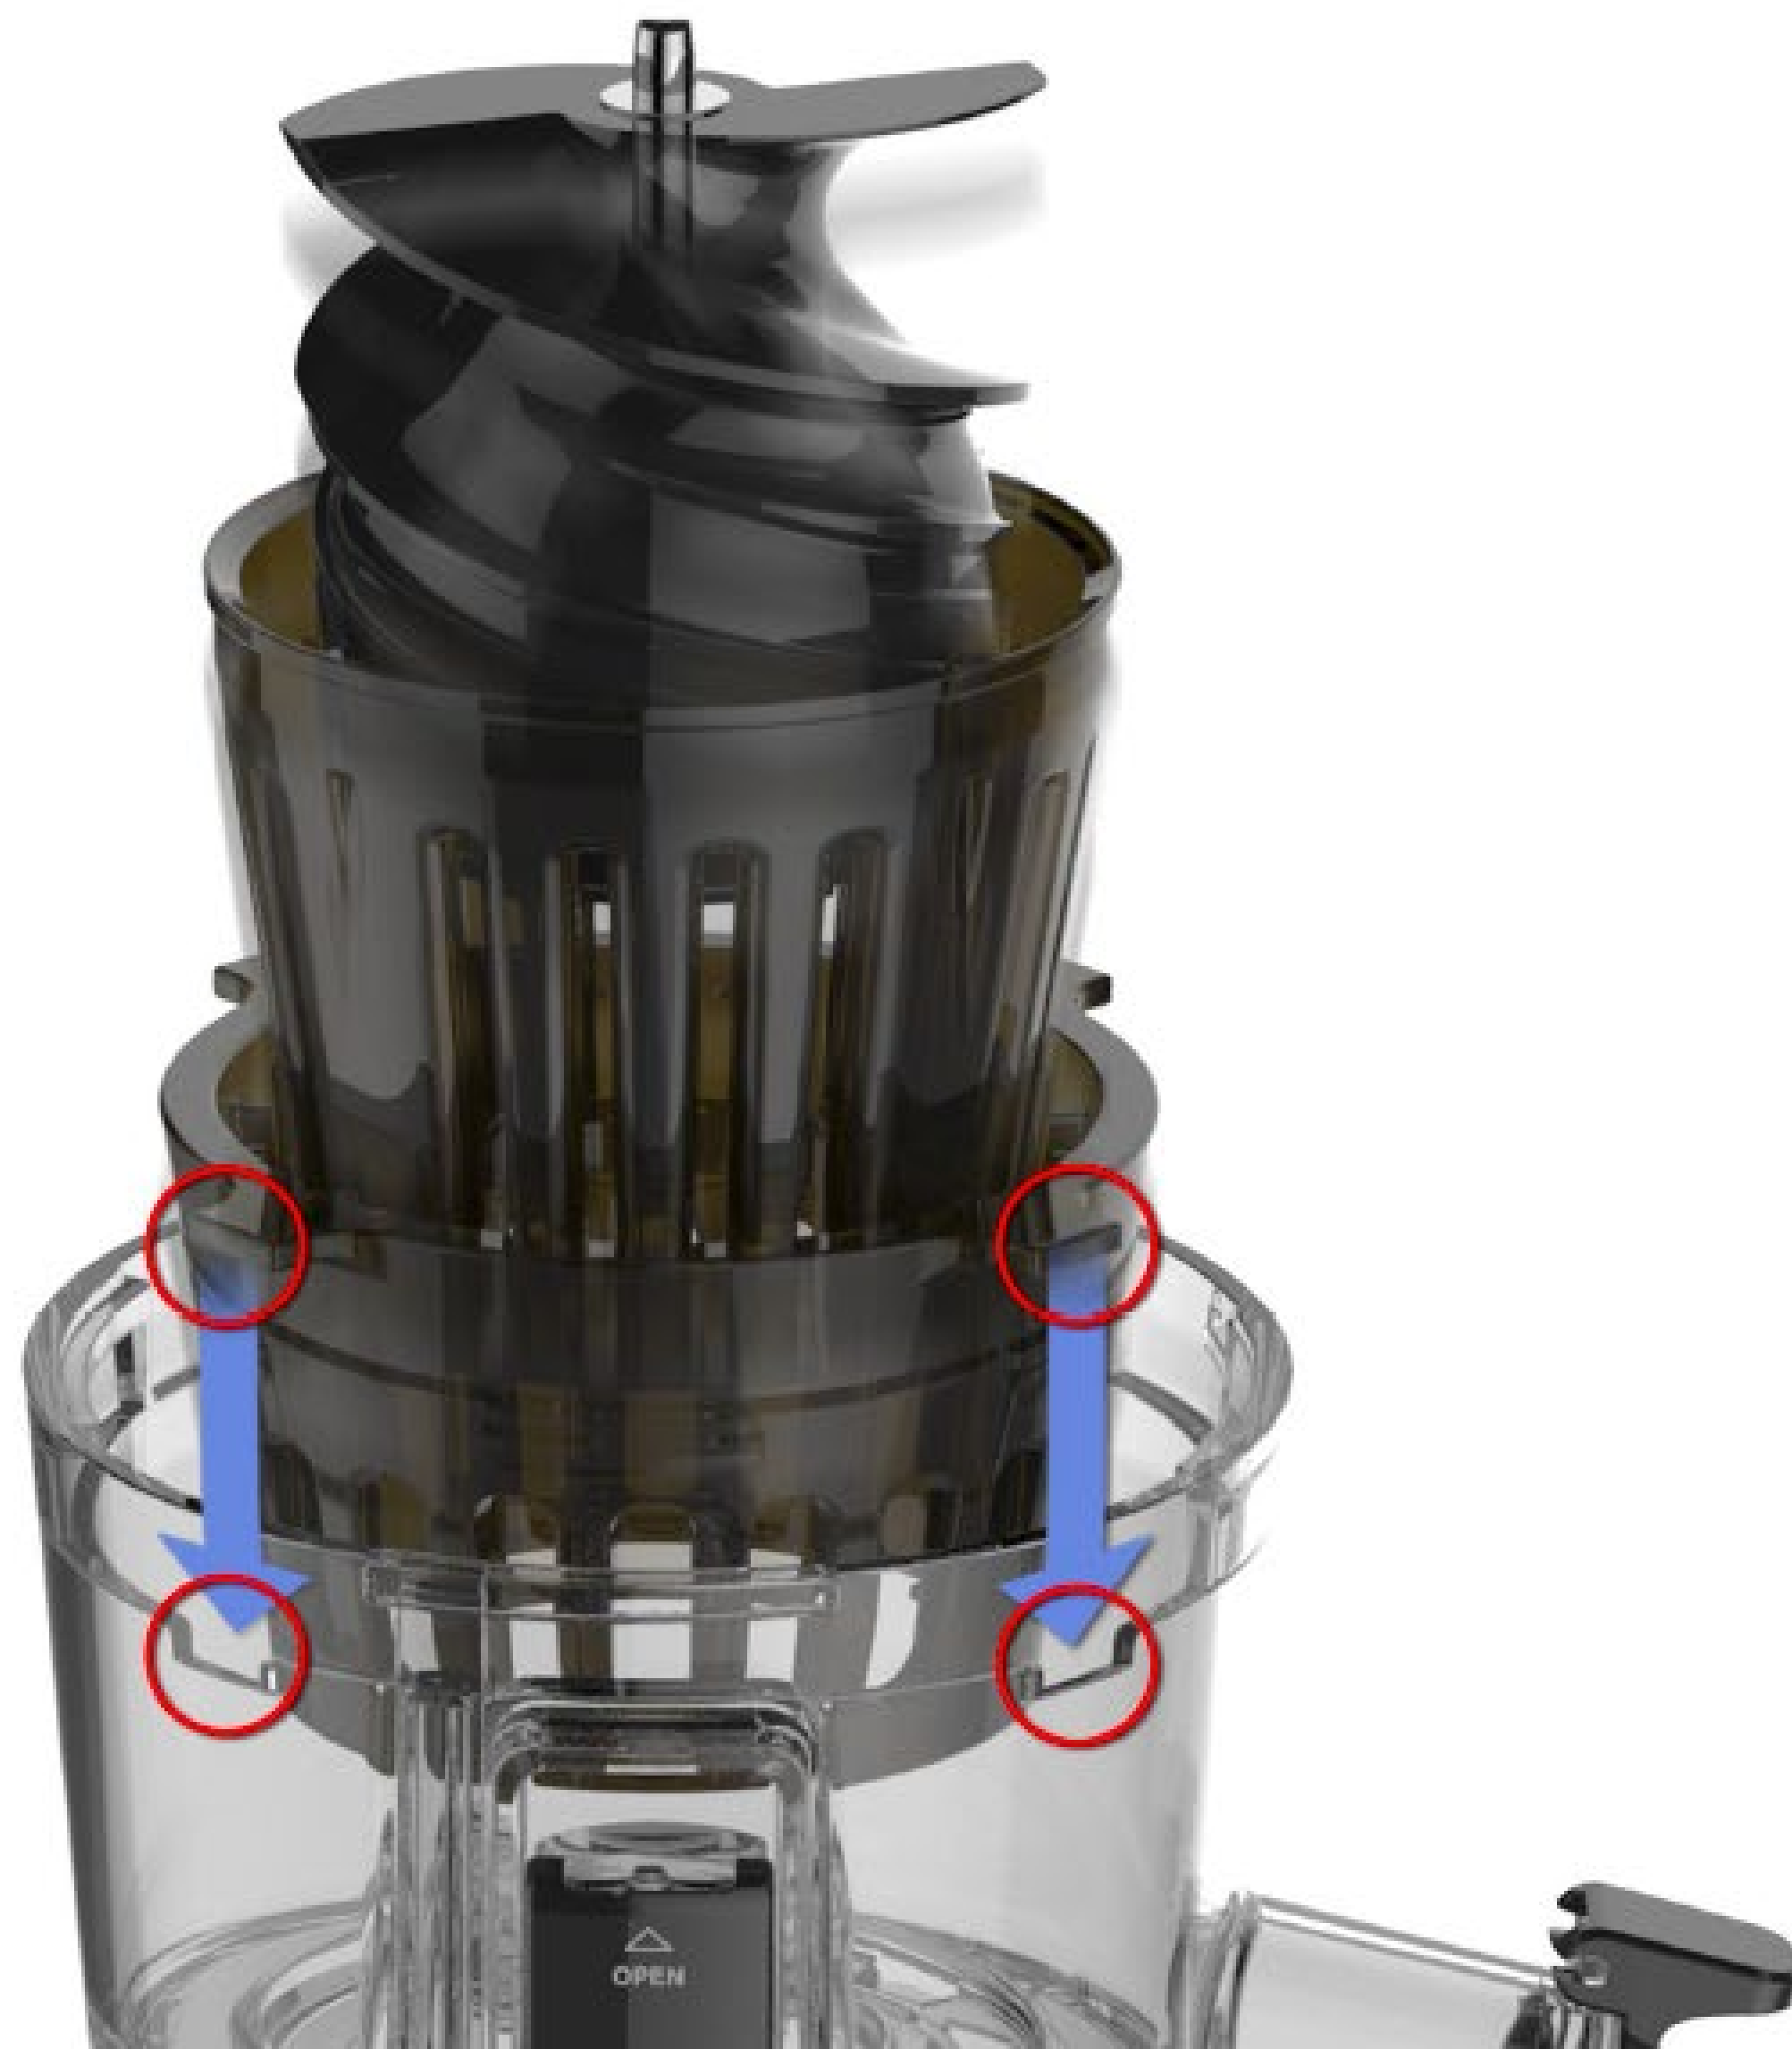

Multi Usage form HUROM Slow Juicer



Fine Strainer

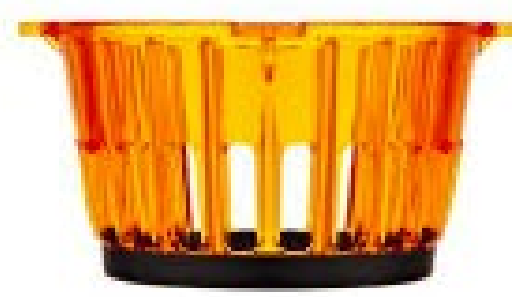

Standard Strainer



Ice-cream Strainer

Improved Dual Hopper

The increased width and straight angle of the Dual Hopper makes it easier and more convenient to put in smaller ingredients such as berries and cherry tomatoes.



7-degree Tilted Chamber

A 7-degree tilt at the bottom of the chamber provides a completely hands-free pour of every drop of juice. The juice leaves the chamber completely, without manually tilting the juicer.

Hurom



Happy Juicing with Healthy Life

HUROM



Specification

Dimensions	213(W) x 223(D) x 454(H) mm
Weight	5,4 Kg
Chamber	Inno-Chamber
Capacity	350 ml
Hopper type	Dual hopper (160 Ø)
Lever type	Lift-lever
Speed	43 RPM
Screw	Dual wing
Juice cap	Square
Strainers	Inner-Strainer / Juice-Strainer / Smoothie-Strainer
Motor	A/C, 90 Ø
Voltage / Frequency	100~230 V / 50~60 Hz
Power consumption	150 W
Standard usage time	Less than 30min continuously
Cord length	1,4 M
Safety sensor type	Micro sensor
Components	Base, Chamber, Juice cup, Pulp cup, Cleaning brush

- Materials
- Hopper- ABS
 - Chamber- Tritan
 - Base- ABS / SUS304 (Juice tray)
 - Screw- PEI (Ultem)
 - Inner- Strainer/PEI (Ultem)
 - Juice- Strainer/MMA (Acryl)
 - Pusher- ABS
 - Cleaning brush- ABS

Hurom

